

Drawing formats and templates

Creotm Parametric Education Advanced Edition





department for children, schools and families rawing formats and templates



Written by These materials are © 2010, John Forth

Amended Dec2008 for Creotm Parametric

All rights reserved under copyright laws of the United Kingdom, United States and other countries. Amended 2010 for Creotm Parametric

PTC, the PTC Logo, **Pro**|ENGINEER, **Pro**|DESKTOP, Wildfire, Windchill, and all PTC product names and logos are trademarks or registered trademarks of PTC and/or its subsidiaries in the United States and in other countries.

Conditions of useCopying and use of these materials is authorised
only in the schools colleges and universities of
teachers who are authorised to teach Creotm
Parametric in the classroom.

All other use is prohibited unless written permission is obtained from the copyright holder.

Acknowledgements

Manufacturing -

Proofing and comments -

Trialling materials -

Feedback In order to ensure these materials are of the highest quality, users are asked to report errors to the author.

<u>JohnF@dteconsultancv.plus.com</u> Suggestions for improvements and other activities would also be very welcome.

C1-SE-L1-J.E.F.-10

Contents

Drawing formats and templates	1
Creotm Parametric Schools and Schools Advanced Edition	1
Contents	3
Overview.	5
To assign a dtl file to the config.pro file	7
About Drawings	9
Detailed Drawings Module	10
Create a New Drawing	11
Adding Dimensions	14
Adding new sheets	19
Pictorial Views	20
Creating a sectional view	21
Sectional View Created in the Drawing file	24
Enlarged Details	25
Offset or Stepped Section	26
Modifying Cross-Hatching display	
Exploded Views	32
Other Views	32
To create a customised exploded view	
More with Annotation.	
To Change the Format Sheet	37
To Create your own Format	
To add a Table	
To Add a Logo	46


To Create a Template.	.49
To Add a Bill of Materials (BOM) Table.	.51
Creating a Bill of Materials for a blank format.	.54
Creating the BOM for an assembly	.54
To create a new Repeat Regions Table	.58
Appendix 1. Setting up and editing a Drawing Options File.	.63
Appendix 2 System Parameters for Drawings	.65
Appendix 3: To Control the Format of the Date	.69
Appendix 4. To create a multiple parts drawing	.70

Overview

The creation of an Orthographic set of drawings in Creotm Parametric is very simple once you get the hang of it but can appear daunting when you first approach the procedure.


The first thing you have to keep in mind is that what you are creating is a particular way of looking at a three dimensional object.

In the diagram below you can see the relationship between various aspects of the outputs available from Creotm Parametric. The various part models (*.prt) can be assembled to form complex assemblies (*.asm). Both parts and assemblies can be shown as drawings (*.drw). Whilst not part of this tutorial, the models can also be shown as rendered images; simulations and animations; and behavioural models using the Finite Element Analysis (FEA) part of the Schools Advanced Edition.

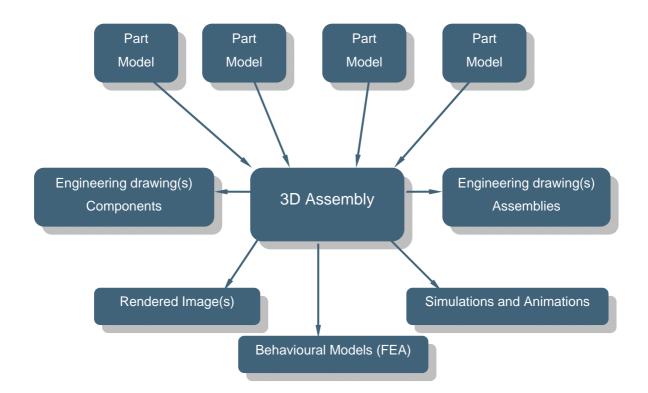

For Orthographic drawings, often called Detail Drawings, Creotm Parametric merely represents this 3D object using whatever standard you have chosen.

The diagram below summarises the relationship between the 3D model or assembly; the engineering drawings and the various ways that the program creates the drawings and sets the agreed standards for that particular set of orthographic drawings.

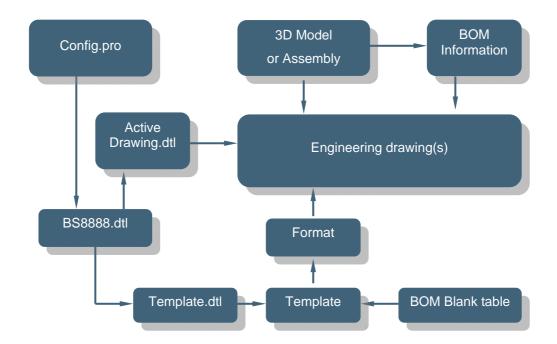

Firstly, make sure you have the correct drawing setup file (*.dtl) referenced in the config.pro file. The standard 'look' of orthographic drawings will vary depending on the part of the world you are in and which particular set of standards you need to use to communicate your ideas with others. In the United Kingdom the British Standards Institute set the agreed standard, the current one for schools being BS8888. In other areas the ISO (International Organization for Standardization) or ANSI (American National Standards Institute) standards apply; if you work in these areas you will need to set the Configuration File to suit your standard.

In Creotm Parametric there are a number of batch files (*.bat) in the 'pro_standards' folder of the program. Activating the appropriate batch file will set the config.pro file to the correct standard for your needs.

To create a drawing you will also need a Format, this file is the 'look' of your drawings. The Format can also be overlain with a Template that positions the views and creates the text height, line type etc. This is controlled by the *.dtl file which could be the default, in this case the bs8888.dtl file, or a specially created one called the Active Drawing File which will only affect the drawing to which it is attached. If a Bill of Materials (BOM) is required, a 'bom' table can be inserted into the Template that can extract the necessary information from the Bill of Materials contained within the assembly file.

- A drawing format file (*.dtl) can be tailored to a specific set of drawings and saved under a name, e.g. Oil_Box.dtl in which special changes are made to suit the needs of this set of drawing. This is the Active Drawing file.
- If a Template is used its drawing format file (*.dtl) file will determine the outcomes unless overwritten by an Active Drawing file.
- If no template is used then the Global dtl file, e.g. bs8888.dtl, will be used.

	-				
🔾 🗢 📕 « Program F	iles ProENGINEER Schools Edition pro_star	ndards 🕨	✓ Search p	pro_standards	
Organize 👻 Include in	library 🔻 Share with 💌 Burn New f	older			- 🔟 🔞
🔆 Favorites	Name	Date modified	Type S	ize	
🧾 Desktop	config_files	03/06/2010 14:50	File folder		
\rm Downloads	landards	27/04/2010 16:31	File folder		
🕮 Recent Places	\mu formats	10/06/2010 12:40	File folder		
	\mu graphic-library	27/04/2010 16:31	File folder		
🥽 Libraries	line_sizes	27/04/2010 16:31	File folder		
Documents	퉬 material_database	11/05/2010 12:18	File folder		
J Music	퉬 part_libraries	27/04/2010 16:31	File folder		
Pictures	퉬 rendering	27/04/2010 16:31	File folder		
🛃 Videos	sketcher_palette	27/04/2010 16:31	File folder		
	퉬 symbols	27/04/2010 16:31	File folder		
🍓 Homegroup	퉬 templates	23/05/2010 11:05	File folder		
	퉬 templates_asme_in	27/04/2010 16:31	File folder		
🖳 Computer	퉬 templates_asme_mm	27/04/2010 16:31	File folder		
🏜 Preload (C:)	퉬 templates_bs_mm	27/04/2010 16:31	File folder		
🖵 Share (\\LS-CHL-V2	templates_CUSTOM_UNIT-LENGTH	27/04/2010 16:31	File folder		
	퉬 templates_iso_mm	27/04/2010 16:31	File folder		
👊 Network	templates_iso_mm_na	27/04/2010 16:31	File folder		
	퉬 trail_files	27/04/2010 16:31	File folder		
	🚳 configure_for_asme_inlbs.bat	23/05/2010 11:00	Windows Batch File	1 KB	
	configure_for_asme_mmks.bat	23/05/2010 11:00	Windows Batch File	1 KB	
	Configure_for_bs_mmks.bat	23/05/2010 11:00	Windows Batch File	1 KB	
	configure_for_iso_mmks.bat	23/05/2010 11:00	Windows Batch File	1 KB	
	🚳 configure_for_iso_na_mmks.bat	27/04/2010 16:31	Windows Batch File	1 KB	
	configure_for_STANDARD_UNIT-SYSTEM	23/05/2010 11:00	Windows Batch File	1 KB	
	👜 ReadMe.doc	27/04/2010 16:31	Microsoft Word D	42 KB	
	README.txt	23/05/2010 11:00	Text Document	3 KB	
26 items					
26 items					

To assign a dtl file to the config.pro file

1. Open the creo_standards folder in the C:/Program Files/PTC/ Creo1.0/Common Files/F000. It will look a little like the one above. Read the README.txt file therein (reproduced below)

Dear Creo Users,

The PTC Education Group has provided a number of batch files to help set your default units quickly and easily.

If you choose the "Metric" option during the installation of Creo Parametric, it is installed using the MMKS Unit System and ASME drawing standard.

If you choose the "English" option, Creo is installed using the INLBS Unit System and ASME drawing standard.

You can easily reconfigure your installation to follow a different Unit System and/or Drawing Standard using one of the supplied configuration .bat files as follows:

1) Exit Creo Parametric.

2) Double-click one of the five ".bat" files to configure your Pro/ENGINEER Education installation for a desired

Unit System and Drawing Standard:

configure_for_asme_inlbs.bat - ASME standard drawings with INLBS unit system configure_for_asme_mmks.bat - ASME standard drawings with MMKS unit system configure_for_bs_mmks.bat - BS8888 standard drawings and an MMKS unit system configure_for_iso_mmks.bat - ISO standard drawings and an MMKS unit system (1st Angle Projection & Commas) configure_for_STANDARD_UNIT-SYSTEM.bat - For advanced users only, this can be edited to create your own custom setup. 3) Restart Creo *** Notes: 1) To configure your installation using the supplied .bat files, you must have read/write access to the your Creo loadpoint folder (and subfolders). This folder is typically "PTC". In Windows 7 and Vista, this typically requires you to disable the UAC (User Account Control) and restart your computer. 2) Prior to running a configuration .bat file, you will see drawing templates for BOTH MMKS-ASME (A1,A2,A3,etc) and INLBS-ASME (A,B,C,etc) drawing templates. You should only use the templates that are relevant to your unit systems. 3) The following folders contain drawing standard specific Drawing Templates: templates_asme_in - Inch length unit, ASME standard drawing templates, Sizes A, B, C&D. templates_asme_mm - MM length unit, ASME standard drawing templates, Sizes A1, A2, A3, A4. templates_bs_mm - MM length unit, BS8888 standard drawing templates, Sizes A1, A2, A3, A4. templates iso mm - MM length unit, ISO standard drawing templates, Sizes A1, A2, A3, A4. (1st ANGLE PROJECTION). In my case I have activated the one in bold above 2. **Double Left-Click** the appropriate batch file. 3. Now when you start the program the relevant standard is set. If you want to use the default set of Formats and Templates then this is all you need do to set things up. However if you notice some anomalies in your drawings then you may have to edit the *.dtl file, to do so see Appendix 1.

howing:		Sort:		
Active Drawing	🔜 🖻	By Category		~
	Value	Default	Status	Description
Active Drawing				
drawing_text_height	2.500000	0.156250	۲	Sets default tex
text_thickness	0.350000	0.000000	۲	Sets default tex
text_width_factor	0.850000	0.800000	۲	Sets default rati
- These options control views and their annotations				
broken_view_offset	5.000000	1.000000	۲	Sets the offset (
	yes *	yes	۲	Makes the displ
def_view_text_height	0.000000 ×	0.000000	۲	Sets the height
def_view_text_thickness	0.000000 ×	0.000000	۲	Sets default thic
detail_circle_line_style	phantomfont	solidfont	۲	Sets line font fo
detail_circle_note_text	DEFAULT *	default	۲	Determines the
detail_view_circle	on *	on	۲	Sets display of a
half_view_line	symmetry	solid	۲	Determine the c
model_display_for_new_views	follow_environment *	follow_environment	۲	Determines line
projection_type	third_angle *	third_angle	۲	Determines met
show_total_unfold_seam	yes *	yes	۲	Determines if se
	default *	default	۲	Determines tang
	<			>
Iption:	Value:			
pton				🖌 🖌 🖌 🖌
				Auu / Change

Above is an example of a Drawing Setup File (*.dtl).

About Drawings

Using the Creotm Parametric Drawing mode, you can create drawings of all models, or import drawing files from other systems. You can annotate the drawing with notes, manipulate the dimensions, and use layers to manage the display of different items. All views in the drawing are associative: if you change a dimensional value in one view, Creotm Parametric updates other drawing views accordingly¹. Moreover, Creotm Parametric associates drawings with their parent models. The model automatically reflects any dimensional changes that you make to a drawing. In addition, corresponding drawings also reflect any changes that you make to a model (such as the addition or deletion of features and dimensional changes) in Part, Sheetmetal, Assembly, or Manufacturing modes.

¹ Only those parametric dimensions used to create the 3D model can do this. Extra dimensions added manually cannot.

Detailed Drawings Module

Detailed Drawings extends the drawing capability of Drawing mode. You can use it with Creotm Parametric to create, view, and annotate models and drawings.

Detailed Drawings support additional view types and multisheets, offers numerous commands for manipulating items in a drawing, and lets you add and modify different kinds of textual and symbolic information. In addition, you can use it to customize engineering drawings with sketched geometry, create custom drawing formats, and make multiple cosmetic changes to drawings.


With Detailed Drawings, you can also use a shortcut menu to modify any object in a drawing from anywhere in the model tree. At any time when a drawing window is active, you can interrupt your current process and activate a drawing object for modification.


With Creotm Parametric Interface or Detailed Drawings, you can access various interface commands for exporting drawing files to other systems and importing files into drawing mode.

To understand the views you can get from your model or assembly, in your 3D model, use the Saved Views \square ; here you can set Front, Top, Left, Right, Trimetric and


Isometric views plus a few others. Try it now, in the modelling mode; alter the model to

No Hidden, (Left-Click) as you do so. You will soon see how Orthographic and 3D views are related in Creo[™] Parametric

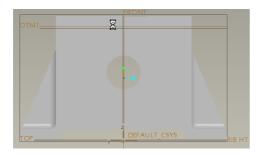

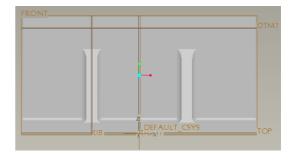

Above is the **LEFT** view, to the right is the **FRONT** view and below is the **TOP** view. Note how one relates to the other. The datum planes on show should help you understand this.

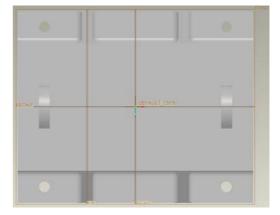

Create a New Drawing

With a 3D model open on the screen

- 1. Left-Click File then click New
- 2. Select the **'Drawing'** radio button
- 3. Type in a name for your drawing file
- 4. Make sure the 'Use default template' box is ticked.
- 5. Left-Click


😐 New			
— Туре ——		Sub-type	
🔘 🎢 Sketi	ch		
🔘 🗐 Part			
🔿 🛄 Asse	mbly		
🔘 🛃 Manu	ufacturing		
💿 🖳 Draw	ing		
🔘 🛄 Form	at		
🔿 📃 Repo	ort		
🔘 🖵 Diagi	am		
🔘 🔚 Layo	ut		
🔘 📝 Mark	up		
	My_Part		
Name Common Name	my_rai		
🔽 Use default	template		
ОК		Cancel	

6. Pick the drawing size you want and Left-Click

🗉 New Drawing 🛛 🛛 🔀
Default Model IX_WITH_BEARINGS.ASM Browse
 Specify Template Use template Empty with format Empty
Template
a3_drawing Browse
a0_drawing a1_drawing a2_drawing
a3_drawing
a3_drawing_bom a4_landscape d_drawing d_drawing_bom dte_a3_template
OK Cancel

Depending on the part or assembly you have open on the screen; the design of the format and template you use, you will now get the 2D drafted representation you require. It will not be complete but of that later.

(Note: If you have Datum planes 4 and Coordinate systems poper to view then they will appear in the drawing. Just turn them off and **Left-Click** anywhere in the Graphics window to see them disappear or **Left-Click** repaint or Ctrl+R)

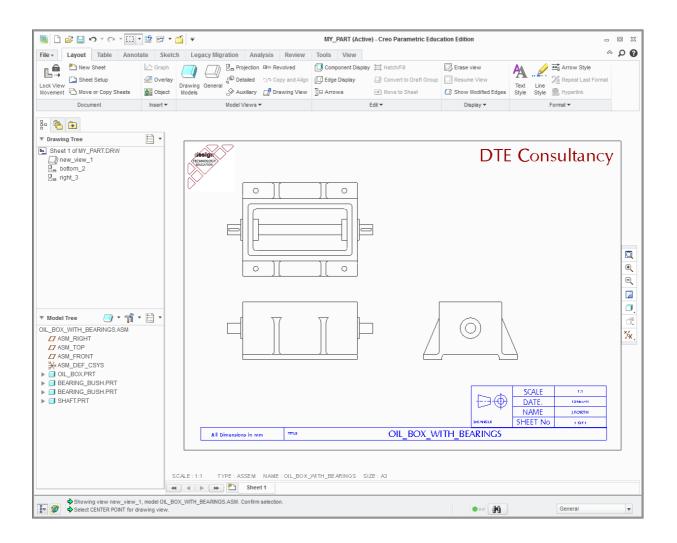

If you look at the picture above you will see what is meant. There are certain elements missing; i.e. dimensions and some elements may be wrong for your standard; the representation of the filleted corners for example. Note the blue line (pre-selection highlight) around the view that will help us change things. Note also such things as the border around the edge, the folding guides and reference numbers, the text boxes etc. This is known as the **Format** and you can create your own format. The three views haven't appeared by magic. Their position and appearance is due to another file that overlays the format and is called the **Template**. It is the combination of your model, the format and template that makes the drawing unique (see diagram on the next page).

First take a close look at the screen shot and note that it has a new feature, this is called the Ribbon Interface.

File •	Layout	Table	Annota	ate Sketc	h Lega	acy Migration	Ana	alysis	Review	Tools	View					a	00
п 🖨	🎦 New	Sheet		C Graph		/ _/) 🔚 Pi	rojection	B evo	olved	Comp	onent Displ	ay 💯 Hatch/Fill	Erase view	A		Krrow Style	
Lock View	Shee	t Setup		/ Overlay	Drawing		etailed	<i>⊜о</i> Сору	y and Align	🗍 Edge	Display	Convert to Draft Group	Resume View	Text	Line	🎢 Repeat Last Format	
Movement		e or Copy S	heets	🌺 Object	Models	General 🖉 A	uxiliary	🕞 Draw	ving View	D Arro	WS	🖃 Move to Sheet	🕗 Show Modified Edges			Hyperlink	
	Docu	ment		Insert 🔻		Model	Views	•				Edit 🔻	Display 🔻			Format 🔻	

Each tab on the ribbon allows different options into play. Left-Click each tab and note the Commands that appear that also appear in other ribbons. Right-Click in the graphics are and note the commands available for rapid use.

Select each drawing tab to observe the functionality found in each: • Layout – Sheets, formats, views, display settings and drawing objects are controlled from this tab.


• Table – Tables are created and edited using tools in this tab.

• Annotate – Dimensions, notes and tolerances are shown, created and controlled using tools in this tab.

- Sketch 2D draft entities can be sketched using tools in this tab.
- Legacy Migration Take old models and those from other software
- Analysis Similar to the analysis ribbon in the modeling mode.
 Review Update your drawing, compare different versions, query for information and take measurements using tools in this tab.
- **Tools** Various drafting tool and access to the template creation mode.
- View Tools to change the view parameters.

As we progress through the tutorial these features will be addressed in more detail.

Relationship of model and drawings

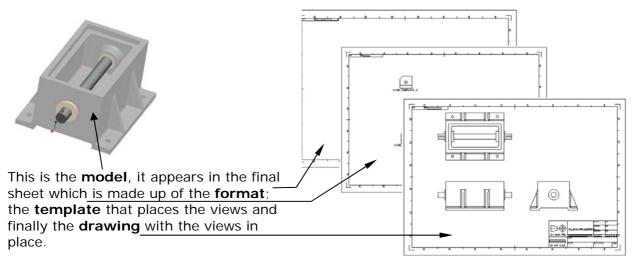

7. Double **Left-Click** on the blue line, it goes red indicating selection, the following dialogue box appears, the use of this will allow you to modify the views.


Note: The list of categories down the left hand side.

- 8. **Left-Click** each and see what you get.
- 9. You can play about with the options and if you **Left-Click** the Apply button you can see how the view changes; if you don't like it change it back.

Drawing View	N X
Categories	View type
View Type Visible Area Scale Sections View States View Display Origin Alignment	View name new_view_5 Type General Name of current view View orientation Select orientation method Geometry references Angles
	Model view names Default orientation TOP Trimetric BOTTOM * RONT * ISOMETRIC * LEFT * RIGHT *
	OK Close Apply

The important one at this stage is the **View Display**. Here we can show or hide Hidden lines and remove tangent edge display. On our own templates, created later, we can automatically set these functions.


- If you want to show hidden lines and no tangent edges then choose as shown here.
- 11. Once you have finished Left-Click

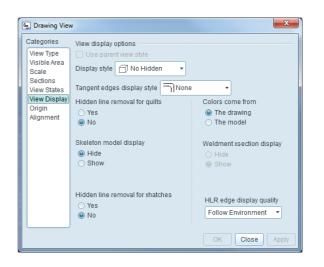


Adding Dimensions

- Select the view that you want to add dimensions. Left-Click the Annotations Tab in the Ribbon Inteface.Left-Click the blue line, you will find it by floating the mouse near to the view.
- 2. Left-Click Show Model

Annotations and the following floating menu will appear.

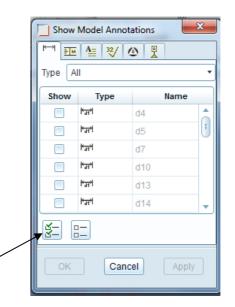


- 3. Left-Click Show All Dimensions. Don't panic, I know there are a lot and they are in the wrong places. We will proceed to edit their position and remove the unwanted.
- 4. Left-Click OK
- If you select the view again and Right-Click; In the Floating Menu you will see the option to Cleanup Dimensions. This allows you to quickly move things about so you can see the wood from the trees.

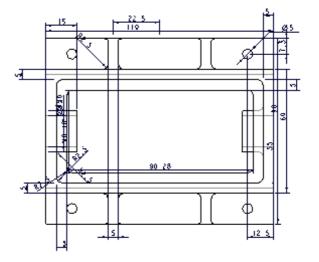


The Offset is for the first dimension and defaults to 12.5mm, each subsequent (Increment) dimension is 5mm on from the offset. A set of dotted guide lines is shown to help set them up. These can be deleted as explained below. To not show them uncheck the **Create Snap Lines** box

For the moment just accept the defaults

6. Left-Click Apply Close

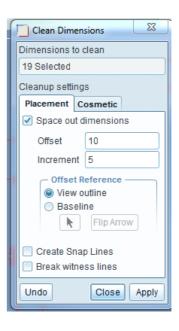

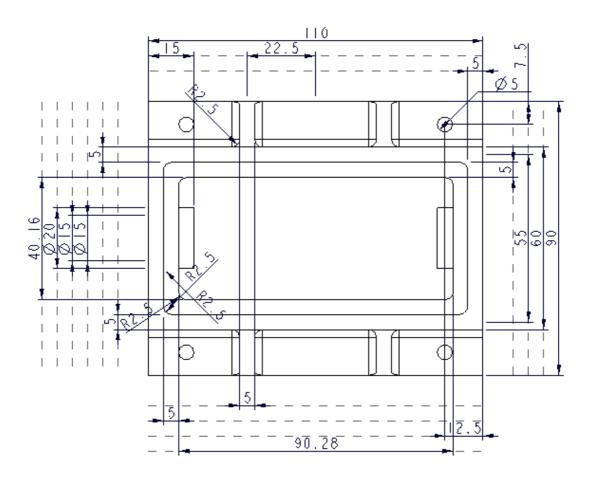

7. Now Left-click to select and Delete all the hatched guide lines; (Use the Ctrl key to select multiple lines and then hit the Delete Key (see drawing above)

8. Now select those dimensions you want to delete, either one at a time or multiple select using the **Ctrl** Key select with a **Left-Click** then **Right-Click** and select **Erase**. (If you hit the Delete key they will disappear immediately)

The dimension(s) will grey out and only disappear when you select the next one or anywhere in the Graphics Window. This gives you the opportunity to **Right-Click** and **Unerase** if you accidentally choose the wrong one. Whilst you are doing this you can also **Left-Click-Drag** to reposition the dimension and/or the value.


- 9. Spend some time 'tidying up'.
- 10. In Creotm Parametricyou can move a dimension from one view to another. The procedure is very simple.
 - a. Select the dimension to move with a Left-Click
 - b. Right-Click and select Move item to view
 - c. Select the view to receive the dimension. Note: It has to be one that has the feature orientation that is suitable.
- You can add a note to a dimension value by Double Left-Click the value and follow the instructions in the dialogue that appears. As shown here

You can alter a lot of things on these three boxes to determine exactly what you want. In this example we have added the prefix "4 X" to the \emptyset @D. (This is the code for the \emptyset 5mm of the four mounting holes.) This is neater than		🖳 Dimen
You can alter a lot of things on these three boxes to determine exactly what you want. In this example we have added the prefix "4 X" to the \emptyset @D. (This is the code for the \emptyset 5mm of the four mounting holes.) This is neater than		Properti
boxes to determine exactly what you want. In this example we have added the prefix "4 X" to the \emptyset @D. (This is the code for the \emptyset 5mm of the four mounting holes.) This is neater than	You can alter a lot of things on these three	Displa Displa Displa Displa
this example we have added the prefix "4 X" to the \emptyset @D. (This is the code for the \emptyset 5mm of the four mounting holes.) This is neater than	boxes to determine exactly what you want. In	Neitl Text orie
the \emptyset @D. (This is the code for the \emptyset 5mm of the four mounting holes.) This is neater than	this example we have added the prefix "4 X" to	Defaul Configu
four mounting holes.) This is neater than	the \emptyset @D. (This is the code for the \emptyset 5mm of the	Chamfe
dimensioning each one	four mounting holes.) This is neater than	(As Is) Ordinat
	dimensioning each one.	Defaul

Your view will now look a bit like this.

E Dimension Properties		X
Properties Display Text Style		
Name [d37 Value and Display Nominal Value 5.00 Override Value Tolerance Value Only Rounded Dimension Value	Decimal Places	Format O Fractional Angular dimension units (As Is) *
Tolerance mode Nominal Tolerance table General Table name	Decimal Places	Dual dimension Position Below To right Decimal Places Tolerance Decimal Places Ø Default
Move Move Text	Edit Attach 0	rient Text Symbol
Restore Values	[OK Cancel

E Dimension Properties	×
Properties Display Text Style	
Display Display Basic Prefix Inspection Neither Postfix Text orientation Default Configuration	4 XØ@D ▲
Chamfer style (As Is) Ordinate style Default	Set dimension text.
Flip Arrows	Witnessline display Show Erase Default Erable intersection witness lines
Move Move Text Restore Values	EditAttach Orient Text Symbol OK Cancel

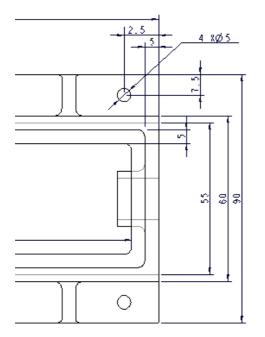



Properties	Display Text Style	•		
Copy from				
Style name	Default			•
Existing text	Select Text		Specifies an existing te Select from the list.	ext style to use as a starting p
- Character			Select from the list.	
Font	font			•
Height	2.500000	Default	Slant angle	0.000000
Thickness	0.350000	Default	Underline	
Width factor	0.850000	Default	Kerning	
- Note/Dime	nsion			
Horizontal		Lin	e spacing 0.500000	Default
Vertical	Top 👻		Mirror	
Angle			Break crosshatching	
Color		N	largin 3.800000 *	
	Preview			Reset
Move.	. Move 1	ext Edi	t Attach Orient	Text Symbol


- 12. You can now manually add dimension using the same technique as in the Sketcher.
- 13. Select the Create Standard [↑] Dimension ^{↑→} Tool from the Toolbar
- 14. Also Align Dimensions. First selected will be the datum. Other will align to it.
- Left-Click to select the first object of the dimension; edge, axis, etc., Left-Click the second object.





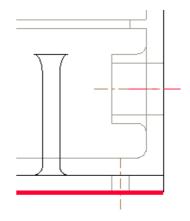

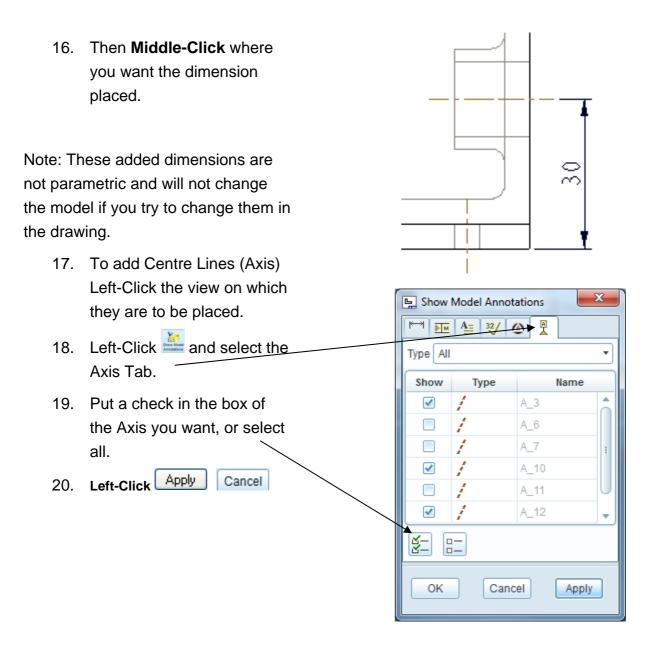

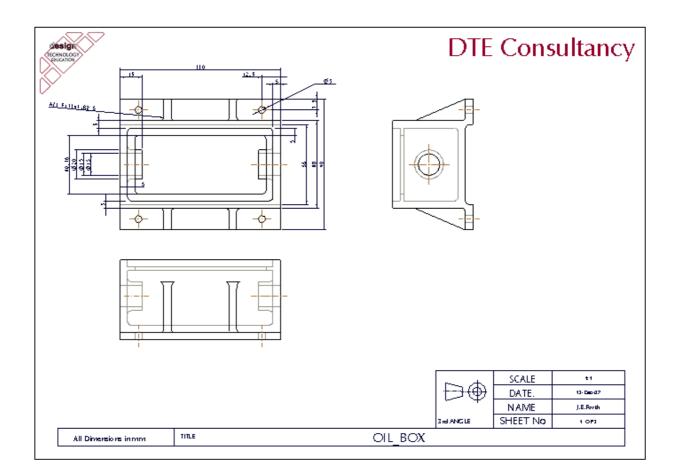

Notes can be added as can a Bill of Material (BOM) table and much more. If you want to use this function see the section <u>To Add a Bill of Materials (BOM) Table.</u>

Remember that these apparent drawings are in fact representations of 3D objects and assemblies. As such any changes made to them will be reflected in these drawings. This Associativity is an important productivity aspect of **Creotm Parametric**. You can try it by opening the part,

- 1. (Right-Click in the Navigation window on the part and choose Open),
- 2. Change a feature of the part or add an extra chamfer. Now go back to the drawing and see that the change has already been made.
- 3. In some cases you may need to regenerate. Left-Click the drawing. This is the essential difference between a 3D modelling CAD and a 2D drafting CAD.

Adding new sheets

Layout	Table	Annotate	Sketch	Review	Publish	
	New She	et	General		on 🗗 Drawir	
	📑 Sheet Se	tup		ູ 🗂 Detailed	🕗 Show	
	🗅 Move or (Copy Sheets			🗐 Conver	
Document			Model Views			

You can add sheets to the file.

1. Left-Click New Sheet on the Layout Tab. This will come in as a blank format onto which you can place general and projected views, create sections or even exploded views.

Pictorial Views

When you create your part or assembly you also can create views using the **View Manager**. Also with **View Manager** you have the ability to set special 3D views that best show your model. These views can also be used within drawings.

To create a special view move the model in the Graphics Window as required.

- 1. Open the View Manager
- 2. Left-Click<Orient,
- 3. Left-Click<New and type a name e.g.3D.
- 4. Close the View Manager. Return to the Drawing window

5. On the new blank sheet **Right-Click** and select from the menu **Insert General View**.
6. Left-Click on the sheet, where you want to place the view. The drawing view dialogue box opens to allow you to finalise the view.

It opens in View Type.

1. Type in a model name and then scroll down the list of **Model View Names** until you find the one you want. Trimetric, Isometric and your own 3D views are all available.


2. Left-Click Apply ; notice the view is shaded as it appears in the part modeller.

Use other functions in the Drawing View dialogue to set other aspects of the view as you desire, in the same way as described previously. To set a different scale go to the **Scale** category and select **Custom Scale**, place a decimal number to represent your needs, e.g. 2.0 will double the scale from the default.

Drawing View	w X
Categories	View type
View Type Visible Area Scale Sections View States View Display	View name ISOMETRIC Type General • View orientation Select orientation method @ Views names from the model
Origin Alignment	Geometry references Angles Model view names Isometric
	Standard Orientation Default Orientation BACK BOTTOM FRONT ISOMETRIC
	OK Cancel Apply

On completion Left-Click Apply then Close

You will notice that the view is locked in place. If you want to re-position the view on the sheet you will need to select the view, (Red line around it); **Right-Click** and un-tick **Lock View Movement** then **Left-Click-Drag** to the new position. To lock the view again, reverse the procedure. You can place more than one view on the same sheet.

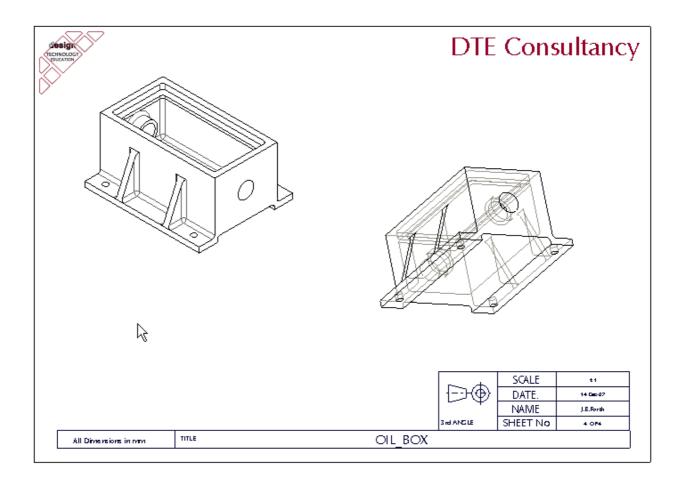

In this case the right hand view is a specially created one called 3D and it is shown with Hidden detail showing. These appear as greyed out lines but will print-out or plot using whatever standard you have set; they appear as dashed lines in BS8888 for example.

Creating a sectional view

To create a sectional view you have to start in the part /assembly file. The simplest way of creating a section is to make sure there is a datum plane lying just where you want the section to be. You can either use the ones created when the model was made or you can place a plane with its sole purpose being to create a sectional view.

You can also create a sectional view within the drawing file itself; see the section headed 'Sectional View Created in the Drawing file'. Creating the sectional view within the model does allow you to see the finished section and also use it to create a 3D sectional view, something unique to 3D Modelling packages.

- 1. Activate the View Manager and select the Xsec tab.
- 2. Left-Click New; type a name or letter and hit return. You will be presented with some choices in the Menu Manager.



 Accept the defaults and Left-Click Done. The Menu Manager changes and you have to create or select the Datum Plane you intend to use as the cutting plane.




- 4. In the Graphics window select the plane required. You will be then back in the View Manager.
- 5. Left-Click Display, Select Set Active and the model will be sectioned to show how it will appear. If you want to cut off the opposite side Left-Click Display Flip.

The view will appear as below. To return to normal view

Double Left-Click No Cross Section.

You can go on and create as many different sections as you think you require. When complete Close the View Manager.

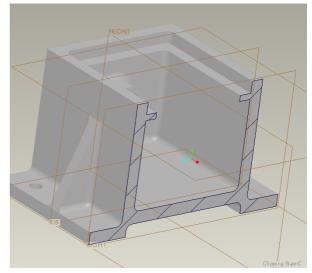


You can now go to the drawing view and create the sectional views you require.

6. Create a general or projected view on the sheet, this view will be sectioned. To create a projected view. Select the parent view; Right-Click and select Insert Projected View. A ghost of the view will appear Left-Click when you have positioned it. Whether it is a 3rd Angle or 1st Angle will depend on how you have set up the Drawing Options File (see Appendix 1).

Α.	🖳 Drawing View 🛛 🔀
a. Select the view with a Double Left-Click to open the Drawing View box.	Categories Section options View Type No section Visible Area 2D cross-section Scale 3D cross-section Sections 3D cross-section View States Single part surface View Display Single part surface
b. Select the Sections Category	Origin Alignment Model edge visibility Total Area
	OK Cancel Apply

7. Left-Click select the radio button 2D cross-section

- Left-Click the "+" and the available 8. Xsec will appear. Note: Some will obviously not be possible on some views.
- 9. Left-Click to select the one you want and Left-Click Apply. The view will change to appear as below.

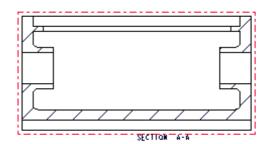


Left-Click Close


Select the view and **Right-Click** select **Add Arrows** and then choose the view to which the arrows should be attached.

The view will now look something like this, see below.

If the hatching is too widely spaced or at the wrong angle Double **Left-Click** on the selected hatching and a Menu Manager will appear that will let you change whatever is needed to create the right effect. The Section title can be repositioned by **Left-Click-Drag**.

To remove hatching from any part select it by Double **Left-Click** and set the spacing so wide that it disappears.

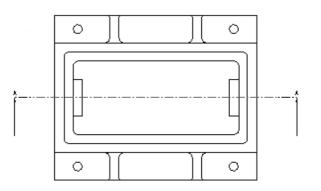

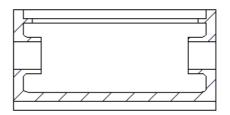

SECTION A-A

Sectional View Created in the Drawing file

If you have not created the sections within the model file it is still possible to create the section from within the drawing window. Ensure you have the Datum Planes visible and a **Projected** view created that will be sectioned.

a. Select the view with a Double **Left-Click** to open the **Drawing View** box.

b. Select the **Sections** Category

🖳 Drawing	View	×
Categories View Type Visible Area Scale Sections View States View Display Drigin Alignment	Section options No section 2D cross-section 3D cross-section Single part surface Model edge visibility Total Area Name Sectioned Area Reference	
	OK Cancel Apply	ה

At this point there will be no Xsec in the box.

Menu Manager			
▼ XSEC CREATE			
Planar			
Offset			
One Side			
Both Sides			
Single			
Pattern			
Done			
Quit			

1. Left-Click '+' and Create New

2. Select Planar<Done

3. Enter a Name or Letter

4. In the Menu Manager **Plane** will be highlighted if not select it.

5. In the graphic Window **Left-Click** the Datum plane to be used (in an assembly use a ASM datum plane, you may need to **Right-Click** and use **Pick from list** to find the required plane) Or select from the Model Tree

6. In **Arrow Display** select the view in which the arrows will be displayed.

7. Left-Click OK


Enlarged Details

To create a detail is quite easy. It is in three parts, first select the feature you want to highlight; then create a spline curve surrounding the part; then place the detail view. If a sectional detail is selected then the detail will be a section.

- 1. Left-Click Insert<Drawing View<Detailed
- 2. Left-Click to select the feature, edge or face etc. A cross will appear that indicates the centre of the detail.


Move away from the centre cross and create a spline curve surrounding the detail. (There is no need nor is it possible to use the Sketch Spline tool)

 You do not have to complete the curve, when you get close Middle-Click and a dashed circle will appear.

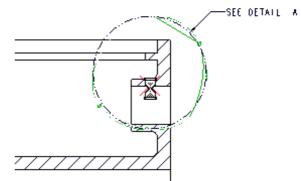




4. Left-Click in the position you want the detailed view and it will appear. The default scale is 2:1(set in the *.dtl file) but Double Left-Click the scale value to enable it to be varied.

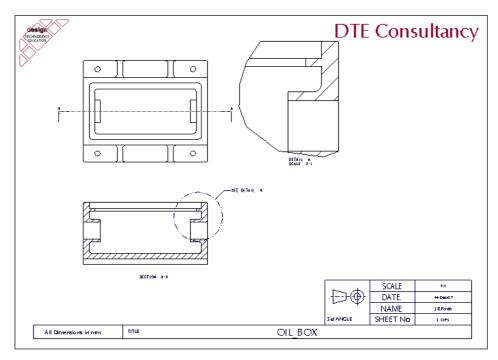

The sheet will now look like this. Dimensions can be added to detailed views.


Offset or Stepped Section

There is occasionally the need to create a sectional view that uses a set of offset lines or steps to define the section cutting plane. To do this is not difficult but requires a clear approach to the objective.

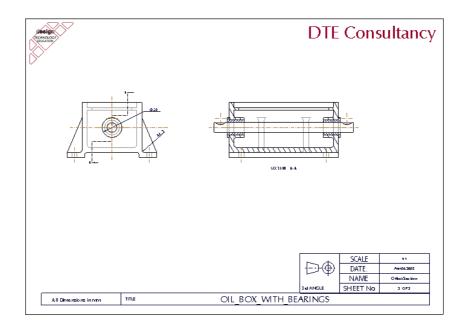

Here is an example of a Stepped or Offset Section, Note that lines denoting the steps are not shown in the sectioned view, however since this is an assembly the hatchings are separate.

Follow the instructions to create a Stepped section

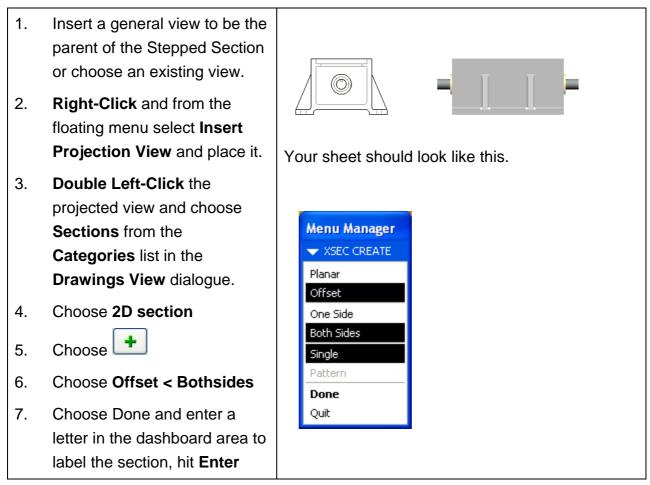


What happens now is that a new window opens that is very much like the sketcher. Notice the face on which we are to place the stepped line has been selected.

Menu Manager
SETUP SK PLN
Use Prev
Setup New
- SETUP PLANE
Plane
Make Datum
Quit Plane

Select the face and accept all the defaults.


- 8. A References window opens
- Left-Click to select 4 edges to enclose the area on which to sketch the stepped line as shown opposite. Close the reference dialogue.



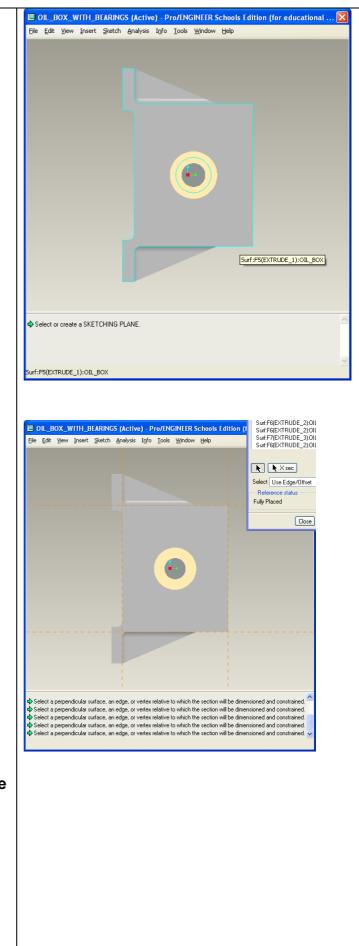


11. Sketch the stepped line as if it where in the sketcher starting at one of the reference edges and finishing on another reference edge. Use the automatic Horizontal and Vertical Constraints, there can be no lines at any other angle.

- 12. This line can be dimensioned in the same way as in the sketcher. Select Sketch
 <Dimension <Normal. Use the Constraints tool to align with axis and any other feature necessary
- 13. To complete the line creation choose **Sketch < Done**

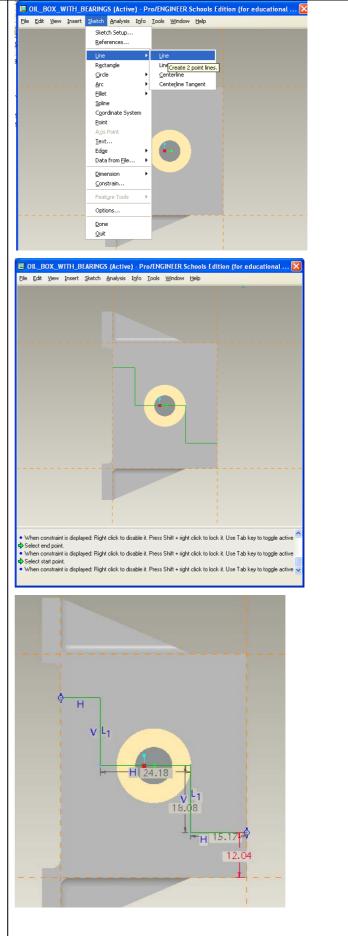


display as shown opposite.

- 15. Choose View Display to modify the view as required to show hidden line and tangent edges etc., Left-Click OK
- 16. The stepped sectional view now appears and can be modified as required. Note: The hatching of the shaft is not to BS8888 and therefore needs to be removed. The next section deals with modifying the hatching lines

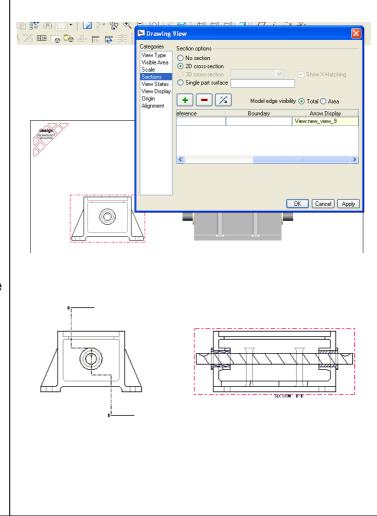


Modifying Cross-Hatching display

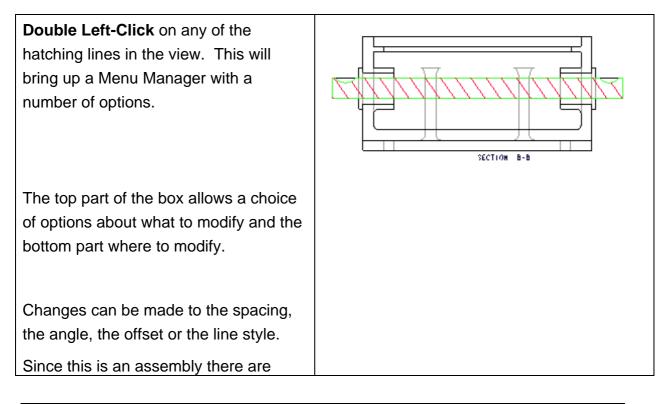

more than one section that is hatched.


Changes can be made to all the hatchings (**Overall**) or each one separately (**Individual**). You can choose which one on which operate either in sequence (**Next Xsec; Previous Xsec**) or by selection (**Pick Xsec**).

- 1. Select the Xsec to modify
- 2. Select the value e.g. Spacing
- Select Half or Double or Value (Note: to remove a hatching select Value and state an absurdly large value e.g. 2000mm in the dashboard)
- 4. Select another value to modify or move on.
- 5. Choose **Next Xsec** to move to the next in sequence to modify.
- When all modifications are complete choose **Done** and the view will reflect those changes.

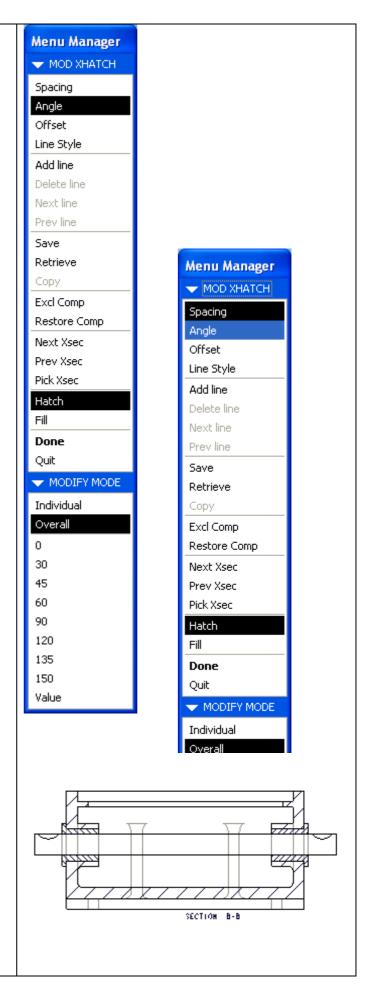

Exploded Views

The exploded view has to be created via the View Manager within the assembly file. The details of how this done is the subject of another tutorial. Once the exploded view is created it can be placed in the same way as described for pictorial views.

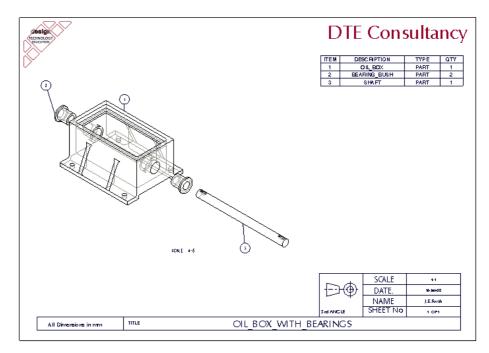

An example of an exploded view with a BOM table and balloons.

Other Views

It is possible to create other views:-

- Offset Sections (Stepped Section)
- Revolved Sections
- Breakouts
- Broken Views
- Auxiliary Views

To cover these other aspects of detail drawing visit the COACH Training site at:http://schools.ptculms.com/cadtrain/coachlms/client/login?eventType=logout

To create a customised exploded view

There a several ways to create a new exploded view but all are associated with the **View Manager**. This multi functional tool allows you to create Xsec (Cross-sectional), Styles, Orientations and simplified representations (SimpRep).


🗉 View Manager 🛛 🔀	🗉 View Manager 🛛 🔀
Explode Orient All Simp Rep Style Xsec	Simp Rep Style Xsec Explode Orient All
New Edit Display	New Edit Display
Names	Names
Default Style	Default Explode
→ Master Style	
Properties >> Close	Properties >> Close

To create a new exploded view you are going to do three things.

- Select whether to move one part at a time or multiple parts
- Select the direction in which they are to move
- Drag the parts to their required position
- 1. To start open the **View Manager** and **Left-Click** on the **Explode** tab.
- 2. **Right-Click** on the **Default Explode** and select **Copy**, accept the name given (Exp001) or change it to something you want. **Left-Click** OK.
- 3. **Right-Click** on the new name and select **Set Active**, the red arrow will appear on the left and the model will explode in the same way as the default. You are now going to edit this to create a custom exploded view



- 4. Left-Click the down arrow to the right of Edit. (as opposite)
- 5. Left-Click Edit Position.
- Now Left-Click in the graphics window on the part you want to move. A coordinate axis appears. you float the mouse over it the

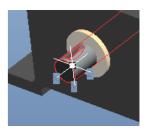


three coordinates highlight in turn. Select the one required for the drag direction .

7. Left-Click-Drag to move the part in the direction required.

If

8. Position all of the parts as required then Left-Click the Green Tick in the dashboard

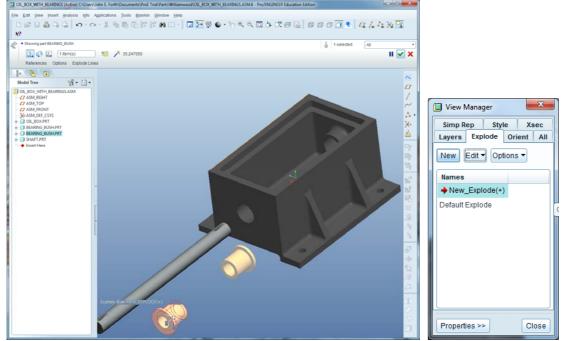

Take your time creating the exploded view as it will be used in the detail drawing. Tip: Create several different Exploded Views to cove all the options; don't try to do too much with each one.


9. You will notice the + sign next to name of the view in the view manager. This is an indication that to continue you need to save the view. Left-Click Edit and select **Save** from the drop down menu.

Save Display Elements				
Orientation	View0001	-		
Simplified Rep	(Not Modified)	-		
Layer State	(Not Modified)	-		
Style Style	(Not Modified)	-		
Explode	New_Explode	•		
OK Cancel				

10. Make sure the name is correct and Left-Click OK.

The exploded view is now saved and can be called at any time in the graphics window and in any drawing created from the assembly. To call the view open the View Manager and Double Left-Click the view you want to select. Go to View<Explode and select Explode View from the slide out menu. Reverse the procedure to un-explode the view.

You can select a number of ways to edit the position to explode the parts, experiment to find the one that suits your requirement.

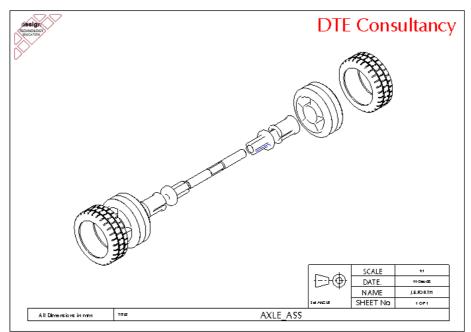


Example of a custom exploded view.

More with Annotation.

The Annotation Tab allows a wide range of actions with selected views. Especially the Show Model Annotations Icon

On a sheet like that left you must first Set the Model in the Layout tab. As can be seen

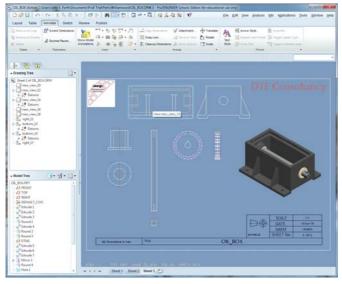

here the OIL_BOX.prt is the selected model as its model tree is visible.

DTE Consultancy

To change to another model

- 1. Left-Click File<Drawing Models.
- 2. Select Set Model and from the list presented choose the model you wish to annotate.
- 3. To annotate that model Left-Click E Follow the instructions in the box that appears. Left-Click the part name in the Model Tree.

Show Model Annotations Type All Show Type	*	Show		tations	
Select views, components, and/or features for which you want to show annotations. You may change your selection at any time.		Show	Type (*क्र) (*क्र) (*क्र) (*क्र) (*क्र)	Name d4 d5 d6 d7 d8	
Cancel Apply			ि ि Can	d3	Menu Manager

The first tab is dimensions and they appear with the views associated with this part.

- 4. Place a tick in the box next to the dimension required, it will not be fixed until you exit the process. Selected dimensions change colour.
- 5. Left-Click any of the other tabs to add those elements if they are present in the model.
- 6. Left-Click OK to complete the process.

To Change the Format Sheet

If you have created a drawing on a generic format and want to change it onto a new format it is quite simple.


1. Left-Click File<Sheet Setup

The Sheet setup dialogue opens

- Left-Click on the down arrow to the right of format and either select the new one from the list supplied or select browse and find the one you want. Left-Click OK
- Follow the instructions supplied at the top of the screen, if they appear. These will usually be to keep or remove tables on the existing format. A blank <CR> will retain them.
- 4. Left-Click the green tick in each case. The new format will appear with all your views in place. There is no need to alter anything unless you want to or, in the case of a sheet size change, larger or smaller, then some view movement will be required.

Sheet Setup		
Sheet Sheet 3	Format A3 Size	v Vidth 420.00 ○ Inches Height 297.00 ④ Millimeters Orientation ● Landscape ○ Portrait
		OK Cancel Preview

Sheet	Format	Width 0.00
Sheet 3	DTECON1	Height 0.00 Millimeter
		Candscape Ortrait Show format

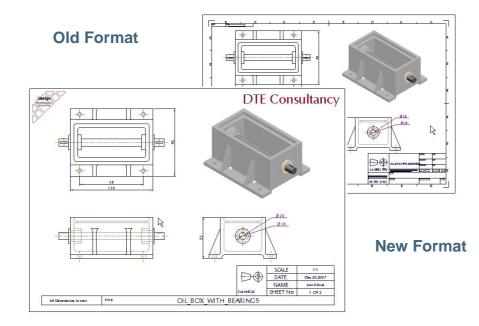

To Create your own Format

The first thing you need to do if you want your own customised Format is to decide what it is going to look like. The best way the do that is to draw one out roughly on the relevant sized sheet of paper. As an example we are going to create an A4 sized Landscape format. Here is the rough sketch.

School Logo.		Nonary Projet
all Dun in ma	TITLE	Dote: Jrd Angle: NAME Sheet No


This is the guide to help you. You now have to determine how each element will be made. You can start with an existing format and make alterations or you can start with a 'clean slate'. In this case we are going to use a PTC format and modify it.


Let's look at the elements we intend to add.

- A school or class logo; this needs to be a bitmap file and you need to know where it is so that you can retrieve it.
- A border; this can be drawn using the sketching tools or modified from the existing format.
- A title or Project name; this will be text and can be added as a note and formatted with the tools available.
- A Table; this is a block of cells that contain written or symbolic information. A Table in Creotm Parametric is a powerful entity, not just a series of boxes. The boxes can be 'programmed' so that specific information can appear automatically or the user can be prompted to input specific information. (see Appendix 2)
- A Symbol; this is the universal symbol for 3rd Angle projection and exists as a **Creotm Parametric** symbol.

Let us start with the basic format that we are going to change.

- 1. Left-Click File<Open
- 2. Navigate to the Templates folder.
- 3. Click on the down arrow at the top and Left-Click Templates
- 4. Set file type to **Formats**

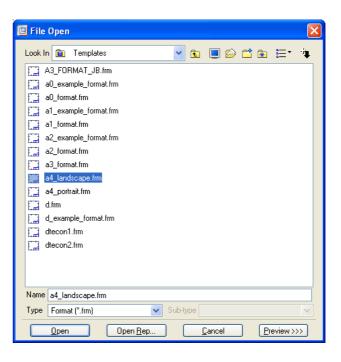

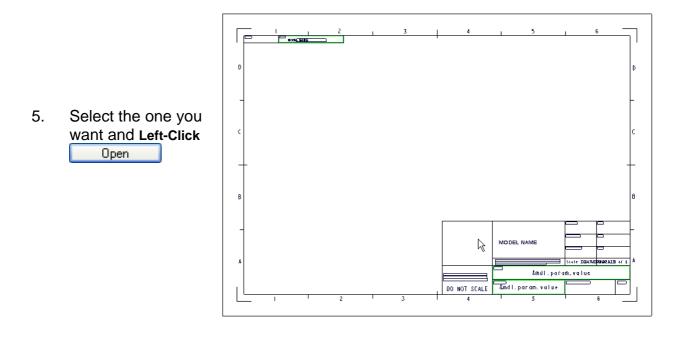

Let us take a good look at this Format to see what we can keep and what we need to change or delete to create our own format.

First of all notice the parts outlined in green. These are **Tables** and contain text that is interpreted by the program and will return specific parameters to the drawing. All of these parameters are in the Help files and can be found by going to Detailed Drawings in the **Help Centre** and typing **Parameters** in the **Index** Tab. (see Appendix 2) We are going to use some of these later. These parameters MUST be in a Table to be interpreted.

The other aspects such as Border, other lines, fold tabs and reference characters are all able to be deleted or left as you see fit. Save a copy of this Format and then retrieve it

to become the new format.

We will start to make the format as we want by removing the redundant items.

- 6. Select the items to delete by **LEFT-CLICK**. Hold down the **Ctrl** key to multiple select.
- 7. Hit the **Delete** Key

There will be elements you select which will not delete in this way. These are Tables and must be treated slightly differently.

To delete a table

- 1. Select the cell first with a Left-Click
- 2. Right-Click and Select 'Delete Contents'.

Some text will remain; this is just a note to tell you what is in the cell. You can remove it later.

3. Select the Table(s) with a Left-Click using Ctrl if necessary.

4. Left-Click Table<Select<Table

5. Right-Click Select Delete

The table will disappear.

You can now select any text or other odd lines you do not want and delete them

If there are tables you want to keep and use they can be saved and brought back when required. To do this:-

6. Select the Table

7. Left-Click Table<Save Table<As Table File

8. Give it an easily remembered name such as 'title_block'

Once saved, they can be deleted as outlined before.

To retrieve the Table.

- 1. Left-Click Table<Insert<Table from File
- 2. Select the table you require and position using options from the GET POINTS Menu

Now we can start building up the Format. These are the steps.

1. Draw any lines you require, you can use the drawing tools to the right of the Graphics screen in much the same way as in the Sketcher.

A useful tip is to set a draft grid.

a.View -> Draft Grid -> Grid Params.

b. Set H/V & grid snap Sketch -> Sketcher Preferences.

- 2. Create any text as notes and place them
- 3. Create any Tables and populate them with parameters
- 4. Place any Logo's

To start with we are going to create a box at the bottom of the sheet using the line drawing tool.

- 5. First Select the Line Tool
- 6. A snapping reference box opens. Left-Click the arrow button

🖳 Snapping References 🛛 🛽	<
Line (Edge) Line (Edge) Line (Edge)	
Remove	
Close	

Select the two vertical lines of the border as Snapping References.

- 7. Draw a horizontal line between the two. Middle-Click to finish.
- 8. Drag the Line into the correct vertical position.
- 9. Repeat the actions to create a vertical line to enclose the units note.

	PO 1107 (2011 -	
	DO NOT SCALE	

The sheet now looks like this.

- 10. Left-Click Insert<Note
- 11. A menu manager opens.
- 12. Left-Click Make Note to accept the default or make choices as required.
- 13. Left-Click where you want the note. Approximate position is all that is required since it can be Left-Click-Drag to exact position later.
- 14. In the box at the bottom of the screen type in the note. If it is only one line you will need to Left-Click the green tick on a blank line. In this example type 'All Dimensions in mm'
- 15. Left-Click Done in the Menu Manager
- 16. The note will now appear in the default size text set in the drawing set up file, to change this (see Appendix 1).
- 17. **Double-Left-Click** on the Text and the **Note Properties** box opens. Here we can change and edit the note to be exactly what we want. Note: spelling correction needed.

📰 Note Properties 🛛 🔀	🗰 Note Properties 🛛 🔀
Text Text Style	Text Text Style
All Dimessions in mm	Copy from Style name Default Existing text Select Text Character Font Font Image: Constant of the second of
OK Cancel	OK Cancel

- 1. **Left-Click** the Text style Tab, here we can set the size of Text, font used and colour of the type.
- 2. Make changes and use the Preview button to see what you get.
- 3. Left-Click OK when all is done.

Notice that there is no formatting of the text in a plain note. If you want the text to have a box round it prefix the text with @[.

Continue to add text as required.

To add a Table

1. Left-Click Table<Insert<Table (or Table from file to retrieve a saved version, useful if you are creating a range of formats with similar tables).



A Menu Manager opens so that you can set out how you like you table to look. In this case we are going to create an ascending table Leftward, By Length. We are going to lock it to the right border and the horizontal Line we created earlier by using their Vertex, i.e. the corner. This will create a table starting at the bottom right hand corner of the sheet. Looking back at the rough sketch we need a table of 2 columns and 4 rows. We will be using drawing units to give the size; it is easier than working out how many characters you will put in the cell.


1.. Select the Vertex. You will be prompted to enter the width of the first column.

2. Type in the width in drawing units e.g. mm and either Left-Click the green tick or hit the Enter key.

3. The next column width is the entered and so on until you have defined all of the columns you need. In this case stop after two columns are defined.

4. To stop setting columns; **<CR> Enter** on a blank prompt.

5. You will now be asked to define the row heights in the same way, finishing with a **<CR> (Enter)** after the last one. Your Table will then appear.

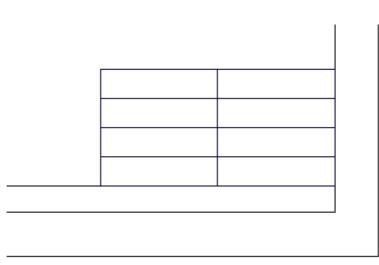

You can create other tables in the same way; instead of drawing a box to put the symbol in we will use a 1 X 1 table.

- 2. Add text to the left hand column using the table function.
- 3. Left-Click in the cell, the Note Properties box opens.
- 4. Enter here the text, if you want to use any special symbols open the **Text Symbols** box.
- 5. Open the **Text style** tab.

Here you can add font, size, colour and position in the cell, etc.,

Use the **Preview** button to see the affect of any changes before you commit.

6. Now it looks like this, you can edit any cell by selecting it and **Double-Left-Click** to return to the **Note Properties**.

III Note Proj	perties 🔀				
Text Text Style					
Copy from	Copy from				
Style name	Default 💌				
Existing text	Select Text				
- Character					
Font	🕆 CG Omega 🛛 👻				
Height	5.000000 Default Slant angle 0.000000				
Thickness	0.000000 🗹 Default 🔲 Underline				
Width factor	Default Kerning				
Note/Dime	ension				
Horizontal C	Center 💽 Line spacing 0.500000 🗹 Default				
Vertical 🚺	Aiddle 💌 🗌 Mirror				
Angle 0	.000000 Break crosshatching				
Color	Margin 0.150000				
	Preview Reset				
	OK Cancel				

SCALE	
DATE	
Drawn By	
SHEET No.	

You can now add parameters to the other cells that will be interpreted by the program to enter the Date, Scale and Drawing number. These are of two types, those automatically placed by **Creotm Parametric** and those requiring action on the part of the user. We will deal with the automatic ones first.

The ones needed in this example are for Scale which is **"&scale**"; Date which is **"&todays_date**"; Sheet number which is **"¤t_sheet of &total_sheets**". These you will note have an ampersand preceding the text and no spaces; an underscore is

used as in the case of a file name. (For other parameters see Appendix 2). These are placed and formatted in exactly the same way as the earlier notes. Enter everything between the quotes. See Appendix 2 for other parameters you may need.

You can enter a user parameter in the same way but this will elicit a user response. In this case the Pupils name in the '**Drawn By**' cell. We are going to use the parameter "**&pupils_name**". Whatever word or words you use here will be the user prompt when the format is employed.

Your Table will now look like this:-

	SCALE	&scale	
	DATE	&todays_date	
	Drawn By	&pupil_name	
3rd Angle Proj	S&EEUrn&At	sheet OF &to	tal_sheets


(Note: On the format they will appear as typed; when the format is used the relevant information will appear. Don't worry if they overlap the cell, as the value returned will not.)

To Add a Logo

The School badge, Team or Project Logo can be added to the format or drawing, either in a cell or not. In this example the logo will go into the top left hand corner of the sheet. It must be a Windows bitmap file (*.bmp)

1. Left-Click Insert<Object

 It is better to have it already created so select Create from File.

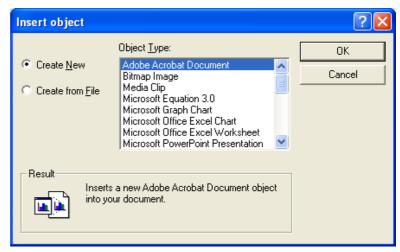

- 3. Browse to the file and Left-Click
- Left-Click on the Graphics Window to place the bitmap image. Size the image using the drag corners and reposition as required.


Insert object		? 🛛
C Create <u>N</u> ew Create from <u>File</u>	Fil <u>e:</u> [C:\Documents and Settings\Owner\My <u>B</u> rowse [] Link	OK Cancel
your do	the contents of the file as an object into cument so that you may activate it using gram which created it.	

To Place a Symbol

All that remains now is to place the symbol that shows it is a 3rd Angle Drawing.

1. Left-Click Insert<Drawing Symbol<Custom

2. Browse to the Folder containing the symbol and select it. This box appears.

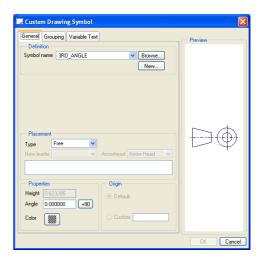


A ghost image of the symbol now appears at the mouse cursor.

- Position the symbol and Left-Click to place.
- 4. Left-Click

The Format is now complete. Save the file in the Templates Folder or a Templates Folder in your user area. You can of course retrieve it at any anytime and modify it.

design Transaccor		DTE Co	onsultancy
		SCALE	&scale
		SCALE DATE	&scale &todays_date
			&todays_date

This format can now be used to create your own unique set of drawings. Here is what it looks like when a model is shown.

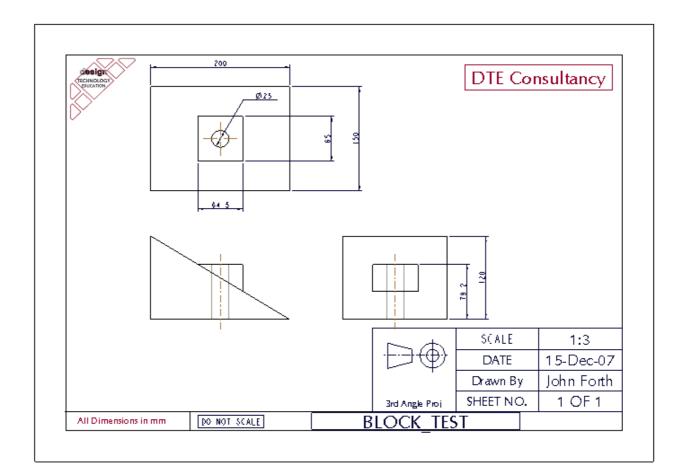

These views have been manually placed, now you can use this format to create a Template onto which the views will be placed automatically.

To Create a Template.


The template is the file that sets the desired views and their display state; create snap lines; and shows model dimensions based on the way the template is created.

As an example we will create a Template based on an A4 format that will show three views in 3rd Angle projection, two of which will have hidden detail showing and none will show tangent edges. You can draw a rough sketch to determine how you want the views to look.

- 1. Left-Click New Drawing
- 2. Give the template a name e.g. DTE_A4_TEMPLATE.

The name should tell as much as possible about the template.

- 3. Select the radio button Empty with Format
- Browse to find the format you want to use. In this case we will use the one created earlier.

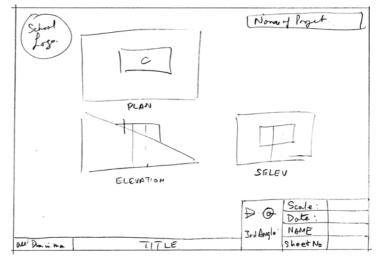

- 5. Left-Click
- 6. Left-Click Applications< Template

We now have to place the views on the sheet. In this case the first one is the **ELEVATION** which will be a **General view**; Orientated **LEFT** (see View Manager);

Hidden; No Tangent Edges.

7. Left-Click Insert<Template View The Template View Instructions box appears. In this we can first of all set the View Name --ELEVATION


🖳 Template View Instructions		×
View Name: ELEVATION		
- View Type		
General 💌		
View Options	View Values	
✓ View States	Combination State:	
Process Step	Orientation:	
 ✓ Model Display ✓ Tan Edge Display 	Simplified Rep:	
Snap Lines Dimensions	Explode:	
Balloons	Cross Section:	
	Arrow Placement View: <none></none>	~
	Show 3D Xsec Hatchi	ng
View Symbol		
Place View	Edit View Symbol Replace View Symbol	
OK	New Cancel	

Now set the Orientation –**LEFT** (Note there are many options here, what you use depends on the template you are creating. The Views are those available in the View Manager)

Notice, under 'View Options' there are some boxes ticked and others not. View states MUST be ticked the others are optional depending on your template. In this simple

example we will only use those options checked.

- 8. Left-Click 'Model Display' select "Hidden" to show hidden detail
- 9. Left-Click 'Tan Edge Display' select "No Disp Tan" to not show tangent edges
- 10. Left-Click 'Place View', Left-Click on the Graphics Window to place the view. It can be reselected to reposition it if required.
- 11. Left-Click 'New' to set up the next view; this will be a projection from the ELEVATION. Left-Click the down arrow to the right of the View Type box and select **Projection**. Ensure that ELEVATION is shown in the Parent View Name box. Set Model Display and Tan Edge Display as before and name the view PLAN. Place the view.
- 12. Left-Click 'New' to set up the last view, a Side Elevation Projected from the ELEVATION. No Hidden this time.
- 13. You can reposition the views if you wish and by **Double-Left-Click** on the symbol you can edit the view display.

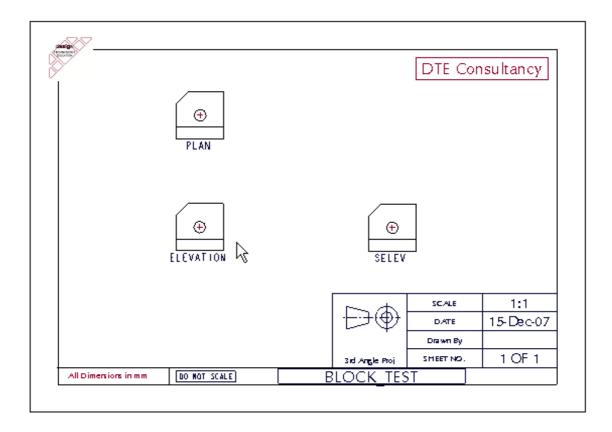

The views and the view names appear in this view but will be replaced by the views of whatever model you use when creating your drawings.

The last thing you need to do is to re-allocate the two parameters '&scale' and '&model_name' .

14. Left-Click to select the cell Double-Left-Click and change what is there to the Creotm Parametric parameters namely '&scale' and '&model_name'.

They will appear in the template as "**DRAWING SCALE**" and "**MODEL NAME**" this will appear as the correct scale and model name when the Template is used.

15. Setup the drawing option file as described in Appendix 1.

Before saving the Template file you will need to make sure that no models are associated with it.

16. Left-Click File<Properties<Drawing Models


- 17. Refer to the dashboard area. If a model is associated it will be noted with the option to retain or delete. **Left-Click** "Yes" to delete
- 18. Save the template file.

To Add a Bill of Materials (BOM) Table.

A Bill of Materials Table is a special case of the use of a Table in drawings. The table is created to show each of the components within the assembly plus other information that may be required. Each cell in the table has a parameter and each cell can be made to duplicate itself as many times as is required to cover any size assembly. Cells can also be set to create Numbered Balloons attached to the parts.

The easiest way to add a BOM table to your format is to copy one from an existing PTC format found in the Templates folder. This one is a simple example but adequate; if you want to create a more complex one, see the Help Centre files.

- 1. Set **Templates** Folder as the **Working directory**
- 2. Open the format file with the BOM table

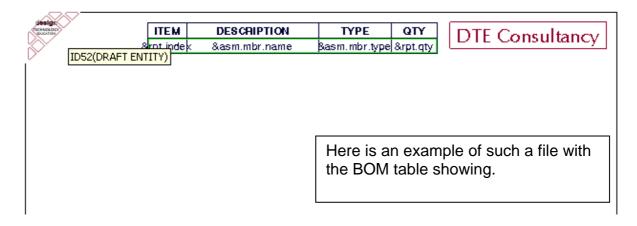

- 3. Left-Click to select the Table
- 4. Left-Click Table<Save Table<as Table File
- 5. Give it a name e.g. bom.tbl

This will save the table in the Templates Folder

- 6. Close the file and File> Erase<Not Displayed to clear the memory
- 7. Open your format file.

- 8. Left-Click Table<Insert<Table from File
- 9. Place the Table using a Left-Click-Drag
- 10. Left-Click to finalise.
- 11. Save the format file

To set the table to create balloons


- 1. With the format open
- 2. Left-Click Table<BOM Balloons, BOM BALLOONS Menu Manager opens.
- 3. Left-Click the Cell 'ITEMS' This is where the part no. is stored
- 4. Left-Click Simple to provide a balloon with just the number.
- 5. Left-Click Done
- 6. Save the format

To Show Balloons in an assembly View

- 1. Left-Click Table<BOM Balloons
- 2. Left-Click Create Balloons BOM VIEW Menu appears
- 3. Left-Click Show All
- 4. Left-Click Done
- 5. Drag-Left-Click Balloons into place

You will notice that the table only has one row and is populated with parameters that start '**&asm_**' which collects the data required from the part file. The table, when used, will display all of the components that comprise the assembly. The table is designed to extend to the size required.

Format with BOM table used

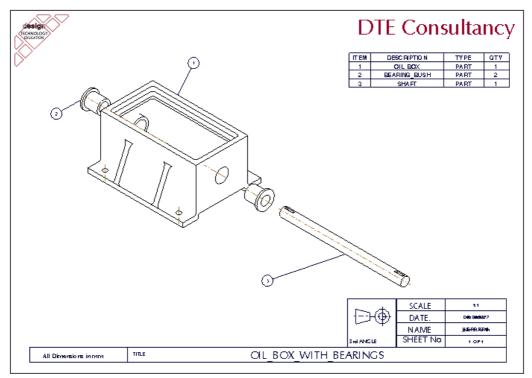

If you wish to place a BOM table into an existing drawing or on format without a bom table in place then follow the procedure in the next section.

Creating a Bill of Materials for a blank format.

Creating a BOM in a drawing is a three step process starting with an assembly open in **Pro**|ENGINEER.


- In the assembly create the bill of materials
- In the drawing of the assembly insert a BOM table
- Create BOM balloons for components

Creating the BOM for an assembly

- 1. Your assembly should be open in **Pro**|ENGINEER.
- 2. In standard mode...the BOM will display in the browser.
- 3. In the main toolbar across the top of the screen open the **Info** menu and select **Bill of Materials**
- 4. The BOM dialog opens



5. Click OK

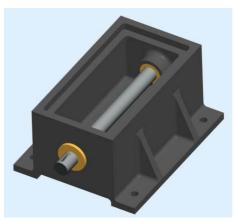


Info	
Ge	eometry Checks
Bi	ll of Materials
Fe	eature
C	omponent
M	odel
G	obal Reference Viewer
Pa	arent/Child
Re	elations and Parameters
di <mark>3</mark> ∎ Sv	witch Dimensions
Fe	eature List
M	odel Size
A	udit Trail
Se	ession Info 🔹 🕨

 The Browser in **Pro**|ENGINEER will open displaying the Bill of Materials for the assembly.

The BOM lists all the components, the quantity where there are multiples.

The columns give access to information about components and by clicking on a part it highlights in the graphics window.

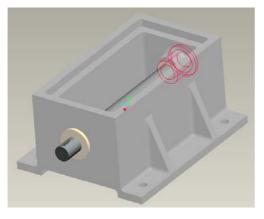

Bom Report : OIL_BOX_WITH_BEARINGS

Assemb	y OIL_BOX_	WITH_BEARINGS	contains:		
Quantity	IIIe Type	In Name	In Action	s	
1	Part	OIL_BOX	A *		3
2	Part	BEARING_	BUSH ⊿≯		3
1	Part	<u>SHAFT</u>	A *		3
Summa	ry of parts fo	r assembly OIL_E	BOX_WITH_BEARI	NGS:	
Quantity	Туре	In Name	Me Action	S	
1	Part	OIL_BOX	⊿ >	₽ ∎ (
2	Part	BEARING I	BUSH ⊿≯	₫ ₿ (N
2	i an				
2	Part	<u>SHAFT</u>	A *	₫₿ (

BOM tables

BOM tables are created from assemblies in HTML format and before they can be inserted into drawings you will need a template table file. You can download one called bom.tbl from the PTC Education Windchill Project Link site.

https://pds.ptc.com/Windchill/netmarkets/jsp/project/view.jsp?oid=project%7Ewt.projmg mt.admin.Project2%3A183631245&u8=1

Note: It is possible to create your own BOM table template with the necessary 'intelligence' to pull information from the models. (see next section)

Inserting a BOM table

- 1. With your drawing open on screen,
- In the Table Tab select
 Table from
 file. Table From File...
- 3. Browse for the **bom.tbl** and place it in the drawing somewhere.

You will see that it already has rows for each item.

4. Drag the table into position on the drawing.

Ta	Table ble From ble Table. elect Tabl	Annotate	BCX WITH BEARINGS	State to an and a state of the	
	ITEM	DES	CRIPTION	TYPE	άτγ
	1	0	IL_BOX	PART	1
	2		NG_BUSH	PART	2
	3		SHAFT	PART	1
		—	SCALE	±1	
		н⊕	DATE.	0-Dep	87
		•	NAME	John E. F	onth
			GLE SHEET NO		
	3 d AN	SLE	SHEET NO	1 05	1

Adding BOM balloons


- With the drawing open in Pro|ENGINEER.
- In the graphics window select the view you want to display BOM balloons.
- 3. In the Table Tab Left –Click to select BOM Balloons
- 4. Select **Set Region** and select the whole table.
- Select Create Balloon. By view is the default. Left-Click to select the view you want the balloons to attach. In this case the Isometric

Menu Manager BOM BALLOONS Set Region Clear Region Change Type Set Param ITEM DESCRIPTION TYPE Create Balloon BEARING BUSH Add Ref Balloon Alt Symbol Merge Detach Redistribute Split Done



The Isometric view will now have BOM balloons with leader arrows showing each of the components.

6. Click **Done/Return** to close the BOM Menu.

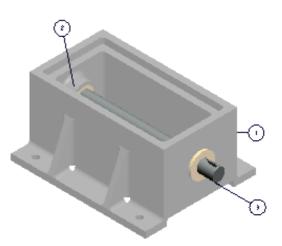

You have placed a table and all the balloons.

The balloons can be selected by **Left-Click** and dragged to reposition. To ensure the arrow points correctly:-

- 1. **Left-Click** to select the arrow leader.
- 2. Left-Click-Drag the arrow head to position it on the part.

SCALE 4.5

Note: You can only position the balloon on the relevant part.

To create a new Repeat Regions Table

There are two reasons to create a table that can pick up information from the model or assembly file. The first we have covered already which is the Bill of Materials or 'BOM' table. The second is a more complex table that can refer to instances of a part contained within a Family Table. The way this works is based on the principle of 'smart' table cells called repeat regions. These are user defined sections of a table that expand or contract to accommodate the amount of data that the associated model or assembly currently possesses.

1. The Extended Bill of Materials Table

The simple one we have shown so far is adequate for most projects however you may wish to add other columns, 'material used' for example.

Shown below is the simple BOM table taken from our format.

	ITEM	0	ESCRIPTION	TYPE	QTY
8	rpt.inde	x &	asm.mbr.name	&asm.mbr.type	&rpt.qty

The top row is normal text and will appear in the drawings as just that. The bottom row contains symbols, entered as text but will appear in the drawing as the information that the symbol extracts from the model or assembly in the same way as explained in the format creating section.

When the table is updated in the drawing, this is what appears.


ITEM	DESCRIPTION	TYPE	QTY
1	OIL_BOX	PART	1
2	BEARING_BUSH	PART	2
3	SHAFT	PART	1


To create a repeated region table.

There are three parts to the procedure; the first is to create the blank table with the requisite number of columns and rows. The second part is to define the repeat regions of the table. The third is to populate the table with the plain text headings and the parameters that call up the data.

- Create a table with 2 rows and X columns. (Where X is the number you require. You do not need any more than two rows since they will repeat as many times as is required.) See the section 'To add a Table'* for help on creating a table.
- 2. Populate the top row of cells with the headings required. *
- 3. To define the repeat region of the table.
 - a. Left-Click cell in the second row of the table.
 - b. Left-Click Table
 - c. Left-Click<Select< Row The row is now highlighted
 - d. With the row still highlighted
 Right-Click and select Add
 Repeat Region from the floating menu.
 - e. The row is now a set of repeat region cells

Note: A repeat region doesn't have to be a row it can be anything from a single cell to a block of several cells depending on your need.

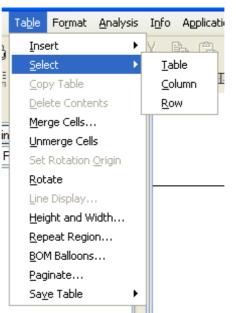

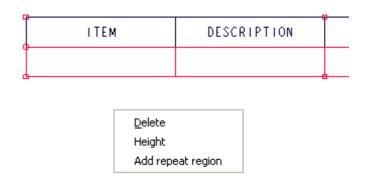


To enter the report parameters into the repeat region

- 1. Right-Click in the target cell.
- 2. Left-Click Properties from the floating menu.



- 3. Left-Click Report Symbol.
- 4. We are now presented with a set of parameters from which to choose; depending on choice the next menu will appear. Here we have chosen 'asm ..' then 'mbr ..' then 'param..' then 'unit..'. The 'UP..' parameter allows us to return to the previous menu. Once all the parameters are defined the complete string will appear in the Note **Properties**. Once the whole table is complete a Double Left-Click on any parameter will bring up the symbols again. A Right-Click on a selected cell will bring up the **Note Properties** for editing.
- 5. It is possible to type in the data direct to the cell using the parameters in Appendix 2. The "&rpt" must precede any parameter used. If a User Defined parameter is inserted this will need to be added when the format is used in much the same way as the '&pupil_name'

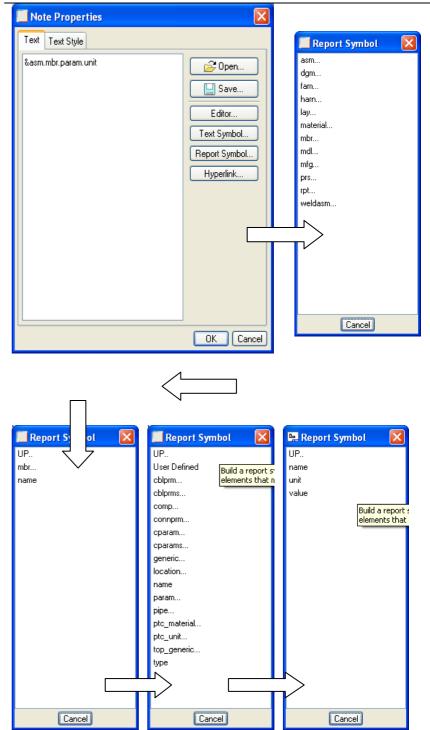

4. The table will now look like this once complete.

	ITEM	DESCRIPTION	ТҮРЕ	οτγ	μ
ļ	asm.mbr.param.unit	asm.mbr.param.name	asm.mbr.pt<⊥materi∙	od srfl Jføb MA _P	ð Raidi Leif Alfie

The parameters will be replaced by the data drawn from the part and assembly files, or from family tables.

Appendix 1. Setting up and editing a Drawing Options File.

The drawing options file, (*.dtl) where * may be 'bs8888', 'iso' or 'ansi', exists to set the default values for many options that appear in drawing. Unless it it changed for a particular drawing the one set in the config pro file will contain all of this information. Great care should be taken if these default files are edited. However it is possible to copy this file and attach it to the active drawing or template.

- 1. Have the Template open on the screen
- 2. Left-Click File<Properties
- 3. Select Drawing Options from the Menu Manager

nowing:		Sort		
Locive Drawing	*	🕞 🚼 Ву	Category	
	Value	Default	Status	Description
ctive Drawing				
These options control text not subject to other options				
drawing_text_height	5.000000	0.156250	•	Sets default text height for all text in the drawing using value set for "d
text_thickness	0.350000	0.000000	۲	Sets default text thickness for new text after regeneration and existing
text_width_factor	0.850000	0.800000		Sets default ratio between the text width and text height. The system r
These options control views and their annotations				
broken_view_offset	5.000000	1.000000	•	Sets the offset distance between the two halves of a broken view.
create_area_unfold_segmented	yes *	yes		Makes the display of dimensions in area unfolded cross-sectional view
def_view_text_height	0.000000 ×	0.000000		Sets the height of text in view names used in view notes and in arrow:
def_view_text_thickness	0.000000 ×	0.000000		Sets default thickness for new text in view names used in view notes
detail circle line style	phantomfont	solidfont		Sets line font for circles indicating a detailed view in a drawing.
detail_circle_note_text	DEFAULT *	default		Determines the text displayed in non-ASME-94 detail view reference n
detail view circle	on *	on		Sets display of a circle drawn about the portion of a model that is deta
half view line	symmetry	solid	-	Determine the display of symmetry lines. If set to "solid," draws solid lin
model_display_for_new_views	follow_environment *	follow environment		Determines line display style of model when creating views. If set to "F
	third_angle *	third_angle		Determines method for creating projection views.
show_total_unfold_seam	ves *	ves		Determines if seams (the edges of the cutting plane) in total unfolded
	default *	default		Determines tangent edge display of model when creating views. If set
wiew note	std iso	std ansi	2	If set to "std din," creates a view-related note with the words "SECTI
view_rote	300	n		When adding the first view of a model, if view scale format is decima
	ratio colon	decimal	-	Determines the display of a scale as either a decimal, a fraction or a ra
	circle	uccimar	-	Determines the default boundary type on the parent view of a detailed
detail_view_boundary_type detail_view_scale_factor	2.000000		-	Determines the default scaling factor between a detailed view and its
	2.000000			Determines the detault scaling factor between a detailed view and its
These options control cross sections and their arrows	2.500000	0.187500	-	Sets the length of the arrow head on the cross-section cutting plane a
crossec_arrow_length				
crossec_arrow_style	head_online 1.000000	tail_online		Determines which end of cross-section arrows - the head or the tail - to
crossec_arrow_width		0.062500	•	Sets the width of the arrow head on the cross-section cutting plane ar
crossec_text_place	after_head *	after_head		Sets the location of cross-section text relative to the cross-section cut
crossec_type	new_style	old_style	•	Controls whether appearance of planar cross-sections conforms to the
cutting_line	std_iso	std_ansi	•	Controls display of cutting line. If set to "std_ansi," uses the ANSI star
cutting_line_adapt	no *	no	٠	Controls display of line fonts used to show cross-sectional arrows. If se
cutting_line_segment	10.000000	0.000000	۲	Specifies the length in drawing units of the thickened portion of a non-
	> <			
ption:	<u>V</u> alue:			
				🗸 🖌 Add / Char

The file opens and can be edited. Select the option to edit and change its value in the right hand box. Information on the parameter can be read on the Right. Some options require a numerical value others have a range of options that can be selected using the drop down menu.

- 1. Left-Click Add/Change<Apply; then move on to the next parameter to alter.
- 2. Left-Click Close and Save the file.

The only parameters you will need to change to comply with BS8888 are as follows:-

'drawing_units'	this is set 'mm' other values are affected by this.
'drawing_text_height'	Set as a multiple of the drawing units; e.g. 5 for 5mm high text.
'decimal_marker'	the default in COMMA change to PERIOD
'view_scale_format'	the default is decimal, change to ratio_colon e.g. 1:2
'view_scale_denominator'	the default is 0 change a denominator that is suitable for the drawing or a large number if many different scales are required. A good general no. is 300

You may change some of the others but I would advise caution and test as you go.

To edit the global *dtl file you can open it in a Text Editor and change the parameters manually. **CAUTION**: This could destabilise your installation

Appendix 2 System Parameters for Drawings

(Taken from the **Pro**|ENGINEER - Help Centre)

PARAMETER NAME	DEFINITION
&d#	Displays a dimension in a drawing note, where # is the dimension ID.
&ad#	Displays an associative dimension in a drawing note, where # is the dimension ID.
&rd#	Displays a reference dimension in a drawing note, where # is the dimension ID.
&p#	Displays an instance number of a pattern in a drawing note, where # is the pattern ID.
&g#	Displays a gtol in a drawing note, where # is the gtol ID.
& <param_name></param_name>	Displays a user-defined parameter value in a drawing note.
& <param_name>:att_cmp</param_name>	An object parameter that indicates the parameters of the component to which a note is attached.
& <param_name>:att_edge</param_name>	An object parameter that indicates the parameters of the edge to which a note is attached.
& <param_name>:att_feat</param_name>	An object parameter that indicates the parameters of the feature to which a note is attached.
& <param_name>:att_mdl</param_name>	An object parameter that indicates the parameters of the model to which a note is attached.
& <param_name>:att_pipe_bend</param_name>	An object parameter that indicates the parameters of the pipe bend to which a note is attached.
& <param_name>:att_spool</param_name>	An object parameter that indicates the parameters of the spool to which a note is attached.
& <param_name>:EID_<edge_name></edge_name></param_name>	An object parameter that references edges.
& <param_name>:FID_<feat_id></feat_id></param_name>	An object parameter that includes a feature parameter in a note by ID.
& <param_name>:FID_<feat_name></feat_name></param_name>	An object parameter that includes a feature

	parameter in a note by name.
& <param_name>:SID_<surface_name></surface_name></param_name>	An object parameter that references surfaces.
&angular_tol_0_0	Specifies the format of angular tolerance values in a note from one to six decimal places.
¤t_sheet	Displays a drawing label indicating the current sheet number.
&det_scale	Displays a drawing label indicating the scale of a detailed view. You <i>cannot</i> use this parameter in a drawing note. Pro ENGINEER creates this parameter with a view and places it in notes automatically. You can modify its value, but you cannot call it out in another note.
&dtm_name	Displays datum names in a drawing note, where name is the name of a datum plane. The datum name in the note is read-only, so you cannot modify it; unlike dimensions, a datum name does not disappear from the model view if included in a note. Pro ENGINEER encloses its name in a rectangle, as if it were a set datum.
&dwg_name	Displays a drawing label indicating the name of the drawing.
&format	Displays a drawing label indicating the format size (for example, A1, A0, A, B, and so forth).
&linear_tol_0_0	Specifies the format of dimensional tolerance values in a note from one to six decimal places.
&model_name	Displays a drawing label indicating the name of the model used for the drawing.
¶meter:d	Adds drawing parameters to a drawing note, where <i>parameter</i> is the parameter name and <i>:d</i> refers to the drawing.
&pdmdb	Displays the database of origin of the model.
&pdmrev	Displays the model revision.
&pdmrev:d	Displays the revision number of the model (where :a

	refers to the drawing).
&pdmrl	Displays the release level of the model.
&scale	Displays a drawing label indicating the scale of the drawing.
&scale_of_view_detailed_bar	
&sym(<symbolname>)</symbolname>	Includes a drawing symbol in a note, where symbolname is the name of the symbol.
&todays_date	Displays a drawing label indicating the date on which the note was created in the form dd-mm-yy (for example, 2-Jan-92). You can edit it as any other nonparametric note, using Text Line or Full Note.
	If you include this symbol in a format table, Pro ENGINEER evaluates it when it copies the format into the drawing.
	To specify the initial display of the date in a drawing, use the configuration file option "todays_date_note_format."
&total_sheets	Displays a drawing label indicating the total number of sheets in the drawing.
&type	Displays a drawing label indicating the drawing model type (for example, part, assembly, etc.).
&view_name	Displays a drawing label indicating the name of the view. You <i>cannot</i> use this parameter in a drawing note. Pro ENGINEER creates it with a view and places it in notes automatically. You can modify its value, but you cannot call it out in another note.
&view_scale	Displays a drawing label indicating the name of a general scaled view. You <i>cannot</i> use this parameter in a drawing note. Pro ENGINEER creates it with a view and places it in notes automatically. You can modify its value, but you cannot call it out in another note.

Appendix 3: To Control the Format of the Date

The configuration file option todays_date_note_format controls the initial format of the date displayed in a drawing. The format for the setting is a string consisting of three portions: the year, the month, and the date. You can enter the portions in any order. The default value is %dd-%Mmm-%yy.

- Year
- %yy, for 97
- %yyyy, for 1997

Month (if the month contains two digits (for example, 10),% mm, % m, or % m all produce the same result)

- %Mmm, for Jan
- %MMM, for JAN
- %Month, for January
- %MONTH, for JANUARY
- %mm, for 01
- %m, for 1
- % m, for <space>1

Date (if 2 digits are needed to represent the date, all three are the same. Therefore, "%dd %mm %yy" produces "01 01 97," and "%MMM %d %yyyy" produces "JAN 1 1997")

- %dd, for 01
- %d, for 1
- % d, for <space>1.

The following formats are also valid:

- %dd-%Mmm-%yy (= 01-Jan-97)
- %mm/%dd/%yy (= 01/01/97)
- %Mmm %dd,%yyyy (= Jan 01, 1997)

Appendix 4. To create a multiple parts drawing

There will be times when an assembly drawing is not enough; you may need to create a sheet that contains detail drawings of several parts of the assembly. Of course you could create a sheet for each part but occasionally you may want to put several parts on the same drawing sheet.

1. Open the new sheet or a blank format **Right-Click** and select **Drawing Models**.

Ensure the **Layout** tab is selected in the Ribbon Interface

- 2. Select Drawing models
- 3. Select Add Model
- 4. The **Open** dialogue box open.

5. Open the part you want to add to the drawing.


6. **Right-Click** on the sheet and select **Insert General view**.

7. Proceed as for any other type of view.

8. Repeat to add further parts to the sheet.

9. Note: Each part will be placed with a scale selected to fit the sheet. To ensure that the scale is known for each, check the **Custom Scale** button under the scale tab of the **Drawing View** dialogue box. This will put a scale against each part. Notes can be added as required.


See right for an example.

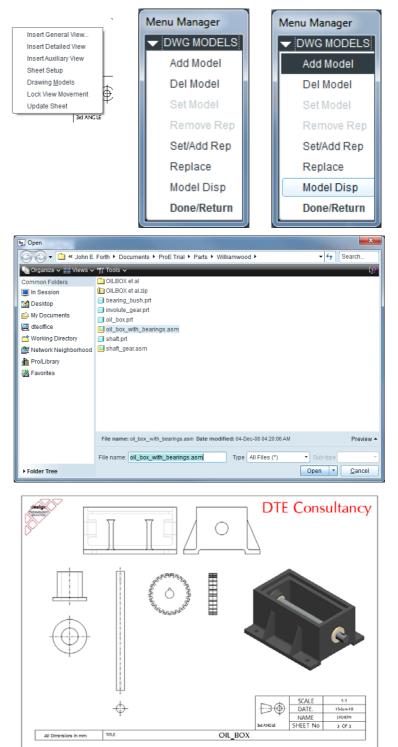

- To set the model for use, **Right-Click** and select **Drawing** <u>Models</u>.
- 2. Left-Click Set Model and a list of the models associated with the drawing appear
- 3. Left-Click the model name to set.
- 4. Left-Click Done/Return

 To Add a New Sheet, Left-Click New sheet on the Layout Tab.

To Move to a sheet Left-Click on the particular tab as opposite

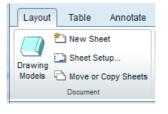



Insert General View...

Insert Detailed View Insert Auxiliary View

€

3rd ANG LE

Sheet Setup Drawing <u>M</u>odels Lock View Movement

Update Sheet

Menu Manager

Add Model

Del Model Set Model

Remove Rep Set/Add Rep

Done/Return

DRAW MODELS
BEARING_BUSH
INVOLUTE_GEAR
OIL_BOX

OIL_BOX_WITH_BEARINGS

Replace Model Disp

SHAFT

John Forth – June 2010