



# **WebSocket-based Edge MicroServer Developer's Guide**

**Version 5.4.0  
November 2017**

---

**Copyright © 2017 PTC Inc. and/or Its Subsidiary Companies. All Rights Reserved.**

User and training guides and related documentation from PTC Inc. and its subsidiary companies (collectively “PTC”) are subject to the copyright laws of the United States and other countries and are provided under a license agreement that restricts copying, disclosure, and use of such documentation. PTC hereby grants to the licensed software user the right to make copies in printed form of this documentation if provided on software media, but only for internal/personal use and in accordance with the license agreement under which the applicable software is licensed. Any copy made shall include the PTC copyright notice and any other proprietary notice provided by PTC. Training materials may not be copied without the express written consent of PTC. This documentation may not be disclosed, transferred, modified, or reduced to any form, including electronic media, or transmitted or made publicly available by any means without the prior written consent of PTC and no authorization is granted to make copies for such purposes. Information described herein is furnished for general information only, is subject to change without notice, and should not be construed as a warranty or commitment by PTC. PTC assumes no responsibility or liability for any errors or inaccuracies that may appear in this document.

The software described in this document is provided under written license agreement, contains valuable trade secrets and proprietary information, and is protected by the copyright laws of the United States and other countries. It may not be copied or distributed in any form or medium, disclosed to third parties, or used in any manner not provided for in the software licenses agreement except with written prior approval from PTC.

UNAUTHORIZED USE OF SOFTWARE OR ITS DOCUMENTATION CAN RESULT IN CIVIL DAMAGES AND CRIMINAL PROSECUTION. PTC regards software piracy as the crime it is, and we view offenders accordingly. We do not tolerate the piracy of PTC software products, and we pursue (both civilly and criminally) those who do so using all legal means available, including public and private surveillance resources. As part of these efforts, PTC uses data monitoring and scouring technologies to obtain and transmit data on users of illegal copies of our software. This data collection is not performed on users of legally licensed software from PTC and its authorized distributors. If you are using an illegal copy of our software and do not consent to the collection and transmission of such data (including to the United States), cease using the illegal version, and contact PTC to obtain a legally licensed copy.

**Important Copyright, Trademark, Patent, and Licensing Information:** See the About Box, or copyright notice, of your PTC software.

**UNITED STATES GOVERNMENT RESTRICTED RIGHTS LEGEND**

PTC software products and software documentation are “commercial items” as that term is defined at 48 C.F.R. 2.101. Pursuant to Federal Acquisition Regulation (FAR) 12.212 (a)-(b) (Computer Software) (MAY 2014) for civilian agencies or the Defense Federal Acquisition Regulation Supplement (DFARS) at 227.7202-1 (a) (Policy) and 227.7202-3 (a) (Rights in commercial computer software or commercial computer software documentation) (FEB 2014) for the Department of Defense, PTC software products and software documentation are provided to the U.S. Government under the PTC commercial license agreement. Use, duplication or disclosure by the U.S. Government is subject solely to the terms and conditions set forth in the applicable PTC software license agreement.

PTC Inc., 140 Kendrick Street, Needham, MA 02494 USA

# Contents

Introducing the ThingWorx WS EMS .....	6
Components to Install .....	7
WS EMS and ThingWorx.....	7
Features .....	9
Working with the ThingWorx WS EMS .....	12
Downloading and Installing ThingWorx WS EMS.....	13
Getting Started with the ThingWorx WS EMS.....	16
Additional Configuration of WS EMS .....	30
REST APIs and WS EMS.....	56
Updating, Deleting, and Executing with REST APIs .....	58
Reading and Writing Properties Using the REST API.....	60
Transferring Files through the REST API .....	61
Configuring WS EMS to Listen on IP Other Than localhost.....	63
REST APIs Supported by WS EMS .....	64
Working with the Lua Script Resource.....	75
Getting Started with the Lua Script Resource .....	76
Installing the Lua Script Resource Distribution .....	76
Running the Lua Script Resource.....	79
Configuration of the Lua Script Resource.....	80
Appendix A.Setting Up Secure Communications for WS EMS and LSR .....	97
Security Concepts .....	98
Insecure Configuration — for Testing ONLY .....	99
Minimal Security .....	100
Basic Security .....	101
Medium Security.....	102
High Security.....	104
Appendix B.Troubleshooting the WS EMS and the LSR .....	106
Troubleshooting the WS EMS.....	107
Troubleshooting the Lua Script Resource .....	108
Appendix C.Base Types.....	109
ThingWorx Base Types .....	110
Appendix D.Remote Things .....	112
About Remote Things .....	113
Configuring Remote Things.....	113
Configuring Properties for Remote Things .....	114
Configuring Services for Remote Things.....	114

---

# About This Guide

The ThingWorx WebSocket-based Edge MicroServer (WS EMS) is used to provide a simple means for remote devices to connect quickly and securely to ThingWorx.

This document describes how to use the WS EMS.

---

## Note

This document is accurate as of this release and is subject to change. For the latest documentation, see the ThingWorx Edge SDKs and WebSocket-Based Edge MicroServer Help Center that is available at PTC ThingWorx eSupport, [http://support.ptc.com/help/thingworx\\_hc/thingworx\\_edge\\_sdks\\_ems/](http://support.ptc.com/help/thingworx_hc/thingworx_edge_sdks_ems/).

---

## Audience

This document is intended for programmers with at minimum a basic knowledge of JSON and the Lua scripting language. In addition to programming knowledge, you need to be familiar with ThingWorx, its concepts, and ThingWorx Composer.

## Technical Support

Contact PTC Technical Support via the PTC Web site, phone, fax, or e-mail if you encounter problems using your product or the product documentation.

For complete details, refer to Contacting Technical Support in the *PTC Customer Service Guide*. This guide can be found under the Related Resources section of the PTC Web site at:

<http://www.ptc.com/support/>

The PTC Web site also provides a search facility for technical documentation of particular interest. To access this search facility, use the URL above and search the knowledge base.

You must have a Service Contract Number (SCN) before you can receive technical support. If you do not have an SCN, contact PTC Maintenance Department using the instructions found in your *PTC Customer Service Guide* under Contacting Your Maintenance Support Representative.

## Documentation for PTC ThingWorx Products

You can access PTC ThingWorx documentation, using the following resources:

- [PTC ThingWorx Edge SDKs and WebSocket-Based Edge MicroServer Help Center](#) — This Help Center includes documentation for all of the ThingWorx Edge SDKs and for the ThingWorx WebSocket-Based Edge MicroServer (WS

---

EMS). You can browse the entire documentation set, or use the search capability to perform a keyword search.

- [PTC ThingWorx Connection Services Help Center](#) — This Help Center includes documentation for the ThingWorx Connection Server, the ThingWorx AWS IoT Connector, and the ThingWorx Azure IoT Hub Connector. You can browse the entire documentation set, or use the search capability to perform a keyword search.
- [PTC ThingWorx Help Centers](#) — These Help Centers for ThingWorx are organized by major releases (for example, 6.0 and 7.0). Each Help Center includes documentation for the PTC ThingWorx host, ThingWorx Composer, and ThingWorx Mashup Builder. You can browse the entire documentation set, or use the search capability to perform a keyword search.
- [PTC ThingWorx Reference Documentation](#) — The Reference Documents pages provide access to the PDF documents available for all PTC ThingWorx products.

A Service Contract Number (SCN) is required to access the PTC documentation from the Reference Documents website. If you do not know your SCN, see “Preparing to contact TS” on the Processes tab of the PTC Customer Support Guide for information about how to locate it: <http://support.ptc.com/appserver/support/csguide/csguide.jsp>. When you enter a keyword in the Search Our Knowledge field on the PTC eSupport portal, your search results include both knowledge base articles and PDF guides.

## Comments

PTC welcomes your suggestions and comments on our documentation. To submit your feedback, you can:

- Send an email to [documentation@ptc.com](mailto:documentation@ptc.com). To help us more quickly address your concern, include the name of the PTC product and its release number with your comments. If your comments are about a specific help topic or book, include the title.
- Click the feedback icon in any PTC ThingWorx Help Center toolbar and complete the feedback form. The title of the help topic you were viewing when you clicked the icon is automatically included with your feedback.

---

# 1

## Introducing the ThingWorx WS EMS

Components to Install .....	7
WS EMS and ThingWorx .....	7
Features .....	9

This section provides an overview of the ThingWorx WebSocket-based Edge MicroServer (WS EMS), explaining the relationship between the ThingWorx WS EMS and a ThingWorx instance and summarizes the purpose and key features of the ThingWorx WS EMS.

---

## Components to Install

To connect to and integrate with a ThingWorx instance, you can install two separate software components remotely on edge devices:

- **ThingWorx WebSocket-based Edge MicroServer (WS EMS)** — The WS EMS is the communication conduit that provides a secure communication channel to the ThingWorx instance. The WS EMS is a separate process, so it can support communications from one or more devices. In addition, the WS EMS provides a RESTful HTTP interface, allowing other applications to communicate with it. The WS EMS translates the REST APIs into AlwaysOn protocol messages that it then sends to a ThingWorx instance. For information about the REST interface, refer to [REST APIs and WS EMS on page 56](#).
- **Lua Script Resource** — An application for host devices that uses the Lua scripting language to integrate with them. The Lua Script Resource is an optional component. You do not need it to run the WS EMS. As an alternative, you can write your own application that uses HTTP and communicates directly with the WS EMS. For information about the Lua Script Resource, refer to [Getting Started with the Lua Script Resource on page 76](#).

For instructions on downloading and installing the WS EMS, see [Downloading and Installing ThingWorx WS EMS on page 13](#).

## WS EMS and ThingWorx

The WS EMS is a stand-alone application that is installed on a remote device, and establishes AlwaysOn™, bidirectional communications between the device and a ThingWorx host. The WS EMS uses a small footprint, and supports a variety of operating systems and architectures. This flexibility allows the WS EMS to work with a large number of devices to provide an easy way to establish communication between an edge device and a ThingWorx server. You can use ThingWorx Composer to interact with the edge devices that are running the WS EMS, and using ThingWorx Mashup Builder, you can build interactive, browser-based mashups for users who monitor the devices..

---

## The Connection Sequence

The process of connecting to ThingWorx consists of three main steps: Connect, Authenticate, and Bind. The WS EMS performs the first two steps. Then, the WS EMS works with the Lua Script Resource or a custom application to perform the third step. Here are the steps in more detail:

1. **Connect** — The WS EMS opens a physical WebSocket to ThingWorx, using the host and port specified in its configuration file. If configured, SSL/TLS is negotiated at this time.
2. **Authenticate** — The WS EMS sends an authentication message to ThingWorx. This message must contain an Application Key that was previously generated by ThingWorx.

Upon successful authentication, the WS EMS can interact with the ThingWorx host, according to the permissions applied to its Application Key. For the WS EMS, this implies that any client that makes HTTP calls to its REST interface can access functionality on ThingWorx. For this reason, the WS EMS is set by default to listen for HTTP connections on `localhost` (port 8000). You can change this listening port in the configuration file for the WS EMS.

At this point, the WS EMS can make requests to the ThingWorx and interact with it, much like an HTTP client can interact with the REST interface of ThingWorx, but ThingWorx cannot direct requests to the Edge device.

3. **Bind** — To enable ThingWorx to send requests to the WS EMS, the WS EMS works with the Lua Script Resource (or custom application) to send a BIND message to ThingWorx on behalf of the devices. Note that this step is optional, if you do not want the devices to receive and process requests from ThingWorx. It is required if you want to transfer files from ThingWorx to your devices or if you want to use tunneling.

The BIND message can contain one or more names or identifiers for the devices. Note that corresponding *remote things* must have been created on ThingWorx to represent your edge devices. Remote things are things that are created using the **RemoteThing** thing template (or one of its derivatives) in ThingWorx Composer. When it receives the BIND message, ThingWorx associates the matching remote things on ThingWorx with the WebSocket that received the BIND message. This association allows ThingWorx to use the WebSocket to send requests to the edge devices, and update the **isConnected** and **lastConnection** time properties for the corresponding remote things on ThingWorx.

The WS EMS can send an UNBIND message to the ThingWorx that removes the association between the remote things on ThingWorx and the WebSocket. The **isConnected** property is then updated to **false**.



---

## Deployment

Once you have properly configured and integrated the ThingWorx WS EMS and Lua Script Resource (or your custom application), you can deploy them in one of the following ways:

- **Embedded Deployment** — Integrate the WS EMS and Lua Script Resource (or your custom application) directly into the application software stack of the edge device.
- **Tethered Deployment** — Deploy the WS EMS to a simple black-box that connects to the diagnostic and sensor ports of an intelligent device. Deploy the Lua Script Resource or your custom application either on the same black-box, or on the intelligent device.
- **Networked Gateway Deployment** — Deploy the WS EMS on a simple server appliance that exists on the same network as a set of intelligent devices (for example, sensor networks or clusters of network-capable equipment). Then, deploy the Lua Script Resource or your custom application on other hardware on the same local network.

## Configuration Overview

To start connecting your edge devices to ThingWorx, you need to do the following:

1. Begin the initial configuration of the ThingWorx WS EMS, as described in [Working with the ThingWorx WS EMS on page 12](#)
2. Once you have successfully connected to the ThingWorx, complete the full configuration of the WS EMS according to your needs. Refer to the section, [Viewing All Configuration Options on page 30](#).
3. To use the Lua Configuration Script to host remote things for integration with ThingWorx, begin the initial configuration of the Lua Script Resource, as described in [Getting Started with the Lua Script Resource on page 76](#).

## Features

The ThingWorx WS EMS includes the features that are described in the sections below. Together, these features allow your edge devices to communicate with ThingWorx.

---

## AlwaysOn™ Protocol

The ThingWorx AlwaysOn™ protocol is a binary protocol that uses the WebSocket protocol as its transport. The WS EMS uses the AlwaysOn protocol for communications with ThingWorx. This protocol provides a number of benefits:

- The devices that are running a WS EMS initiate all connections, which eliminates the need to open ports for inbound connections if the edge devices are deployed behind a firewall.
- The AlwaysOn protocol uses HTTP and the standard HTTP/HTTPS ports (80 and 443) to initiate and maintain connectivity, which eliminates the need for opening secondary ports for outbound communications.
- The protocol supports the TLS standard for securing the connection to ThingWorx. See the section on security below for more information.
- Once a connection is established, AlwaysOn binary messages are passed between the edge device and ThingWorx. AlwaysOn binary messages do not require re-initiating the HTTP connection for each request and therefore do not require the additional overhead of the standard HTTP messages. A ping/pong exchange of messages between a WS EMS and ThingWorx keep the connection alive during periods when the connection might be closed due to inactivity..
- The connections are persistent, which allows ThingWorx to make outbound requests to an edge device. ThingWorx can send requests to read or write properties, and to invoke services at the device, all with very low latency.

## Security

The following default settings for the configuration of WS EMS support secure communications:

- Encryption — By default, the WS EMS always attempts to connect to ThingWorx using TLS.
- Certificates — By default, the WS EMS attempts to validate the certificate presented by ThingWorx during TLS negotiation.

---

 **Note**

Starting with release 5.4.0 of WS EMS, distribution bundles for both Linux and Windows that have `openssl` in their file names provide OpenSSL binaries, v.1.0.2L, for secure connections. The distribution bundles with `axtls` in their file names provide the axTLS library. By choosing the distribution bundle, you choose the backend security libraries for your WS EMS.

The WS EMS distribution bundles that include `openssl` in their names also include the OpenSSL FIPS Object Module 2.0.2 (FIPS 140-2 certificate #1747), which has been certified to comply with the FIPS 140-2 standard security requirements for cryptographic modules by the National Institute of Standards and Technology of the United States of America, as the United States FIPS 140-2 Cryptographic Module Validation Authority. FIPS mode is configurable (disabled by default) and works on supported Linux and Windows platforms.

---

## HTTP Interface for REST APIs

In addition to the AlwaysOn interface, the WS EMS has an HTTP interface that supports REST API calls. This HTTP interface allows other applications to interact with ThingWorx through the AlwaysOn connection of the WS EMS. Since this other interface is HTTP, a custom application or the Lua Script Resource can be on a machine that is separate from the WS EMS and still communicate with it. The HTTP/REST interface of the WS EMS is a reflection of the REST interface of ThingWorx.

## Lua Script Resource

The optional Lua Script Resource is a statically linked application that is used to run Lua scripts and configure things (devices) for integration with the host system. The Lua Script Resource supports secure HTTP connections, and as of release 5.4.0, you can customize the certificate/private key that you want to use.

---

# 2

## Working with the ThingWorx WS EMS

Downloading and Installing ThingWorx WS EMS .....	13
Getting Started with the ThingWorx WS EMS .....	16
Additional Configuration of WS EMS .....	30

---

# Downloading and Installing ThingWorx WS EMS

The ThingWorx WS EMS is available from PTC and is distributed as a .zip file.

To install the package, follow these steps:

1. The distribution bundle for WS EMS is available through the PTC Support site, Order or Download Software Updates page, at [https://support.ptc.com/appserver/cs/software\\_update/swupdate.jsp](https://support.ptc.com/appserver/cs/software_update/swupdate.jsp). If you are not already logged in, you will be prompted to log in before access to this page is granted.
2. On the Order or Download Software Updates page, click the link appropriate to your situation:
  - Download Software by Sales Order Number — if you are downloading for the first time and have your Sales Order Number (SON).
  - Order or Download Software Updates — if you have a support agreement with PTC that allows software downloads.
3. Either way, on the Customer Search page, enter your Customer Name and Customer Number and click **Next**.
4. If you chose to download by SON, enter your SON in the page that appears, and click **Submit**. Otherwise, continue to the next step.
5. On the PTC Software Download page, select the product family, **ThingWorx Edge MicroServers**.
6. Click the plus sign to expand the latest major release, which is at the top of the list (e.g., **5.4**).
7. Expand **ThingWorx Edge MicroServers**.
8. Expand **Most Recent Datecode**.
9. Choose and download the package that is correct for the operating system, SSL/TLS implementation, and platform that you want to use. Note that the packages fall into two categories, those that contain the OpenSSL libraries and those that contain the axTLS library. The following packages for Linux and Windows contain OpenSSL libraries, as indicated by the `openssl` in the name of the file:
  - `microserver-linux-arm-hwfp-openssl-version.zip`
  - `microserver-linux-arm-openssl-version.zip`
  - `microserver-linux-x86_32-openssl-version.zip`

- `microserver-linux-x86_64-openssl-version.zip`
- `microserver-windows-x86_32-openssl-version.zip`

 **Note**

Only the packages with `openssl` in their file name support FIPS. If you try to enable FIPS using the packages with `axtls` in their file name, the WS EMS will not start.

The following packages for Linux and Windows contain axTLS library, as indicated by the “axtls” in the name of the package file:


- `microserver-linux-arm-hwfp-axtls-version.zip`
- `microserver-linux-arm-axtls-version.zip`
- `microserver-linux-x86_32-axtls-version.zip`
- `microserver-linux-x86_64-axtls-version.zip`
- `microserver-windows-x86_32-axtls-version.zip`



10. After downloading the package, select a location for extracting the WS EMS distribution archive on the file system of your computer.
11. Unzip the distribution archive.

You are ready to start configuring the WS EMS for your edge devices.

## WS EMS Distribution Contents

When unzipped, the ThingWorx WS EMS distribution creates the folder, `\microserver`, which contains the following files and subdirectories:

Item	Description
<b>Files</b>	
<code>wsems.exe</code>	<p>The WS EMS executable that is used to run the Edge MicroServer.</p> <p> <b>Note</b></p> <p>Linux users must be granted permissions to this file.</p> <p>If you require FIPS support on the supported Windows platforms (win32), make sure you have the FIPS package, which contains the <code>wsems-fips.exe</code> file.</p>
<code>libeay32.dll</code> and <code>ssleay32.dll</code>	OpenSSL Shared Library DLLs (dynamic linked libraries)..
<code>luaScriptResource.exe</code>	The Lua utility that is used to run Lua scripts, configure remote things, and

Item	Description
<b>Files</b>	
	<p>integrate with the host system..</p> <p> <b>Note</b></p> <p>Linux users must be granted permissions to this file.</p> <p>If you require FIPS support on supported Windows platforms (win32), make sure you have the FIPS package, which contains the file, luaScriptResource-fips.exe, instead.</p>
<b>Subdirectories</b>	
\doc	Directory that contains the release notes (PDF) and the document, <i>ThingWorx WebSocket-based Edge MicroServer (WS EMS) Developer's Guide</i> for this release (also a PDF). Also contains the top-level files for the luadoc that provides assistance with the Lua Script Resource.
\doc\lua	Subdirectory that contains the luadoc for the Lua Script Resource.
\etc	Directory that contains configuration files and directories for the luaScriptResource utility.
\etc config.json.docu mented	<p>A REFERENCE file that contains all of the configuration options available for the WS EMS plus comments to guide you through the options.</p> <p> <b>Caution</b></p> <p>Do not attempt to use config.json.documented to run your WS EMS. It is intended as a reference. It is NOT as a valid JSON file that you can use to run WS EMS</p>
\etc config.json.com plete	A valid JSON file that contains all the configuration options available for the WS EMS.
\etc config.json.minimal	A reference file that contains the basic settings that are required to establish a connection.
\etc config.lua.example	A reference file that contains a basic configuration for the luaScriptResource utility. A config.lua file is required to run the Lua engine.
\etc\community	Directory from which third-party Lua libraries are deployed. Examples of these libraries include the Lua socket library and the Lua XML parser, .
\etc\custom	Directory that will contain your custom scripts and templates.
\etc\custom\scripts	Directory from which custom integration scripts are deployed. It also contains an example script, called sample.lua.
\etc\custom\ templates	Directory that contains an example template, called example.lua, and that is used to deploy custom templates.
\etc\thingworx	Directory that contains ThingWorx-specific Lua files that are used by the Lua Script Resource (LSR). Do not modify this directory and its contents because an upgrade will overwrite any changes.
\install_services	Directory that contains the install.bat file for Windows bundles or the following files for Linux bundles: install, tw_luaScriptResourced, and tw_microserverd.

---

## Libraries

The ThingWorx WS EMS uses the following libraries on Linux platforms:

- libpthread
- libstdc++
- libgcc\_s
- libc
- libm (math library)

The Lua Script Resource also has libdl (dynamic loader).

### Versions of the Libraries for Supported Platforms

The following table shows the supported platforms for WS EMS and the versions of the libraries that you can use with them:

Platform	libc	libpthread	libstdc++	libgcc	libm	libdl (LSR only)
Linux ARM	2.9 (with gcc version 4.3.3)	2.9	6.0.10	4.3.3	2.9	2.9
	2.8 (with gcc version 4.6.0)	2.9	6.0.10	4.3.3	2.9	2.8
Linux ARM HWFPU	2.8	2.8	6.0.15	4.6.0	2.8	2.8
Linux x86-32	2.8	2.8	6.0.10	4.3.2	2.8	2.8
Linux x86-64	2.8	2.8	6.0.15	4.6.0	2.8	2.8
Linux coldfire	2.11.1	2.11.1	6.0.14	4.5.1	2.11.1	2.11.1
Win32	XP or later	n/a	n/1	n/a	n/a	n/a

## Getting Started with the ThingWorx WS EMS

This section provides an overview of how to install, initially configure, and run the ThingWorx WS EMS.

### Running the ThingWorx WS EMS

The ThingWorx WS EMS can be run either from a command line or as a service to establish a connection to ThingWorx.



---

## Running WS EMS from a Command Line

The ThingWorx WS EMS can be run from a command line as follows:

1. Open a command window or terminal session on the system or device that is hosting the WS EMS.
2. Change to the directory, `\microserver\etc`.
3. For a basic configuration, copy the file, `config.json.minimal`, and rename it to `config.json`. Even for a complex configuration, start with your basic `config.json` file to ensure first that you can run the WS EMS.

---

### **Caution**

Do not attempt to use `config.json` documented as is to run your WS EMS. It is intended as a reference, not as a valid JSON file that you can use to run WS EMS. Instead, use `config.json.complete` to run WS EMS using all available properties. Make sure that you save `config.json.complete` as `config.json`, and set all of the minimally required properties (see the next step).

---

4. Set the configuration properties:
  - For a simple configuration that establishes a connection to ThingWorx, see the section, [Creating a Configuration File on page 20](#).
  - For a more complex configuration, start with the section, [Creating a Configuration File on page 20](#), and then continue to the section, [Viewing All Configuration Options on page 30](#).
5. Save the configuration file as `config.json`.

---

### **Note**

The configuration file must be named `config.json` and reside in the `\microserver\etc` folder.

---

6. Change directories back to the top-level directory, `\microserver`.
7. To run the WS EMS, enter the command, `wsems`.

As part of initialization, the WS EMS checks the configuration file settings. Once initialized, the WS EMS prints its version number to the console and log file, attempts to connect to ThingWorx, and returns a message that the connection was successful to the console. You can tell that WS EMS is

---

running and connected to ThingWorx by looking at the console prompt — two plus signs (++) indicate that it is running and connected.

8. Should you need to shut down the WS EMS, press ENTER to display the console prompt and type `q`.

---

 **Note**

The Windows-based operating systems have a tick resolution (15ms) that is higher than the tick resolutions requested by the C SDK (5ms). For information about achieving the best performance in a Windows-based operating system, see [Running on a Windows-based Operating System on page 107](#).

---

## Running WS EMS as a Service

This topic explains how to run the ThingWorx WS EMS and ThingWorx Lua Script Resource as Windows services or Linux daemons.

To install WS EMS and LSR as services on a supported Windows or Linux platform:

1. Open a command window or terminal session on the system or device that is hosting the WS EMS.
2. Change to the `\microserver\etc` directory.
3. For a basic configuration, copy the file, `config.json.minimal`, and rename it to `config.json`. Even for a complex configuration, start with your basic `config.json` file to ensure that you can run WS EMS.

---

 **Caution**

Do not attempt to use `config.json` documented as is to run your WS EMS. It is intended as a reference, not as a valid JSON file that you can use to run WS EMS. Instead, use `config.json.complete` to run WS EMS using all available properties. Make sure that you save `config.json.complete` as `config.json`, and set at least all of the minimally required properties (see the next step).

---

- 
4. Set the configuration properties:
    - For a simple configuration that establishes a connection to ThingWorx, see the section, [Creating a Configuration File on page 20](#).
    - For a more complex configuration, start with the section, [Creating a Configuration File on page 20](#), and then continue to the section, [Additional Configuration Options on page 30](#).
  5. Save the configuration file as `config.json`.

---

 **Note**

The configuration file must be named `config.json` and reside in the `\microserver\etc` folder.

---

6. Follow the steps for your operating system:
  - For Windows:
    - a. Change into the `\microserver\install_services\` directory.
    - b. Run the following command to install WS EMS and LSR as Windows services, with or without the options to create custom names:

```
install.bat [-wsems your_name_for_wsems_service_here]  
[-lsr your_name_for_lsr_service_here]
```

Use only one hyphen (-) for the options. There is a space between the option and the argument, but for Windows, you must use the full option name.

- For Linux:
  - a. Change to the `\microserver\install_services\` directory.
  - b. To make the install script executable, use the following command:

```
sudo chmod +x microserver/install_services/install
```

- c. Run one of the following commands to install the WS EMS and LSR as daemons:

Linux, using short names for the options

```
sudo ./microserver/install_services/install \  
[-w your_name_for_ws_ems_service_here] \  
[-l your_name_for_lsr_service_here]
```

Use only one hyphen (-) for the options. There is a space between the option and the argument.

---

Linux, using long names for the options:

```
sudo ./microserver/install_services/install \  
    [--wsems=your_name_for_ws_ems_service_here] \  
    [--lsr=your_name_for_lsr_service_here]
```

Note that the long options require two hyphens (--) before the option name, an equal sign following the name, and no space between the equal sign and the argument (your name for the service).

---

 **Note**

To uninstall the service, remove the service from `/etc/init.d/<Service Name>`.

---

As part of initialization, the WS EMS checks the configuration file settings. Once initialized, the WS EMS prints its version number to the console and log file, attempts to connect to ThingWorx, and returns a message that the connection was successful to the console. You can tell that WS EMS is running and connected to ThingWorx by looking at the console prompt — two plus signs (++) indicate that it is running and connected.

## Creating a Configuration File

The configuration file of WS EMS is a text file that uses the JSON format. It is separated into multiple groups. Each group contains sets of name/value pairs (properties) that control different aspects of the configuration. To connect to ThingWorx, only a few properties are required.

To view an example of a basic configuration file and create your own configuration file:

1. From the WS EMS installation directory, change to the directory, `/etc`. This directory contains the following configuration files for WS EMS:
  - `config.json.complete` — A valid JSON file, with no comments. If you want to use this file, you need to provide information relevant to your environment for such properties as the application key (`appKey`), and the `ws_servers.host` and `ws_servers.port` for the instance of ThingWorx to which the WS EMS will connect.
  - `config.json.documented` — A copy of the

---

`config.json.complete` file with many comments to explain the properties to set. This file is NOT a valid JSON file. Do NOT attempt to run the WS EMS with this configuration file.

- `config.json.minimal` — A file that provides (in valid JSON) the essential properties that need to be set to communicate with an instance of ThingWorx.

The fourth configuration file in this directory is a sample configuration file for the Lua Script Resource (`config.lua.example`). See [Configuring a Lua Script Resource on page 80](#) for more information.

2. To run the WS EMS, you need to create a separate configuration file, called `config.json`. To begin with a basic configuration, open `config.json.minimal` in a text editor. This file contains the minimum set of configuration settings required to connect to ThingWorx.
3. Create a new file in your editor, and save it as `config.json`.
4. Copy the settings from `config.json.minimal` into your `config.json` file.
5. Follow the instructions in the [next section on page 21](#) to enable the WS EMS to communicate with an instance of ThingWorx.

## Configuring the Connection to ThingWorx

To connect to a ThingWorx host, you must configure the `ws_servers` group in the configuration file. This group contains the properties that define the connection between the ThingWorx WS EMS and a ThingWorx host. You need to provide an IP address or host name and port for one instance of ThingWorx.

---

### Note

Previous releases of the WS EMS allowed you to configure an array that contained multiple addresses. However, the WS EMS no longer checks for another address if it fails to connect with the first address in the array. If you previously specified multiple addresses, you do NOT have to change your configuration file. The WS EMS will use the first address in the `ws_servers` array and ignore the rest.

---

As long as you have created your own `config.json` file, follow these steps to set up the connection:

1. Copy the first two lines from the `config.json.minimal` file and paste them in your file:

```
{  
  "ws_servers" : [{
```

---

You are ready to add the properties that define the connection.

2. Under "ws\_servers", add the "host" and "port" properties. Then, for the "host" property, replace "localhost" with the URL of your ThingWorx host. For the "port" property, enter the number of the port on the host to use for the connection. If the connection is to be secure, use port 443. For example:

```
{
  "ws_servers": [{
    "host" : "<some_host_url>",
    "port": 443
  }
],
  "appKey" : "<some_encrypted_application_key>",
```

For development purposes, you may want to use a ThingWorx host that is installed on the same computer where you installed your WS EMS.

"localhost" can be used as the value for "host" for these purposes only.

3. Add the appKey property, and copy/paste the encrypted Application Key that was generated for the WS EMS to use to access the ThingWorx host. A ThingWorx administrator can generate Application Keys. The key is associated with an account and determines the privileges that the WS EMS will have when accessing the instance.
4. Save the configuration file.

## Enabling Encryption

You enable or disable encryption in the ws\_connection group of the configuration file. By default, the ThingWorx WS EMS always attempts to connect to a ThingWorx host, using SSL/TLS (that is, encryption is enabled).

---

### Note

The code samples below are provided for example purposes only.

---

To enable encryption, specify the properties as shown below:


```
"ws_connection": {
  "encryption" : "ssl"
}
```

To disable encryption (NOT recommended), specify the properties as shown below:

```
"ws_connection": {
  "encryption" : "none"
}
```

---

The `ws_connection` group contains the following property:

Use	To Specify
encryption	<p>Whether or not encryption is enabled for communications with the ThingWorx host, and the type of encryption used. Valid values are:</p> <ul style="list-style-type: none"><li>• none</li><li>• ssl</li></ul> <p> <b>Note</b></p> <p>The previously available <code>fips</code> value has been replaced with a group (<code>fips</code>) and a property (<code>enabled</code>). See <a href="#">Configuring FIPS Mode on page 27</a> for information about configuring FIPS mode.</p>

---

 **Best Practice**

Always enable encryption. Otherwise, the WS EMS and LSR will log warning message (console).

---

## Configuring SSL/TLS Certificates and Validation

### About SSL/TLS Certificates

Essentially, SSL/TLS certificates are used for either of two purposes:

- **Establishing Trust** — Trusted Certificate Authority (CA) certificates verify other certificates. Typically, these files are found on a client that is attempting to establish an SSL/TLS connection with a server. For example, store a valid certificate in the home directory of your WS EMS. The valid certificate must belong to the issuers of the certificates (Certificate Authority or “CA”) of the ThingWorx host with which the WS EMS communicates. The CA certificates must be stored in the home directory of WS EMS.
- **Establishing Identity** — Identity certificates with private keys provide a way of communicating the unique identity of an SSL/TLS peer. Identity certificates with private keys are typically used to show the identity of a server to a client. When a server requires client authentication, Identity certificates are also required on the client. In this latter case, the Trusted Certificate Authority certificate would be required on the server (a ThingWorx host).

---

The requirements for products acting as clients, such as WS EMS, or servers, such as a ThingWorx, in SSL/TLS connections follow:

- A server must always have an Identity certificate. Optionally, if the product acting as a server supports and is configured to use client authentication, the server would need a Trusted Certificate Authority certificate.
- A client must always have a Trusted Certificate Authority (CA) certificate. An example of a Trusted CA certificate name is `SSLCACert.pem`. Optionally, if the product acting as a server supports and is configured to use client authentication, the client would also need an Identity certificate. An example of a client-side Identity certificate file name is `SSLCert.pem`, and an example of its private key name is `SSLPrivKey.pem`.

The WS EMS can validate certificates that have been signed using the following algorithms:

- MD5
- SHA-1
- SHA-256 digest

---

### **Best Practice**

Always configure a secure HTTP server. Otherwise, the WS EMS and LSR will log warning messages when any one or more of the following conditions is true:

- SSL is disabled
- Authentication is disabled.
- Certificate validation is disabled.
- Self-signed certificates are allowed.

---

As of release 5.4.0 of WS EMS , the distribution bundles for Linux and Windows provide EITHER the OpenSSL libraries, v.1.0.2L OR the axTLS v.2.1.2 library. Only the OpenSSL distribution bundles provide the FIPS module, v.2.0.2. If your environment requires FIPS, download the distribution bundle for your operating system and platform that has `openssl` in its name. For details about FIPS mode, see [Configuring FIPS Mode on page 27](#).



---

## Note

Not only does axTLS not support FIPS mode, but also it does not support any other client authentication when it is used in a client-side application such as WS EMS for an edge device. The axTLS library does support client authentication when it is used in a server-side application. If you want to use axTLS instead of OpenSSL, you must download the distribution bundle for your operating system and platform that has `axtls` in its name.

---

## Setting Up WS EMS to Use Certificates

The properties in the `certificates` group of the configuration file specify whether certificates will be validated for the connection between the WS EMS and your ThingWorx host. This group and its properties follow:

```
"certificates": {
  "validate": true,
  "allow_self_signed": false,
  "cert_chain": " d:\\Thingworx\\tomcat\\test\\Thingworx_CA_Certs.pem",
  "client_cert": "/path/to/client/cert/file",
  "key_file": "/path/to/key/file",
  "key_passphrase": "AES:EncryptedPassphrase",
  "validation_criteria": {
    "Cert_Common_Name": "common name",
    "Cert_Organization": "organization name",
    "Cert_Organizational_Name": "organizational name",
    "CA_Cert_Common_Name": "cert common name",
    "CA_Cert_Organization": "cert organization",
    "CA_Cert_Organizational_Name": "cert organizational name"
  }
},
```


---

## Tip

For examples of secure configurations for communications between the WS EMS and the LSR, see [Setting Up Secure Communications for WS EMS and LSR on page 97](#). These examples are presented in order of least secure (testing purposes ONLY) to most secure (strongly recommended for production environments).

---

The following table lists and describes the properties configuring SSL/TLS certificates. See the section below for definitions of the validation criteria.

Property	Description
<code>validate</code>	Whether or not to perform validation on certificates presented by a ThingWorx. host. The default value of this property is <code>true</code> . For production, enabling validation is strongly recommended.
<code>allow_self_signed</code>	Whether or not to permit self-signed certificates to be used. The default value of this property is <code>true</code> . For production, allowing self-signed certificates is not recommended.
<code>cert_chain</code>	<p>Certificate files used to validate the server certificate. Used if <code>allow_self_signed</code> is <code>false</code> and <code>validate</code> is <code>true</code>. For example:</p> <pre>"cert_chain": "d:\\Thingworx\\tomcat\\test\\Thingworx_CA_Certs.pem",</pre> <p> <b>Note</b></p> <p>Multiple certificates can be loaded into this array.</p>
<code>client_cert (optional)</code>	The path to the X.509 certificate file for the client.
The following properties are all passed to the underlying C SDK and are not used by the WS EMS. They are associated with the websocket connection	
<code>key_file (optional)</code>	The path to the key file to load for client certificates (supports <code>.pem</code> , <code>.p8</code> , and <code>.p12</code> files).
<code>key_passphrase (optional)</code>	A string password for opening the key file. The passphrase can be encrypted.
<code>validation_criteria</code>	See the section below for details about this property.

## Validation Criteria

To validate a certificate, you can configure the fields of the certificate that should be validated:

- Subject common name
- Subject organization name
- Subject organizational unit
- Issuer common name
- Issuer organization name
- Issuer organizational unit

When creating a Certificate Signing Request (CSR), you are prompted for the fields that will need to be validated. The following definitions may help you determine the values for these fields:

- Common Name — Typically, a combination of the host and domain names, the value of these fields looks like “`www.your_site.com`” or “`your_site.com`”. Certificates are specific to the Common Name that they have been issued to at the Host level. This Common Name must be the same as the web address that

---

the WS EMS will access when connecting to ThingWorx using SSL/TLS. If the ThingWorx host and the WS EMS are located on an intranet, the Common Name can be just the name of the host machine of the instance.

- Organization Name — Typically, the name of the company.
- Organizational Unit — Typically, a department or other such unit within a company. For example, IT.

### A Note About Cipher Suites

If your application directly communicates with a Java-based SSL/TLS server (such as ThingWorx), the cipher suite list should include !kEDH (as shown below). Otherwise, ephemeral Diffie-Hellman (EDH) key exchange may fail:

```
<CipherSuites>DEFAULT:!kEDH</CipherSuites>
```

### For Development Purposes Only

By default, the WS EMS attempts to validate certificates presented by the ThingWorx host during SSL/TLS negotiation. If necessary, *for development purposes only and never in production environments*, you can disable this validation by setting the `validate` property to `false`, as shown below:

```
"certificates": {  
  "validate": false  
}
```

Alternatively, *for testing purposes only and never in production environments*, you may want to use self-signed certificates on your server. By default use of self-signed certificates is disabled. To allow self-signed certificates, use the following setting:

```
"certificates": {  
  "allow_self_signed": true  
}
```

### Configuring FIPS Mode

To use FIPS mode, make sure that you have downloaded one of the WS EMS distribution bundles that has `openssl` in the name of the file. This distribution bundle provides support for the OpenSSL library and the FIPS-140-2–validated cryptographic module (Certificate#1747, FIPS Object Module 2.0.2) on supported Windows and Linux platforms.

By default FIPS mode is disabled. To enable FIPS mode, you need to set the FIPS option in your `config.json` file. The WS EMS will check if FIPS mode is enabled on startup.

---

As of release 5.4.0, a “switch” has been added in the form of a group and property to enable or disable FIPS mode. If you created the `config.json` file for your WS EMS using `config.json.minimal` as the starting point, you need to add the group to your configuration file and change the value of the `enabled` property to `true`, as follows:

```
"fips" : {  
    "enabled" : true  
},
```

If you used `config.json.complete` as your `config.json` file, the group and property are already present in the file. Set the value of the `enabled` property to `true` to enable FIPS mode, as shown above.

Should you need to disable or enable FIPS mode at any time, open the `config.json` file for your WS EMS, and locate the `fips` group. This group has one property for enabling and disabling FIPS mode, called `enabled`. To disable FIPS mode, set this property (a BOOLEAN) to `false`, as shown here:

```
"fips" : {  
    "enabled" : false
```

## Authenticating and Binding

The `appKey` group of the configuration file is used for authentication. The ThingWorx WS EMS must be authenticated to connect to the ThingWorx.

An Application Key is an authentication token generated by ThingWorx that represents a specific user. The Application Key is sent along with the connection request to authenticate the WS EMS with ThingWorx, and apply the correct permissions that are associated with the Application Key’s user account.

The Application Key is set by a simple top-level key in the JSON structure.

---

### Note

The code sample below is provided for example purposes only. Substitute the actual Application Key that you generated for `"some_encrypted_application_key"`.

```
"appKey": "some_encrypted_application_key"
```

These examples are presented in order of least secure (testing purposes ONLY) to most secure (strongly recommended for production environments).

---

### Tip

Enabling authentication is an important component of a secure configuration. For examples of secure configurations for communications between the WS EMS and the LSR, see [Setting Up Secure Communications for WS EMS and LSR on page 97](#). These examples are presented in order of least secure (testing purposes ONLY) to most secure (strongly recommended for production environments).

---

## Binding

Once another device registers with the WS EMS (by sending an auto bind message), the WS EMS sends a BIND message to ThingWorx on behalf of that device. ThingWorx then associates the WebSocket on which WS EMS is communicating with a remote thing on the ThingWorx whose name or identifier matches the name or identifier sent by the WS EMS (the remote thing must have been created on ThingWorx, using the **RemoteThing** thing template or one of its derivative templates). This association is the binding that must exist so that ThingWorx can send requests to the device that is communicating through the WS EMS. For information about automatic binding and the WS EMS, refer to the section, [Configuring Automatic Binding for WS EMS on page 42](#). For information about configuring the gateway option for automatic binding, refer to [Auto-bound Gateways on page 43](#).

## Verifying Your Connection

Following the initial message that indicates a successful connection to the ThingWorx, you can verify your connection as follows:

1. Open a web browser on the system or device that is hosting the WS EMS, and enter the following URL in the address bar:

```
http://localhost:8000/Thingworx/Things/LocalEms/Properties/isConnected
```

This request returns an infotable that contains a single row that indicates whether the WS EMS is online or offline.

2. If the result of this request is true, the WS EMS is online. To test that you can access data on ThingWorx, enter the following URL in the address bar:

```
http://localhost:8000/Thingworx/Things/SystemRepository/Properties/name
```

This request returns an infotable that is serialized to JSON, where the row of the infotable contains the name of the requested thing, "SystemRepository".

3. If both of these tests succeed, the WS EMS is successfully connected to ThingWorx.

---

## Additional Configuration of WS EMS

This section describes how to configure additional options of the ThingWorx WS EMS.

The `config.json.complete` and the `config.json.documented` files provided in the WS EMS installation contains all possible configuration properties. To allow you to run WS EMS using `config.json.complete`, all of the comments have been removed from the file. Instead, `config.json.documented` is provided as the reference file for configuration information for all of the possible configuration properties for WS EMS.

---

### Caution

Do not attempt to use `config.json.documented` as is to run your WS EMS. It is intended as a reference, NOT as a valid JSON file that you can use to run WS EMS. Instead, use `config.json.complete` to run WS EMS, using all of the possible configuration properties.

---

Some properties in the `config.json.complete` file have default values that you may not need to change. The rest of this section describes the properties that are used most often.

---

### Note

If you are using the Lua Script Resource (`luaScriptResource.exe`) to communicate with one or more local devices, you also need a `config.lua` in the `/etc` directory. This file tells the Lua process how to initialize and communicate with ThingWorx through the WS EMS. For more information, see [Lua Script Resource Configuration File on page 80](#).

---

## Viewing All Configuration Options

The file, `config.json.documented`, is provided in the WS EMS distribution. It contains all the possible options that you can configure for your WS EMS plus a few comments to help you understand each group and property. To view these options, follow these steps:

1. From the WS EMS installation directory, change to the directory, `/etc`.
2. Open the file, `config.json.documented` in a text editor.
3. Refer to this file while you read about the groups of the configuration file.

---

The comments in this file provide brief descriptions of the properties. The rest of this section walks you through the properties that are used most often.

---

 **Caution**

Do not attempt to use `config.json`. documented as is to run your WS EMS. It is intended as a reference, not as a valid JSON file that you can use to run WS EMS. Instead, if you want to copy all properties, open `config.json.complete` in a text editor and save it as `config.json`. Make sure that you preserve the original configuration files.


---


## Configuring the Logger Group

Use the `logger` settings to configure a WS EMS to collect logging information. Here is an example of this group:



```
{"logger":
  "level": "WARN",
  "audit_target": "http://test.com",
  "publish_directory": "/_tw_logs/",
  "publish_level": "logger:level",
  "max_file_storage": 2000000,
  "auto_flush": true,
  "flush_chunk_size": 16384,
  "buffer_size": 4096
},
```

The following table lists and describes the properties of the `logger` element :

Use	To Specify
level	<p>The level of information that you want to include in the audit log file. The default level is <code>WARN</code>. Valid values include:</p> <ul style="list-style-type: none"><li>• <code>AUDIT</code></li><li>• <code>ERROR</code></li><li>• <code>WARN</code></li><li>• <code>INFO</code></li><li>• <code>DEBUG</code></li><li>• <code>TRACE</code></li></ul> <p> <b>Tip</b></p> <p>When troubleshooting a problem, set the <code>level</code> to <code>TRACE</code> so that you can see all the activity. For production, set the <code>level</code> to <code>ERROR</code> if you want to see error messages.</p>
audit_target	The path to the audit log file where audit events will be written.

Use	To Specify
	<p>Alternatively, specify an HTTP address for the audit log file, where these events will be sent using a POST command.</p> <p>Audit events are also written to the normal log destination . If no target is specified, no additional auditing takes place.</p> <p>Valid values include:</p> <ul style="list-style-type: none"> <li>• <code>file://path_to_file</code></li> <li>• <code>http://hosted_location</code></li> </ul>
<code>publish_directory</code>	<p>A location for writing to log files those log events that meet or exceed the <code>publish_level</code>. If you do not specify a location for this property, this logging information is not written to log files.</p> <p> <b>Caution</b></p> <p>The LSR and WS EMS use the same naming scheme for log files. Specify a directory that is different from the one specified in the <code>publish_directory</code> property in the <code>config.json</code> file of the WS EMS.</p>
<code>publish_level</code>	<p>The level of information that you want to include in the alternate log files. The default value is <code>logger:level</code>, which tells WS EMS to use the same level as set in the <code>level</code> property. Valid values are the same as for the <code>level</code> property:</p> <ul style="list-style-type: none"> <li>• AUDIT</li> <li>• ERROR</li> <li>• WARN</li> <li>• INFO</li> <li>• DEBUG</li> <li>• TRACE</li> </ul>
<code>max_file_storage</code>	<p>The maximum amount of space that log files can take up. Keep in mind that there are two concurrent log files. The maximum size of each individual log file is <code>max_file_storage</code> divided by 2.. The default value is 200000 bytes.</p>
<code>auto_flush</code>	<p>Whether WS EMS should flush every N bytes to the <code>publish_directory</code>. The N value is defined by <code>flush_chunk_size</code>.</p> <p>WS EMS also flushes the buffer if a message has not been written to the log in the last second.</p> <p>A setting of <code>true</code> for <code>auto_flush</code> forces WS EMS to flush every 16384 bytes by default.</p>



Use	To Specify
flush_chunk_size	<p>The number of bytes to write before flushing to disk. The default setting is 16KB..</p> <p> <b>Best Practice</b></p> <p>It is strongly recommended that you keep the default setting . You cannot effectively go lower than the value of your setting for the <code>buffer_size</code> property. Although no limits are enforced, it strongly recommended that you NOT use a value that is higher than the default value.</p>
buffer_size	<p>The maximum number of bytes that can be printed in a single logging message. The default setting is 4096 bytes.</p> <p> <b>Best Practice</b></p> <p>It is strongly recommended that you keep the default setting. Modify this value only if you have issues with logging speed or other performance issues, or if you are getting truncated messages in the log. If you expect to have very long messages that you want logged, increase this value.</p>

As of version 5.4.0, the actual time is no longer used in the logs for the WS EMS and the Lua Script Resource (LSR). Instead, the logs use UTC timestamps.

As of version 5.3.4 of WS EMS, logging behavior changed, as follows:

- The same format is used in log messages written to the console (text) as in log messages written to the persisted log files (formerly JSON). The log messages are no longer wrapped in a JSON object. The persisted log files are just text files. Their content will match what is printed out on the console.
- You can specify certain limitations for logging. The property, `buffer_size`, allows you to specify the maximum number of bytes that can be printed in a single log message. In addition, the property, `flush_chunk_size`, allows you to specify a maximum of bytes to write before flushing to disk. If a message has not been written to the log in the last second, the buffer is flushed. These properties and their default values are shown in the `config.json.documented` configuration file in the WS EMS installation.

---

 **Caution**

Do not attempt to use `config.json.documented` to run your WS EMS. This file is intended as a reference. Instead, if you want to use all possible properties, use `config.json.complete`. Be sure to save the file as `config.json` before running WS EMS.

---

---

## Configuring the HTTP Server Group

The `http_server` group is used to allow a WS EMS to accept local calls from the machine or device code that may be running in a different process, such as the Lua Script Resource.

---

### Note

If you are connecting from the Lua Script Resource and have changed the `host` and `port` properties for the WS EMS, you must update the `config.lua` file (in the `/microserver/etc` directory) and modify the properties, `scripts.rap_host` and `scripts.rap.port`.

---

Here is an example of the `http_server` group. Change the values of the properties to fit your environment; do not use this example as is.

```
"http_server": {
  "host" : "localhost",
  "port": 8000,
  "ssl": true,
  "certificate" : "/path/to/certificate/file",
  "private_key" : "/path/to/private/key",
  "passphrase" : "private_key_password"
  "authenticate" : true,
  "user" : "johnsmith",
  "password" : "some_encrypted_user_password",
  "content_read_timeout": 20000
  "ports_to_try" : 10
  "max_clients" : 15
  "use_default_certificate" : false
},
```

---

**i Best Practice**

Always configure a secure HTTP server. Otherwise, the WS EMS and LSR will log warning messages when any of the following conditions is true:



- SSL is disabled
- Authentication is disabled.
- Certificate validation is disabled.
- Self-signed certificates are allowed.

For examples of secure configurations for communications between the WS EMS and the LSR, see [Setting Up Secure Communications for WS EMS and LSR on page 97](#). These examples are presented in order of least secure (testing purposes ONLY) to most secure (strongly recommended for production environments).

---

The following table lists and describes the properties in the `http_server` group :

Property	ThingWorx Base Type	Description
<code>host</code>	STRING	The name of the host that the WS EMS listens to. The default value is <code>localhost</code> , but this value means IPV6 <code>localhost</code> and not <code>127.0.0.1</code> . Change this value to <code>127.0.0.1</code> to use IPV4 instead.  To configure an IP address other than <code>localhost</code> or <code>127.0.0.1</code> for REST API calls, see <a href="#">Configuring WS EMS to Listen on IP Other Than localhost on page 63</a>
<code>port</code>	NUMBER	The port number on which the WS EMS listens for messages from clients running the LSR. Typically, incoming messages on this port are from an LSR instance/application, but it is possible for any other application to send messages to the WS EMS HTTP Server.. The default port is 8000.
<code>ssl</code>	BOOLEAN	Whether or not to use SSL/TLS for communications between clients running the LSR and WS EMS. The default value is <code>true</code> .
<code>certificate</code>	STRING	When <code>ssl</code> is <code>true</code> , specifies the complete path to the certificate file that WS EMS will use when connecting

Property	ThingWorx Base Type	Description
		to LSR clients. The default value is an empty STRING.   <b>Note</b> The file does not need to be located in the installation directory for the WS EMS. However, you must specify the full path to the certificate file, no matter where you store the file.
private_key	STRING	When <code>ssl</code> is <code>true</code> , specifies the complete path to the private key that WS EMS will use when connecting to LSR clients.   <b>Note</b> The file does not need to be located in the installation directory for the WS EMS. However, you must specify the full path to the private key file, no matter where you store the file.
passphrase	STRING	When <code>ssl</code> is <code>true</code> and a <code>private_key</code> is used for connections with LSR clients, specifies the password defined for the private key. .
authenticate	BOOLEAN	Whether or not to enable authentication between the LSR clients and the WS EMS. The default value is <code>true</code> .
user	STRING	The user name to pass to the HTTP server. The example above shows a name as all lowercase and all one word. However, there are no restrictions on the user name other than it must be a valid STRING.
password	STRING	The encrypted password for the user named in the <code>user</code> property.
content_read_timeout	NUMBER	The maximum amount of time (in milliseconds) that the WS EMS will wait before timing out when it tries to read a PUT or POST. The default value is 20000 milliseconds (20 seconds).
ports_to_try	NUMBER	The number of additional ports to try. If it cannot bind on the configured port, WS EMS increments the port number by 1. The default value is 10. For example, if the configured port is 8000, the next port to try would be 8001. If it could not bind to that port, the next port to try would be 8002, and so on. Port retries continue until the WS EMS binds to a port or until 10 ports plus the configured port have been tried. In this example, a total of 11 ports might be tried.

Property	ThingWorx Base Type	Description
max_clients	NUMBER	The maximum number of clients that can be connected to the WS EMS at the same time. In this context, “clients” are devices that are running the LSR and communicating with ThingWorx through WS EMS. The default value is 15clients.
use_default_certificate	BOOLEAN	A flag to enable or disable the use of the default embedded certificate/private key. By default its use is disabled (false).

## Configuring the WebSocket Connection

The `ws_connection` group is used to configure the WebSocket connection between the WS EMS and ThingWorx. If the default settings meet your needs, there is no need to include this group in the configuration file.

The code sample below is provided for example purposes only. It shows the group as it appears in the `config.json.complete` file.

### Caution

Do not attempt to use `config.json.documented` as is to run your WS EMS. It is intended as a reference, not as a valid JSON file that you can use to run WS EMS. Instead, use `config.json.complete`. All of the comments have been removed from this file to enable you to run WS EMS using it.

```
"ws_connection": {
    "encryption" : "ssl ",
    "verbose" : false,
    "binary_mode" : true,
    "msg_timeout" : 5000,
    "ping_rate" : 55000,
    "pingpong_timeout" : 10000,
    "connect_period" : 60000,
    "duty_cycle" : 100,
    "message_idle_time" : 50,
    "max_msg_size" : 1048576,
    "message_chunk_size" : 8192,
    "max_frame_size" : 8192,
    "max_messages" : 500,
    "connect_on_demand" : false,
    "connect_timeout" : 10000,
    "connect_retry_interval" : 10000,
```


```

    "max_threads" : 4,
    "max_connect_delay" : 0,
    "socket_read_timeout" : 100,
    "frame_read_timeout" : 10000,
    "ssl_read_timeout" : 500,
    "connect_retries" : -1
},

```

The following table lists and describes properties available to configure the WebSocket connection, in alphabetical order:

Use	To Specify
<code>binary_mode</code>	Whether or not all messages are sent using binary WebSockets. The default value is <code>true</code> .
<code>connect_on_demand</code>	Whether or not to connect automatically in order to send a message, even if in the off time of the duty cycle. The default value is <code>false</code> , which means do NOT connect automatically while in the off time of a duty cycle..
<code>connect_period</code>	The total number of milliseconds that the WebSocket will stay connected when a duty cycle is configured. The default value is 60000 milliseconds (1 minute). See also <code>duty_cycle</code> .
<code>connect_retries</code>	The number of times to retry the connection when it fails, as an INTEGER. The default value, -1, causes the WS EMS to retry forever.
<code>connect_retry_interval</code>	The number of milliseconds, to wait between attempts to connect to ThingWorx. The default value is 10000 milliseconds (10 seconds).
<code>connect_timeout</code>	The maximum number of milliseconds, to wait for a connection to ThingWorx to be established. The default value is 10000 milliseconds (10 seconds).
<code>duty_cycle</code>	The percentage of the <code>connect_period</code> that the WS EMS remains connected to ThingWorx. The default value is 100, for AlwaysOn. If the <code>connect_period</code> is one minute and the duty cycle is 100, the connection remains open for the full minute. If the <code>duty_cycle</code> is set to 50, then the connection remains open for 30 seconds and then is closed for 30 seconds. For more information, see the section, <a href="#">Duty Cycle Modulation on page 40</a> , below. The maximum value of this property is 100.
<code>encryption</code>	Whether or not SSL/TLS is used for the WebSocket connection. The default value is <code>ssl</code> . To disable SSL/TLS (NOT recommended), set this property to <code>none</code> .
<code>frame_read_timeout</code>	The maximum amount of time, in milliseconds, to wait for a full SSL/TLS frame during a socket read operation. The default value is 10000 milliseconds. A timeout if the WS EMS requests something from ThingWorx and receives no data at all. The timeout triggers an error and causes a disconnect.


Use	To Specify
	<p> <b>Note</b></p> <p>The difference between <code>socket_read_timeout</code> (described below) and <code>frame_read_timeout</code> lies in the scope and context in which these timeouts are used. The <code>socket_read_timeout</code> is used everywhere — in tunnels, e.g. — and anywhere there is a raw socket read. The <code>frame_read_timeout</code> is used in one place only — <code>twWs_Receive()</code> and then only after a WebSocket header has been received. After that, there is an expectation that the remainder of the frame described in the header will arrive in a timely manner. This specialized amount of time is the <code>frame_read_timeout</code>.</p>
<code>max_connect_delay</code>	The maximum amount of random delay time, in milliseconds, to wait before connecting. The default value is 0 milliseconds (no delay before connecting).
<code>max_frame_size</code>	The maximum size, in bytes, of a WebSocket frame. The default value is 8192 bytes.
<code>max_messages</code>	The maximum number of requests that can be waiting for a response at any one time. The default value is 500 requests.
<code>max_msg_size</code>	The maximum size, in bytes, of a complete message, even if broken into frames. The default value is 1048576 bytes (1 MB).
<code>max_threads</code>	The maximum number of incoming message handler threads to use. The default value is 4.
<code>message_chunk_size</code>	The maximum size of a chunk — a piece of a large message that has been broken up into chunks. The default value is 8192 bytes.
<code>message_idle_time</code>	The time in milliseconds to wait to see if messages are being sent before disconnecting for the off time of the duty cycle. The default value is 50 milliseconds.
<code>msg_timeout</code>	The time in milliseconds to wait for a response to return from ThingWorx. The default value is 5000 milliseconds (5 seconds).
<code>ping_rate</code>	The rate in milliseconds to send pings to ThingWorx. The default value is 55000 milliseconds.
<code>pingpong_timeout</code>	The amount of time in milliseconds to wait for a pong response after sending a ping. A timeout initiates a reconnect. The default value is 10000 milliseconds.
<code>socket_read_timeout</code>	The maximum amount of time, in milliseconds, to wait for data before timing out. The default value is 100 milliseconds. A timeout does not trigger an error. This property defines how long a process is allowed to wait for data before it must try again. Another process would be allowed to read from the socket between tries. See also the Note above for <code>frame_read_timeout</code> .

Use	To Specify
<code>ssl_read_timeout</code>	The maximum amount of time, in milliseconds, to wait for a full SSL/TLS record during a socket read operation. The default value is 500 milliseconds. A timeout does not trigger an error. This property effectively allows a read to continue after the <code>socket_read_timeout</code> is reached IF a partial amount of the SSL/TLS record is received on the socket before the <code>socket_read_timeout</code> expires.
<code>verbose</code>	Whether or not the WS EMS is in extremely verbose logging mode. The default value is <code>false</code> .

## Duty Cycle Modulation

Duty cycle modulation defines the frequency and duration of the connection between a WS EMS and a ThingWorx instance. If you need to conserve power or bandwidth at the expense of availability/responsiveness, you can use duty cycle modulation to place the WS EMS into a sleep mode by setting the following properties:

- `duty_cycle` — Determines what percentage of time during the connection period that the WS EMS is connected to ThingWorx.
- `connect_period` — Defines the period of time set for duty cycle intervals.

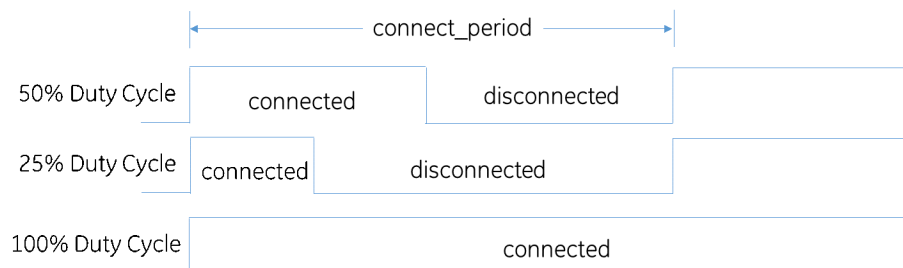

## Configuring a Proxy Server

The `proxy` group is used to configure the WS EMS to use a proxy server to connect to ThingWorx. For authentication with a proxy server, the WS EMS supports the following options:

- No authentication
- Basic authentication
- Digest authentication
- NTLM

### Note

The code sample below is provided for example purposes only.



```

"proxy" : {
    "host" : "localhost",
    "port" : 3128,
    "user" : "username",
    "password" : "some_encrypted_password"
},

```

The following table lists and describes the properties for setting up a proxy server:

Use	To Specify
host	The host name of the proxy server used to connect to ThingWorx. The value of the host property can be an IP address, or a host name.
port	The port number used to communicate with the proxy server. The default value is 3128.
user	The name of the user account that is used to connect with the proxy server.
password	<p>The password of the user account that is used to connect with ThingWorx.</p> <p>If you select a user name and password combination, it is recommended that you encrypt the password as shown in the example above.</p> <p>To encrypt a password, you can use the <code>Encrypt</code> method of the <b>Encryption</b> function in the service editor of the server to return the encrypted string value.</p>

## Storing Messages Received While WS EMS Is Offline

The `offline_msg_store` group is used to configure how the WS EMS handles and stores messages that are received while it is offline.

The following example shows the default configuration. If you do not want to use it, you do not have to change the configuration. When this feature is disabled, the other settings are ignored. However, if you do want to use this store, make sure you set the `enabled` property to `true` and add the appropriate directory for storing messages. Depending on the space available on your system, you may also want to change the `max_size` property.

```

"offline_msg_store": {
    "enabled": false,
    "directory" : "/opt/thingworx",
    "max_size": 65535
},

```

The following table lists and describes the properties for storing messages that are received while the WS EMS is offline; it also provides the default values:

Use	To Specify	Default Value
enabled	Whether or not the store is enabled.	false (This store is disabled.)
directory	The path to the directory of the store where messages are stored.	"/opt/thingworx", where "/opt/thingworx" is the directory where the WS EMS executable is installed.
max_size	The maximum size (in bytes) of the directory where messages are stored.	65535

## Configuring Automatic Binding for WS EMS

The `auto_bind` group is used to define specific local things that are always expected to be bound through this WS EMS, or to define a WS EMS as a gateway. For more information about configuring WS EMS as a gateway, refer to [Auto-bound Gateways on page 43](#).

The `auto_bind` property is an array, allowing you to statically define more than one device or machine thing.

### Note

The code sample below is provided for example purposes only.

```
"auto_bind": [{
  "name" : "EdgeThing001",
  "host" : "localhost",
  "port" : 8001,
  "path" : "/",
  "timeout" : 30000,
  "protocol" : "http",
  "user" : "username",
  "password" : "<some_encrypted_password>",
  "gateway" : true | false
}],
```

The following table lists and describes the properties for automatic binding:

Use	To Specify
name	REQUIRED. The thing name of the entity as it exists on ThingWorx. If an identifier is configured for the thing in ThingWorx, you must specify that identifier here. For more information, see the section, “Identifiers”, below.
host	The name of the host for the thing. The default value is <code>localhost</code> , but this likely means IPV6, and not 127.0.0.1.
port	The port number used by the thing for communications. The default value is 8001.

Use	To Specify
path	The path to prepend to the path received in the request from ThingWorx.
timeout	The maximum amount of time to wait for a response from the target, in milliseconds. The default value is 30000 milliseconds (30 seconds).
protocol	Whether the protocol to use for communications is HTTP or HTTPS. The default value is HTTP.
user	The name of the user account to use for authentication when connecting.
password	The password for the user account specified for the <code>user</code> property.  If you specify a user name and password, it is recommended that you encrypt the password, as shown in the example above.  To encrypt a password, you can use the <code>Encrypt</code> method of the <b>Encryption</b> function in the service editor of the server to return the encrypted string value.
gateway	Whether this automatically bound thing is a gateway or non-gateway thing. To understand the differences between these two settings, refer to <a href="#">Auto-bound Gateways on page 43</a> .

## Identifiers

Identifiers provide a way to specify an alternate name for a given thing. An identifier can be set for a thing on the **General Information** tab of the thing in ThingWorx Composer. If a thing has an identifier set, the WS EMS must bind the thing using the identifier. A typical use case for an identifier is the serial number for a device, as opposed to an intuitive name.

You can use an identifier when dynamically registering a thing or when configuring the `auto_bind` group. To use an identifier, prepend an asterisk (\*) to the identifier and specify it as the value for the "name" property, as follows:

```
{
  "name" : "*SN0012",
  "host" : "localhost",
  "port" : 9000,
  "path" : "/"
}
```

## Auto-bound Gateways

When you configure the `auto_bind` group of a WS EMS configuration, it is very important to note the difference between the settings, `"gateway": true` and `"gateway": false`. When used with a valid "name" property, either value results in the WS EMS attempting to bind the thing with ThingWorx. In addition, either value allows the WS EMS to respond to file transfer and tunnel services that are related to the automatically bound things. However, the similarities end here.

---

## Gateway

An auto-bound gateway can be bound to a ThingWorx instance ephemerally if there is no thing to bind with on the instance. Ephemeral binding is a temporary association between an instance and the WS EMS that lasts only until the WS EMS unbinds the gateway. In general, ephemeral things are created on ThingWorx when no remote things with a matching thing name exist on it.

When the WS EMS is attempting to bind a gateway, a thing is automatically created on ThingWorx, using the **EMSGateway** template. The ThingWorx instance binds the auto-bound gateway with this ephemeral thing. This thing is accessible only through the ThingWorx REST API. Once the WS EMS unbinds the gateway, the ephemeral thing is deleted.

If you do not want the automatically bound gateway to be ephemeral, you can create a thing for it and choose the **EMSGateway** thing template in ThingWorx Composer. If you do not choose this template for the thing, the Core instance does not bind the gateway with your thing.

When used both normally and ephemerally, the **EMSGateway** template provides some services that are specific to gateways. These services are not accessible to things that are created with the **RemoteThing** (and derivatives) thing templates. Refer to the [EMSGateway Class Documentation](#) for more details. For a list of REST APIs that provide some of the services of the **EMSGateway** class, refer to [Using Services with a WS EMS on page 66](#).

---

### Note

The devices for which a WS EMS acts as a gateway can be set up to identify themselves to the WS EMS when they initialize and connect to it. Alternatively, when these devices are well known, you may want to define them explicitly in the WS EMS configuration. For examples of these two types of gateway configurations for WS EMS, refer to the section, [Example Configurations on page 53](#).

---

## Non-Gateway

A thing that is automatically bound but is not a gateway has the following requirements:

- 
- For the WS EMS to respond to messages that are related to properties, services, or events for a non-gateway, automatically bound thing, a LuaScriptResource must exist. Custom Lua scripts must exist within the LSR to provide the capabilities to handle services, properties, and events.
  - For the non-gateway thing to bind successfully, you must first create a corresponding thing on ThingWorx, using the **RemoteThing** thing template (or any template derived from **RemoteThing**, such as **RemoteThingWithFileTransfer**).

The most common use of this type of automatically bound thing is to bind a simple thing that can handle file transfer and tunnel services but does not need any custom services, properties, or events.

---

 **Note**

For an example of a non-gateway configuration for WS EMS, refer to the section, [Example Configurations on page 53](#).

---

## Configuring File Transfers

To execute a file transfer, you need to configure options for both your client application and your ThingWorx instance. Transfers can be executed in either direction: from the edge application to ThingWorx instance or from the instance to the edge application.

---

 **Note**

Keep in mind that the account associated with the Application Key must have the correct Read/Write permissions to the target and destination directories for a file transfer.

---

To transfer a file, the WS EMS must be configured with a set of virtual directories. The paths that you specify for the virtual directories must be absolute; the paths for the files must be relative to the virtual directories. For the WS EMS, these properties might look like this:

```
"file": {
  "virtual_dirs": [
    { "In" : "c:\microserver_5.4.0-win32\microserver\in" },
    { "Out" : "c:\microserver_5.4.0-win32\microserver\out" },
    { "staging" : "c:\microserver_5.4.0-win32\microserver\staging" }
  ],
  "staging_dir" : "staging"
}
```

If you use the additional parameters available for the `file` group, it might look like this:

```
"file": {
  "buffer_size": 8192,
  "max_file_size": 8000000000,
  "virtual_dirs": [
    { "In" : "c:\microserver_5.4.0-win32\microserver\in" },
    { "Out" : "c:\microserver_5.4.0-win32\microserver\out" },
    { "staging" : "c:\microserver_5.4.0-win32\microserver\staging" }
  ]
  "idle_timeout":
  "staging_dir" : "staging"
}
```

This configuration is important because you must pass names of virtual directories in the parameters to the Copy service. As shown in the example above, you must use absolute paths.

The following table lists and describes the properties for file transfers:

Use	To Specify
<code>buffer_size</code>	The size of the buffer used for the file transfer, in bytes. The default value is 8192 bytes.
<code>max_file_size</code>	The maximum size of a file that can be transferred, in bytes. The default value is 8000000000 bytes (8GB).
<code>virtual_dirs</code>	An array of virtual directories that are used when browsing and sending files to ThingWorx. The directories are defined using absolute paths, as shown in the example above.
<code>idle_timeout</code>	The amount of time, in milliseconds, that the WS EMS waits before timing out a file transfer when the transfer is idle. Note that this value must be larger than the value of the <code>frame_read_timeout</code> property (in the <code>ws_connection</code> group). If this property is not set, the true default value is 1.2 times the value of the <code>frame_read_timeout</code> . For example, if the <code>frame_read_timeout</code> is set to its default value of 10000 milliseconds, the default value of this property is 1.2 times 10000, or 120000 milliseconds (2 minutes).
<code>staging_dir</code>	A directory to use as a staging directory for files that will be transferred to the edge device.

## Example

This example uses the Copy service for a file transfer. It makes the following assumptions:

- A **RemoteThingWithFileTransfer** named RT1 exists on the ThingWorx instance.
- The files are being transferred to/from the **SystemRepository** thing.

- The WS EMS is installed in the directory, `C:\microserver` and that `C:\microserver\in`, `C:\microserver\out`, and `C:\microserver\staging` exist.
- The source file is located in the `files` directory of the **SystemRepository** thing.
- The source and destination directories **MUST** exist AND be accessible to the WS EMS (Read/Write permissions).

In this example, the Copy service parameters to specify for a transfer from the ThingWorx instance to the edge device would be:

- **sourceRepo:** `SystemRepository` // Name of the Thing to transfer from
- **targetRepo:** `RT1` // Name of the Thing to transfer to
- **sourcePath:** `/files` // Directory in the SystemRepository (absolute path)
- **targetPath:** `/in` // The name of a virtual dir

In this case, it is pointing to `C:\microserver\in`. You can also specify subdirectories.

- **sourceFile:** `abc.json`
- **targetFile:** `abc.json` // Optional
- The default name for the **targetFile** is the name of the **sourceFile**. You can rename files during the transfer.

The paths on the WS EMS must be relative to a virtual directory that is registered to the remote thing (that is, they must start with the `"/<virtual_dir>"`). In the case of a file repository on ThingWorx, the paths need to be relative to the root directory of the file repository (must start with `"/"`).

Note that the things must be instances of one of the following templates:

- **FileRepository**
- **RemoteThingWithFileTransfer**
- **RemoteThingWithFileTransferAndTunneling**

Also, as of versions 5.0 and later of the WS EMS, you do not need the Lua Script Resource to do file transfers. You can add the `auto_bind` group to your configuration file to specify the name of a thing that will participate in file transfers:

```
"auto_bind": [
  { "name": "RT1" }
]
```

---

## Configuring Edge Settings for Tunneling

Application tunnels allow for secure, firewall-transparent tunneling of TCP client/server applications, such as VNC and SSH. As long as the WebSocket connection between the edge device and ThingWorx is secure (for example, uses an SSL/TLS certificate), the client/server applications can run securely. How is this possible? The application opens a second WebSocket to the same host and port that is used for other communications between the edge device and ThingWorx. You do not need to open other ports in the firewall to run these applications. However, it is important to note that it connects to a different URL that is specifically for the tunnel.

---

### Note

Only TCP client/server applications are supported at this time. UDP is not supported.

---

Configure tunneling for your WS EMS when you want to be able to access remotely the edge device that is running WS EMS. You can remotely access such a device through a remote desktop session (for example, UltraVNC) or remote terminal session (for example, SSH). By default, tunneling is enabled for the WS EMS. For the most part, if you are using UltraVNC or SSH, the default settings in the configuration file will suffice. Here are the default tunnel settings that you will find in `config.json.complete`:

```
// Default tunnel settings. All of these may be overridden
// by the server when a tunnel is initialized.
"tunnel":
  "tick_resolution": 5,
  "buffer_size": 8192,
  "read_timeout": 10,
  "idle_timeout": 300000,
  "max_concurrent": 4
}
```

You can modify the default tunnel settings by adding them to the `config.json` configuration file for your WS EMS. They may also be overridden by the ThingWorx host.

The following table lists and briefly describes the tunneling configuration properties:

Property	Description
<code>tick_resolution</code>	Tunnel performance can be greatly affected by tick resolution. The tick resolution determines how fast a tunnel manager checks the status of its managed tunnels. The smaller this value, the faster the tunnel responds. Tick resolution is especially important when running multiple tunnels concurrently, but be aware that a smaller tick resolution consumes more CPU resources. The default value is 5 ms. See also <a href="#">Running on a Windows-based Operating System on page 107</a> .
<code>buffer_size</code>	The size of the buffer to use for tunneling. This setting can be overridden by ThingWorx. The default value is 8KB (type: NUMBER).



Property	Description
read_timeout	The number of milliseconds that the WS EMS waits before timing out a socket read. This value can be overridden by ThignWorx Core. The default value is 10 ms. (type: NUMBER)
idle_timeout	The number of milliseconds that the connection is idle before WS EMS times it out. This value can be overridden by the server. The default values is 30000 ms (5 minutes). (type: NUMBER)
max_concurrent	The maximum number of tunnels that the WS EMS allows to exist at the same time. The default value is 4 concurrent tunnels. (type: NUMBER)

## Tunneling Configuration on the Server Side

The rest of the tunneling configuration takes place in the server side of the client/server application (UltraVNC Server, for example) and on the ThingWorx instance through ThingWorx Composer.


The main steps for the built-in client/server application for ThingWorx (UltraVNC) follow:

1. If you have not already, install UltraVNC Server on the edge device where the WS EMS is running.
2. Access the **Admin Properties** configuration screen for UltraVNC Server and make sure that the following configuration parameters are set:
  - **Allow loopback connections** — Make sure that this check box is selected if you want to test the connection on the edge device itself (the VNC Viewer is installed on the same machine as the VNC Server).
  - **VNC password** — Type the password that VNC Viewer users must type to access this edge device remotely.
  - **Multi viewer connection** — Select the option, **Keep existing connections**, so that a new session with this edge device does not disconnect any existing VNC Viewer sessions.

The main steps in ThingWorx Composer follow:


1. In the **Configuration** page for the Tunneling Subsystem, check the field, **Public host name used for tunnel**. If the IP address is a local network address, the tunnel will not work. Set this field to the external host/IP address that tunnels should use for connections. For more detail, see [Required Setting for the Tunneling Subsystem on page 53](#).
2. If you have not already, use the **RemoteThingWithTunnels** or the **RemoteThingWithFileTransferAndTunnels** template to create a remote thing on ThingWorx to represent the edge device that is running WS EMS.

- After creating the thing, from the **General Information** page for the new thing, enable the template **Override?** setting for **Enable Tunneling**, as shown below. By default, this setting is disabled.

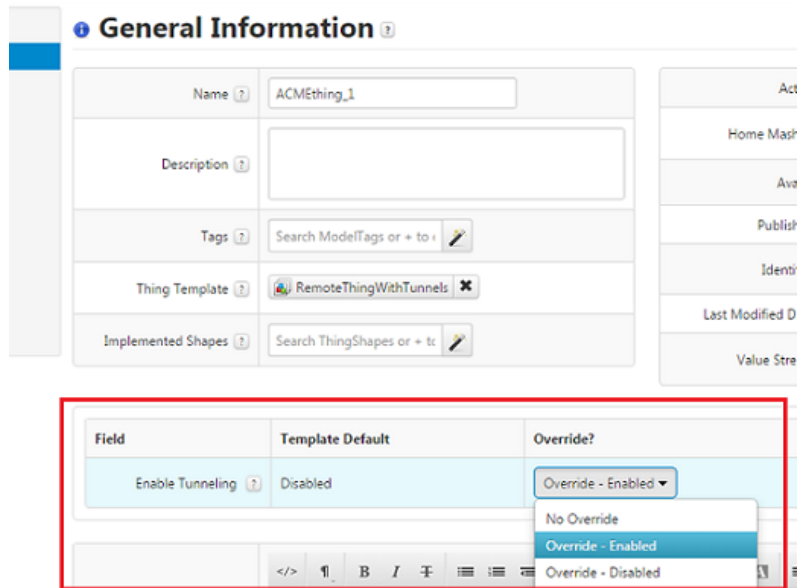

- Determine which remote applications will be used to access the edge device and whether you want to use the VNC client that is built into ThingWorx. These applications may be any of the following types:
  - Desktop remote sessions — VNC Server on the edge devices and the corresponding Viewer client on the user machines that will access the device. The VNC Viewer is the built-in application available from ThingWorx. You might create a tunnel, using the name `vncClient`.
  - SSH — An SSH client/server application, such as PuTTY. For information on OpenSSH, refer to <http://www.openssh.com/> or [http://support.suso.com/supki/SSH\\_Tutorial\\_for\\_Linux](http://support.suso.com/supki/SSH_Tutorial_for_Linux). For information on PuTTY, visit <http://www.putty.org/>.
  - Microsoft RDP — Refer to the Microsoft web site, more specifically, <http://windows.microsoft.com/en-us/windows/connect-using-remote-desktop-connection#connect-using-remote-desktop-connection=windows-7>.
  - Custom client application that you have built
- As long as you have enabled the template **Override?** setting for **Enable Tunneling** in the **General** tab for the remote thing, configure the tunnels for the thing that you created:
  - Under **ENTITY INFORMATION**, select **Configuration**. If you are not in Edit mode for the thing, click **Edit**.

- b. Under **Configuration for RemoteThingWithTunnels**, click **Add My Tunnel** and in the displayed fields, enter the information for the client/server application. Here are examples for VNC and SSH:

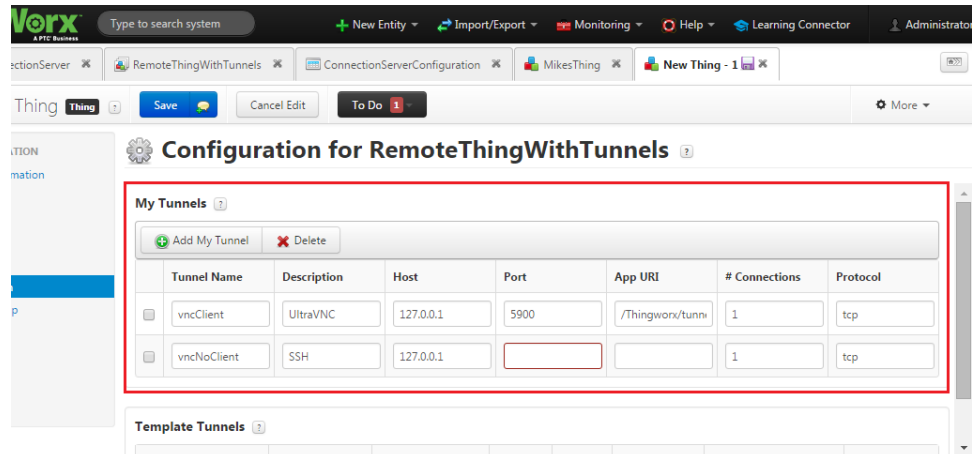

**Tip**

When configuring a mashup for the edge device, you will need to provide the names that you assign to the tunnels. To access the list of tunnel names available on a thing, use the **GetTunnelNames** service.

Configure the **Host** and **Port** fields from the point of view of the *edge device* where the server component of the client/server application is running, not the ThingWorx. For example, when a user wants to access the edge device from VNC Viewer, the user would type the IP address of the device and then the port number 5900. For SSH, you might enter 22 in the field.

By default, the URL is the location of the VNC client application on ThingWorx. If you are using SSH, make sure that supply the port number and then make this field empty.

The values that you see for the **# Connections** and **Protocol** fields are the default values and are the only values that are currently supported.

6. Save the configuration of your new thing.

- 
7. When creating your mashup, add a **Web Socket Tunnel** widget if you are using the built-in VNC viewer (client) that is provided with ThingWorx. At minimum, you need to set the following parameters for the **Web Socket Tunnel** widget:

- **RemoteThingName** — You must supply the name of your thing (**RemoteThingWithTunnels**) that will use this tunnel (for example, the one that was created in Step 2 or earlier).
- **TunnelName** — Enter the name that you assigned to the tunnel for the built-in VNC Viewer in the configuration of the thing.
- **VNCPassword** — Type the password that the VNC Server that is running on the edge device will expect from VNC Viewer.

---

 **Note**

If you do not see this widget, you need to download and import the `WebSocketTunnel_ExtensionPackage.zip` package into ThingWorx (see the [ThingWorx Help Center](#) for your release of ThingWorx, and search for the widget by name).

---

If you are NOT using the built-in VNC Viewer, add a **RemoteAccess** widget. For example, you might use another type of TCP client/server application. For the **RemoteAccess** widget, set the following parameters:


- **RemoteThingName** — You must supply the name of your thing (**RemoteThingWithTunnels**) that will use this tunnel (for example, the one that was created in Step 2 or earlier).
- **TunnelName** — Enter the name that you assigned to the tunnel for the other type of application in the configuration of the thing (for example, PuTTY or another SSH client/server application).
- **ListenPort** — Enter the number of the port that the Java Web Start application will listen on when it starts up. For example, if you want to run an SSH session and the listen port is 9005, you would connect your SSH client to `localhost:9005`.
- **AcceptSelfSignedCerts** — If SSL/TLS is used for this connection and you are testing with a self-signed certificate, select the check box.

For complete information about configuring the **RemoteAccess** widget, refer to the [ThingWorx Help Center](#) for your release of ThingWorx and search for “RemoteAccess widget”.

8. Save your mashup.
9. For WS EMS, tunneling is enabled by default. As long as your WS EMS is running and connected to ThingWorx, you can test your mashup.

### Required Setting for the Tunneling Subsystem

When attempting to configure tunneling, you must check the configuration for the Tunneling Subsystem of the ThingWorx. There is a field where you can specify the host/IP of the end point for the tunnel, called **Public host name used for tunnel**. The following figure shows the configuration page for the Tunneling Subsystem, with this field highlighted:

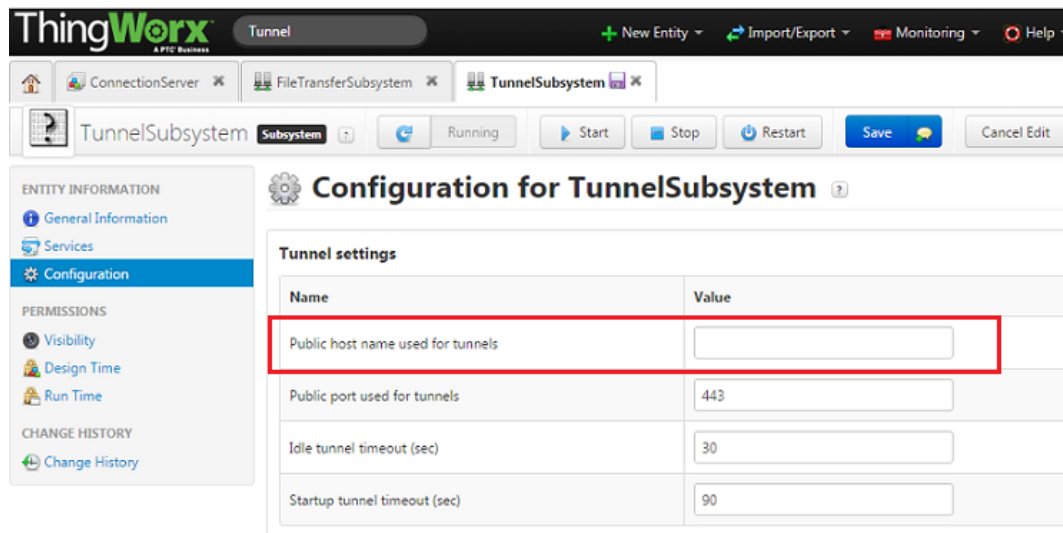

Why do you need to configure this address? Suppose that you start up your server in Amazon EC2. The default IP address for the Tunneling Subsystem when the server is running in EC2 might be 10.128.0.x. Unless you change that address, the Tunneling Subsystem will tell the clients to attempt to connect to that host for the tunnel websocket. Since that IP address is a local network address, the tunnel will not work. Therefore, you must populate that configuration field with the external host/IP address that tunnels will use for connections.

## Example Configurations

This section provides examples of how the WS EMS can be configured for several typical use cases.

---

## Gateway Mode with Self-Identifying Remote Things Example

The WS EMS can be configured to run as a gateway, acting as the communication conduit and providing message relaying services for one or more remote things.

The WS EMS keeps a registry of the remote things it acts as a gateway for. You can set up the remote things to “self-identify” with the WS EMS. That is, when the remote things initialize and connect to the WS EMS, they send the information that uniquely identifies them to the WS EMS. This information is stored in the registry of the WS EMS.

For more information on configuring the `auto_bind` group of the configuration file, refer to the section, [Configuring Automatic Binding for WS EMS on page 42](#) and to the section, [AutoBound Gateways on page 43](#).

The example below illustrates how to configure the WS EMS for this scenario:

```
{
  "ws_servers": [{
    "host" : "acmeServer.mycompany.com",
    "port": 443
  },
  {
    "host" : "fallback_server.somewhere.com",
    "port": 443
  }
]
  "appKey" : "<some_encrypted_application_key>",
  "ws_connection": {
    "encryption" : "ssl"
  },
  "auto-bind": [{
    "name" : "EdgeGateway001",
    "gateway": true
  },
  {
    "name" : "EdgeThing001",
    "host" : "<some_ip_address>",
    "port": 8443
  }
]
}
```

## Gateway Mode with Explicitly-Defined Remote Things Example

Although remote things can be set to identify themselves to the WS EMS, in many cases the remote things that connect to the WS EMS are well-known. In this case, you can explicitly define them within the configuration of the WS EMS.

For more information on configuring the `auto_bind` group of the configuration file, refer to the section, [Configuring Automatic Binding for WS EMS on page 42](#) and to the section, [AutoBound Gateways on page 43](#).

---

The example below illustrates how to configure the WS EMS for this scenario:

---

 **Note**

In the example below, EdgeThing001 is an explicitly defined remote thing that runs at a specified IP Address and listens on port 8001.

---

## Non-Gateway Mode with Self-Identifying Remote Things Example

The WS EMS can be configured to run in non-gateway mode, so things that attach to the WS EMS will pro-actively identify themselves with its process.

The example below illustrates how the WS EMS can be configured for this scenario:

```
{
  "ws_servers": [{
    "host" : "localhost",
    "port" : 443
  }
],
"appKey" : "<some_encrypted_application_key>",

"ws_connection":
  "ssl"          "encryption":
    },
"auto_bind": [{
  "name" : "EdgeThing001",
  "host" : "127.0.0.1",
  "port": 8001
}]
}
```

# 3

## REST APIs and WS EMS

Updating, Deleting, and Executing with REST APIs.....	58
Reading and Writing Properties Using the REST API.....	60
Transferring Files through the REST API.....	61
Configuring WS EMS to Listen on IP Other Than localhost .....	63
REST APIs Supported by WS EMS.....	64

REST (Representational State Transfer) is an important communication tool that provides much of the communication functionality that Web Services are used for, but without many of the complexities. As a result, REST is much easier to work with and can be used by any client that is capable of making an HTTP request.

### Note

The examples in this topic assume that you are familiar with executing HTTP **POST** methods in your web development environment or application.

### URL Pattern

The following URL pattern is used when communicating with ThingWorx:

```
<http|https>://<host>:<port>/Thingworx/<entity collection>/  
<entity>/<characteristic collection>/<characteristic>?<query parameters>
```

You can use this URL pattern when you want to access information that is stored on ThingWorx for a remote device or machine that is running a WS EMS. The pattern to use when you want to access the WS EMS that is running on a remote device or machine is similar:

```
<http|https>://<host>:<port>/Thingworx/<entity collection>/  
<entity>/<characteristic collection>/<characteristic>?<query parameters>
```



---

 **Note**

Anything enclosed in angle brackets (< >) is information that you may need to provide. Some user-supplied information in the URLs above is required, while some is optional. The information that is required depends on the type of request that is being made.

---

### Example

The following API call executes the service **GetLogData** that is associated with the thing called `ACMElocking_valve`.

```
http://localhost/Thingworx/Things/ACMElocking_valve/Services/GetLogData
```

The REST method is GET for this example. To view the returned data in JSON format, select the value `application-json` for the Accept Header in the REST client.

### Built-in Collection Values

ThingWorx has a finite list of entity collections. Each entity collection contains entities (for example, `Things`) of the respective type (for example, `/Things` contains all things). The WS EMS supports the `Things` entity collection and the `Properties` and `ThingName` characteristic collections. It also supports the File Transfer Subsystem and Services that are associated with Things. For more information, refer to the section. [REST APIs Supported by WS EMS on page 64](#).

---

# Updating, Deleting, and Executing with REST APIs

The following rules help to understand what is needed based on the type of request being made.

	Notes	Sample URL	HTTP Action	Content Type
UPDATE	Updates require specifying the entity part (“thing_name” in the sample)	http://host/Thingworx/Things/thing_name/	PUT	application/json or text/xml
DELETE	Deletes require specifying the entity part as well	http://host/Thingworx/Things/thing_name	DELETE	n/a
INVOKING SERVICES	Calling a service requires specifying the complete URL, including the specific characteristic	http://host/Thingworx/Things/MyThing/Services/myService  If your service requires them, these inputs should be passed in the form fields of your POST.	POST	application/json

## Executing HTTP Requests

When executing HTTP requests, use UTF-8 encoding, and specify the optional port value if required.

---

### Best Practice

Use HTTPS in production or any time network integrity is in question.

---

## Handling HTTP Response Codes

In most cases, you should expect to get back either content or the status code of 200, which indicates that the operation was successful. In the case of an error, you receive an error message.

---

## Working with HTTP Content

If you are sending or receiving any HTTP content (JSON, XML, HTML [for responses only]), set the request content-type header to the appropriate value based on the HTTP content you are sending. The following table lists and briefly describes the HTTP methods that are supported:

### Supported HTTP Methods

Use	To
GET	Retrieve a value.
PUT	Write a value or create new things or properties.
POST	Execute a service.
DELETE	Delete a thing or property.

For Content Type	In Accept Header, Use
JSON	application/json
XML	text/xml
HTML	text/html (or omit Accept header)

## Metadata

You can display the metadata of any specific thing, thing template, or data shape you build by going to the following URL in a web browser: *NameoftheThing/Metadata*

---

### Note

To see it, this information must be shown as JSON.

---

## Passing in Authentication with your REST API Call

To authenticate with ThingWorx for a REST API call, use an Application Key that is associated with a user account that has the privileges to perform the actions that you intend to invoke, using the REST APIs. For REST calls to a WS EMS, you do not need authentication

---

### Best Practice

Although you can pass in a User name and Password with your REST call, the recommended best practice is to use an Application Key. Generate the key in ThingWorx Composer, and then pass it with your REST call. The user account associated with the Application Key should have privileges to read/write properties and run services on the related devices/machines in ThingWorx.

---

---

# Reading and Writing Properties Using the REST API

## Reading a Property Value

To read a property from the local WS EMS, you can use a **GET** from the REST client and the following URL:

```
http://localhost:8000/Thingworx/Things/thing_name/Properties/prop_name
```

Notice that you are pointing at the local WS EMS, on port 8000, to retrieve a description. By default, WS EMS listens on port 8000. Also by default, the WS EMS accepts requests only from an application that is running on the same machine as it is (i.e., `localhost`). You can configure a WS EMS to accept requests from other IP addresses.

When you execute this request, the WS EMS pushes it to the ThingWorx server. Keep in mind that the WS EMS has no state. It does not even know that the property exists. It just takes the request URL, breaks it up and repackages it, translates it into the AlwaysOn protocol, and forwards it to . The server responds with its current value for that property. The result type is always of base type `INFOTABLE`, with the property name and current value.



### Tip

To debug a problem with a property not updating or a service not executing, set the `level` and `publish_level` properties (in the `logger` group of the `config.json` file) to `TRACE` and in the `ws_connection` group, set the `verbose` property to `true`. That way, you can see all the activity passing between the WS EMS and the server.

For example, if the response seems to be returned slowly, by logging at the `TRACE` level and setting `verbose` to `true`, you can check the timestamps for the request and response to calculate the actual time. To match a request with a response, locate the `Request ID` of the outgoing message and the `Request ID` included in the incoming response message.

---

## Writing a Property Value

To write a property value to the ThingWorx server through a WS EMS for an edge device managed by a Lua Script Resource, select the **PUT** method in the REST client and use the same URL as a read (**GET**) for the property. For example:

```
http://localhost:8000/Thingworx/things/thing_name/Properties/<prop_name>
```

Then, in the area provided in the client, enter the property name and value, using JSON format:

---

```
{ "<prop_name>" : "Hello World from Thingworx" }
```

It is important to remember that ThingWorx recognizes the **PUT** as coming from the edge device and updates the value for the device. ThingWorx does not attempt to write it to the device.

If you shut down the Lua Script Resource and execute the same **PUT**, the value is written to ThingWorx for the device that is running WS EMS rather than the LSR device. The distinction is between writing the value directly to the ThingWorx as opposed to writing the value through the WS EMS. In both instances you see the value on the ThingWorx.

You also need to set the `Content-type` for a write to the format you are using. In this case, it is `application/json`. If the device for the property is a remote thing, the property is also remote. If that device is not bound, you cannot write the value to the property. If the device is connected through a WS EMS and Lua Script Resource and the WS EMS is running, you can start up the Lua Script Resource that is configured for the remote thing. Once the remote thing is bound, ThingWorx can send the write request to the WS EMS.

Note that the ThingWorx does not change the property value until the request has made the full round trip:

1. A request is sent from a REST client to ThingWorx.
2. ThingWorx recognizes it as a remote property and forwards to the remote thing.
3. If the remote thing is running a WS EMS, the WS EMS sends it to LSR, which writes it internally.

At this point, the in-memory value for ThingWorx is still the old value. The LSR should be set up to send the value back up to ThingWorx.

4. Only after the LSR sends the new value back to ThingWorx does the value change there.

## Transferring Files through the REST API

To prepare for file transfers, set up the WS EMS with virtual directories to send and receive files. If it is not already running, start the LSR for the device so that the virtual thing at the edge is up and running and ThingWorx knows it is connected.

To invoke a file transfer from ThingWorx, use the HTTP POST method and the following URL:

```
http://<server_name>:<port>/Thingworx/Subsystems/FileTransferSubsystem/  
Services/Copy
```

In the area provided in the REST client, enter the parameters for the `Copy` service (in a JSON object), as indicated here:

```
{
```

---

```
"sourceRepo" : "<Enter a Valid Repository">
"sourcePath" : "<Enter a Valid Path">
"sourceFile" : "<Enter a Valid File">
"targetRepo" : "<Enter a Valid Thing">
"targetPath" : "<Enter a Valid Path">
"targetFile" : "<Enter a New Name for the file (optional)>"
}
```

The parameters are broken down by target and source (you can view the parameters by looking at the definition for the Copy service in ThingWorx Composer).

---

 **Note**

Refer to the ThingWorx Help Center for more information about the Copy services, specifically the details concerning what is a valid file repository (that is, which templates support file transfer). This Help Center is available from the [PTC Help Centers](#) page on the PTC Support site.

---

When you run the request, you can see the results (in JSON) format in the REST client. Scroll down until you see the rows of the infotable. The value of the state parameter is "validated" if the file was transferred successfully.

You can also execute a file transfer through the WS EMS, using the same parameters and same POST, with the URL pointed at the local WS EMS:

```
http://localhost:8000/Thingworx/Subsystems/FileTransferSubsystem/
    Services/Copy
```

The headers for the WS EMS differ in that you have only the `content-type` header for the WS EMS. The results are the same (except that the WS EMS puts the rows at the top and the data shape at the bottom).

Why use the WS EMS or an SDK with the REST API instead of just calling ThingWorx REST APIs from an application? There are some benefits to using the WS EMS or an SDK just to interact with ThingWorx, using the REST APIs:

- You can have a secure connection when you use a WS EMS or an SDK to interact with ThingWorx.
- The AlwaysOn protocol persists the connection between an application and ThingWorx.
- When a WS EMS or an SDK makes the REST calls instead of your application, you save a lot in terms of resource usage on ThingWorx. ThingWorx could potentially have to handle hundreds of HTTP requests coming from an application that is running on hundreds of devices, all sending multiple requests. Typically, the most expensive part of HTTP request is opening the socket — all the headers that are sent across the wire and so forth. When you use a WS EMS or SDK, you eliminate the burden on ThingWorx.

---

The WebSocket connection is already set up (and persisted), and the multiple requests for an application are sent over the single WebSocket. In addition, WS EMS and the SDKs send the requests using binary data, which results in more efficient use of bandwidth (in terms of the number of bytes that go across the wire).

- With the WS EMS or an SDK, the step to set up the socket is eliminated. Requests and responses can be exchanged more quickly. Especially if you have multiple applications that are making multiple requests behind a WS EMS, performance improvements are significant when you use the WS EMS to pass REST requests instead of passing them directly to ThingWorx.

## Configuring WS EMS to Listen on IP Other Than localhost

You can configure a WS EMS to listen on a specific IP address or on all IP addresses available on the device, using the `http_server` group of the configuration file. If a device has one network card and it is configured with an IP address of 11.11.11.1, the device effectively has two IP addresses, 11.11.11.1 and 127.0.0.1 (localhost). To configure the specific IP address, set the `host` property, as follows:

```
"http_server" : {
  "host" : "11.11.11.1",
  "port": 9010
}
```

In this configuration, any application must use the specific IP address to access the device. “localhost” does not work.

If a device has two network cards with corresponding IP addresses for the device and you want users to access the device using any of the IP addresses available, use `0.0.0.0` for the host IP address, as follows:

```
"http_server" : {
  "host": "0.0.0.0",
  "port": 9010
}
```

In either configuration, you can leave the port number as is or change it.

It is important to keep in mind that these configurations expose the REST interface to any client on the network that wants to access the WS EMS. To provide secure access, configure a user name and password for the HTTP server as well as SSL, as shown here:

```
"http_server" : {
  "user": "acmeAdmin",
  "password": "AES:EncryptedPassword",
```

```
"ssl": true
}
```

## REST APIs Supported by WS EMS

The WS EMS is built to reflect the REST API of ThingWorx, but it is not a complete reflection. Rather, it is reflection of those APIs that are most useful at the Edge. For example, if you try to look at Resources, nothing is returned. If you try to look at properties for a thing that either is running the WS EMS or that is registered with it (WS EMS is running as a gateway), you can see all the properties. By default, the WS EMS returns data in JSON format.

For example, these APIs do work with a WS EMS:

- `/Thingworx/Things/thing_name/Properties`
- `/Thingworx/Things/thing_name/Properties/prop_name`

where **thing\_name** represents the name of any device that is connected to the local WS EMS where you are using a REST API, and **prop\_name** represents the name of any property for the specified device.

### Browser-based Use of REST APIs

The REST APIs of ThingWorx can be used in a browser or an application that supports the HTTP commands. However, the behavior of the REST APIs on a WS EMS is slightly different.

You cannot use a **PUT** through a query parameter of the REST API in a browser, as on ThingWorx. For example, the following use of **PUT** works on ThingWorx but not on a WS EMS:

```
https://<server_ip>/Thingworx/Things/<thing_name>/Properties/<property_name>/
    method=put&<prop_name>=<value>
```

You actually must do an HTTP **PUT** to the WS EMS, using a REST client that can do an HTTP **PUT**.

Another difference with ThingWorx lies in how a WS EMS returns the information for a specific property. Both ThingWorx and a WS EMS use an infotable to return the information. However, a WS EMS returns the rows first and the data shape second. This order is the opposite from the order in which ThingWorx returns the information.

Similarly, for services, the following use of a service such as **GetDescription** works on ThingWorx but not on a WS EMS:

```
https://<server_ip>/Thingworx/Things/thing_name/Services/GetDescription
```

For WS EMS, you must request to run services by using a **POST** through a client that can do an HTTP **POST**. You could do it this way from a browser, as long as you do not have any input parameters for the service:



---

```
https://localhost:8000/Thingworx/Things/thing_name/Services/  
    GetDescription/method=POST
```

However, if you have parameters, use a client that can do an HTTP **POST**.

Here are a few of the REST APIs of the ThingWorx that do not work with WS EMS:

- **/Thingworx/Things**
- **/Thingworx/Things/thing\_name**
- **/Thingworx/Resources**

By default, a WS EMS uses `application/json` for the `Accept` header.

### Using a REST Client with a WS EMS

You can use a REST client such as Postman to run REST APIs against a WS EMS. You can save them and even set up collections of them. In addition, you can export a collection and import them into a javascript engine such as Node.js.

When you are using REST APIs, it is important to set your headers correctly:

- `Accept` — Specifies the format in which the data should be returned — JSON for WS EMS. For ThingWorx, you can also choose XML or text.
- `Application Key (appKey)` — Provides the authentication you need with ThingWorx. You do not need it when running a REST API against a local WS EMS.

You can also use basic authentication. In Postman, you can select **Basic Authorization** and specify a user name and password to access ThingWorx.

- `x-thingworx-session` — Determines if your request will set up an HTTP session with the ThingWorx. Having a session makes it possible to send multiple requests from a browser to ThingWorx Composer without having to authenticate with each request. When you set up a session, the browser and Composer authenticate each request in the background.

However, in an application, you do not want a session because sessions take up memory. For an application, set this header to `false` so that the ThingWorx does not create a session every time that the application sends a request. Sending the `appKey` with each request does not impact memory.

---

#### **Note**

If you use Basic authentication, you always get a session with the ThingWorx. With an application, use an `appKey` for authentication and set the `x-thingworx-session` header to `false`.

---

---

## Using Services with a WS EMS

The following services work as REST APIs with both ThingWorx and a WS EMS:

- [AddEdgeThing](#) on page 66
- [GetConfiguration](#) on page 67
- [GetEdgeThings](#) on page 67
- [GetLogData](#) on page 68
- [GetMicroserverVersion](#) on page 68
- [HasEdgeThing](#) on page 69
- [RemoveEdgeThing](#) on page 69
- [ReplaceConfiguration](#) on page 70
- [Restart](#) on page 71
- [StartFileLogging](#) on page 71
- [StopFileLogging](#) on page 72
- [TestPort](#) on page 73
- [UpdateConfiguration](#) on page 73

The WS EMS also supports using the `isConnected` property with a REST API.

The rest of this section provides details about these services.

## AddEdgeThing

The **AddEdgeThing** service adds an edge device to the devices that are currently connected to the WS EMS.

### Inputs

Pass in `TW_INFOTABLE` that has one row and two columns. The row object must contain the following parameters:

- The name of the device (thing) that you want to add. Keep in mind that the device must exist on ThingWorx as a thing that was created with the **RemoteThing** thing template. For example: `{"name": "NameOfThing"}`
- `persist`, which specifies whether the device should be added to the list of devices that are automatically bound to the corresponding thing on ThingWorx. The format for this parameter is `"persist": true | false`.

### Outputs

This service returns an HTTP response only. If the operation was successful, it returns HTTP 200. Otherwise, it returns an HTTP error.

---

## Example

Here is an example of a REST call that adds an Edge thing:

```
http://localhost:8000/Thingworx/Things/LocalEms/Services/  
  AddEdgeThing{"name" : "acmeEdgeThing1"}"persist":true
```

## GetConfiguration

The **GetConfiguration** service retrieves the configuration that the WS EMS is currently using

---

### Note

This service does not return the current `config.json` file. Rather it returns the configuration that is currently loaded into the WS EMS. For example, if you call **UpdateConfiguration** but do not restart the WS EMS, the **GetConfiguration** service returns the configuration parameters and their values that the WS EMS is using, not the `config.json` file. You do not see the changes that were passed in with **UpdateConfiguration**.

---

### Inputs

This service does not take any input parameters.

### Outputs

This service returns a `TW_INFOTABLE` that contains a json object. The object contains the configuration parameter/value pairs that are currently loaded in the WS EMS.

### Example

Here is an example of a REST call that retrieves the configuration of a WS EMS:

```
http://localhost:8000/Thingworx/Things/LocalEms/Services/GetConfiguration
```

## GetEdgeThings

The **GetEdgeThings** service returns a list of edge things that are registered with the WS EMS gateway.

### Inputs

The name of the WS EMS gateway.

---

## Outputs

This service returns a `TW_INFOTABLE` that contains the names of the Edge things that are registered with the WS EMS gateway.

## Example

Here is an example of the REST call that retrieves the names of the Edge things that are registered with the WS EMS gateway:

```
http://localhost:8000/Thingworx/Things/LocalEms/Services/GetEdgeThings
```

## GetLogData

The **GetLogData** service retrieves the log entries from the WS EMS.

## Inputs

Pass in a `TW_INFOTABLE` that contains one row and three columns. The row object must contain the following parameters;

- `startDate` - The oldest log entry to retrieve (as a `DATETIME`).
- `endDate` - The newest log entry to retrieve (as a `DATETIME`).
- `maxItems` - Max number of entries to retrieve (as an `INTEGER`).

## Outputs

This service returns a `TW_INFOTABLE` that contains the log entries. (The related data shape is `logEntry`.)

## Example

Here is an example of a REST call that retrieves log entries for a WS EMS:

```
http://localhost:8000/Thingworx/Things/LocalEms/Services/  
  GetLogData{"startDate":"080115", "endDate":"081515", "maxItems":50}
```

## GetMicroserverVersion

The **GetMicroserverVersion** service returns the version of the WS EMS.

## Inputs

None

## Outputs

This service returns a string that contains the version of the WS EMS. For example, `5.4.0`

---

## Example

Here is an example of a REST call that retrieves the version of a WS EMS:

```
http://localhost:8000/Thingworx/Things/LocalEms/Services/GetMicroserverVersion
```

## HasEdgeThing

The **HasEdgeThing** service checks whether a certain thing is connected to the WS EMS.

### Inputs

You can pass in raw JSON or an infotable that contains the name of the thing whose connection you want to check:

- `TW_INFOTABLE`, that contains the name of the thing to check. The infotable can be passed in as raw json. For example, `{"name": "ThingName"}`

### Outputs

- `TW_INFOTABLE`, which contains the result, as `TW_BOOLEAN`. Returns `true` if the specified thing is connected, `false` otherwise.

## Example

Here is an example of a REST call that determines if a specified edge thing is connected to a WS EMS:

```
http://localhost:8000/Thingworx/Things/LocalEms/Services/  
HasEdgeThing{"name": "acmeEdgeThing1"}
```

## RemoveEdgeThing

The **RemoveEdgeThing** service removes the specified device from the set of devices that are connected to the WS EMS. In addition, it removes the device from the list of devices that should bind automatically when the WS EMS contacts ThingWorx.

---

## Inputs

You pass in an infotable that contains the name of the thing that you want to remove from the WS EMS:

- `TW_INFOTABLE`, that contains the name of the thing to remove. The infotable can be passed in as raw json. For example, `{"name" : "ThingName"}`

---

### Note

If the removal is permanent, make sure that you also delete the thing on ThingWorx side.

---

## Outputs

This service returns an HTTP response only. If the operation was successful, it returns HTTP 200. Otherwise, it returns an HTTP error.

## Example

Here is an example of a REST call that deletes an Edge thing from the list of devices that should bind automatically when the WS EMS contacts ThingWorx:

```
http://localhost:8000/Thingworx/Things/LocalEms/Services/  
RemoveEdgeThing{"name" : "acmeEdgeThing1"}
```

## ReplaceConfiguration

The **ReplaceConfiguration** service allows you to replace the configuration file for the WS EMS (`config.json`).

---

### Tip

The new configuration file does not take effect until you restart the WS EMS. Use the [Restart on page 71](#) service to force the changes to take effect.

---

---

## Inputs

Pass in a `TW_INFOTABLE` that contains a JSON object. This object must contain

- `"config"` — A JSON string that is used to replace the current configuration file.

## Outputs

This service returns an HTTP response only. If the operation was successful, it returns HTTP 200. Otherwise, it returns an HTTP error.

## Example

Here is an example of a REST call that replaces the configuration of a WS EMS that is running on your computer, using this service:

```
http://localhost:8000/Thingworx/Things/LocalEms/Services/  
  ReplaceConfiguration{"ws_servers":{"host":newServer.acme.com",  
    "port":80,appKey="<encrypted_application_key>"}  
    "certificates":{"disableCertValidation":true}}
```

## Restart

The **Restart** service restarts the WS EMS.

## Inputs

Pass in the following parameter:

- The name of the device (thing) that you want to restart. For example:  
 `{"name": "NameOfThing" }`

## Outputs

This service returns an HTTP response only. If the operation was successful, it returns HTTP 200. Otherwise, it returns an HTTP error.

## Example

Here is an example of a REST call that restarts the WS EMS:

```
http://localhost:8000/Thingworx/Things/LocalEms/Services/Restart
```

## StartFileLogging

The **StartFileLogging** service tells the WS EMS to begin writing log messages to a file. The WS EMS generates log messages at the level defined by a call to this service.

---

## Inputs

You pass in `TW_INFOTABLE` that has one row and two columns. The row object must contain the following parameters:

- The level of the log messages to write to a file. Choose among the following levels: TRACE, DEBUG, WARN, INFO, or AUDIT, where TRACE provides the most information.
- `directory`, which specifies the path to the file on the computer where WS EMS is running. Use the following format: `/twx/wsems/logfiles/directory`.



### Note

The TRACE level is useful when testing and troubleshooting. It provides both the operational and functional log messages for a WS EMS.

---

## Outputs

This service returns an HTTP response only. If the operation was successful, it returns HTTP 200. Otherwise, it returns an HTTP error.

## Example

Here is an example of a REST call that tells a WS EMS to start logging messages that it generates to a file, with the log level set to TRACE:

```
http://localhost:8000/Thingworx/Things/LocalEms/Services/  
  StartFileLogging{"level":"TRACE","directory":"./ws_ems/logfiles"}
```

## StopFileLogging

The **StopFileLogging** service tells the WS EMS to stop writing log messages to a file.

## Inputs

You pass in the following parameter:

- `"delete" : true | false`. Set to `true` to stop the logging to a file, or `false` to continue logging to a file.

## Outputs

This service returns an HTTP response only. If the operation was successful, it returns HTTP 200. Otherwise, it returns an HTTP error.



---

## Example

Here is an example of a REST call that tells a WS EMS to stop logging messages that it generates to a file and to delete the existing log file:

```
http://localhost:8000/Thingworx/Things/LocalEms/Services/StopFileLogging&delete=true
```

## TestPort

The **TestPort** service tests the connection to a specified ThingWorx and port.

### Inputs

Pass in the following parameters:

- `host` - The URL of the ThingWorx instance to connect to (as a `STRING`)
- `port` - The number of the port to connect to (as an `INTEGER`)

### Outputs

This service returns a `true` if the connection is successful, or `false` if it cannot connect.

## Example

Here is an example of a REST call that tests a port:

```
http://localhost:8000/Thingworx/Things/LocalEms/Services/  
TestPort&host="myThingworxServer.acme.com",port=443
```

## UpdateConfiguration

The **UpdateConfiguration** service of the WS EMS allows you to change or replace its configuration file (`config.json`).

---

### Tip

The changes or new configuration file that you pass in do not take effect until you restart the WS EMS. Use the [Restart on page 71](#) service to force the changes to take effect.

---

---

## Inputs

Pass in a `TW_INFOTABLE` that contains a JSON object. This object must contain

- `"config"` — A JSON string that is used to update or replace the current configuration file.
- `"replace"` — A Boolean that determines whether to update the current `config.json` file or to delete it entirely and replace it with the JSON string specified with the `"config"` parameter.

## Outputs

This service returns an HTTP response only. If the operation was successful, it returns HTTP 200. Otherwise, it returns an HTTP error.

## Example

Here is an example of a REST call that updates the configuration of a WS EMS running on your computer, using this service:

```
http://localhost:8000/Thingworx/Things/LocalEms/Services/  
UpdateConfiguration&"config":"config.json"/"replace":true
```

# 4

## Working with the Lua Script Resource

Getting Started with the Lua Script Resource.....	76
Installing the Lua Script Resource Distribution .....	76
Running the Lua Script Resource .....	79
Configuration of the Lua Script Resource .....	80

This section provides information on how to work with the Lua Script Resource, which is used to implement things at the edge device level.

---

## Getting Started with the Lua Script Resource

This section describes how to get started working with the Lua Script Resource by providing an overview of how to install the distribution.

From here, you need to do the following:

- Create a Lua Script Resource configuration file to set logging preferences, define Edge things that will run in the Lua Script Resource environment, define any extensions, etc. For more information, see [Lua Script Resource Configuration File on page 80](#).
- Create a Lua Script Resource Template File to define properties, services, and tasks for Edge things. For more information, see [Lua Script Resource Configuration on page 89](#).
- Run the Lua Script Resource. For more information, see [Running the Lua Script Resource on page 79](#).

## Installing the Lua Script Resource Distribution

The Lua Script Resource is included in the ThingWorx WS EMS distribution, which is available from PTC and is distributed as a simple .zip file.

---

### Note

If the WS EMS and the Lua Script Resource are to exist on the same Edge device, you can skip this section as the Lua Script Resource was installed as part of [Downloading and Installing ThingWorx WS EMS on page 13](#).

---

If you do not know how to access the PTC Support site, Software Downloads page, see [Downloading and Installing ThingWorx WS EMS on page 13](#). The installation instructions are the same for the Lua Script Resource as the WS EMS.

Install the distribution on an edge device as follows:

1. Choose and download the distribution bundles that is correct for the operating system, SSL/TLS implementation, and platform that you plan to use for the LSR. Note that the packages fall into two categories, those that contain the OpenSSL libraries and those that contain the axTLS library. The following packages for Linux and Windows contain OpenSSL libraries, as indicated by the `openssl` in the name of the file:
  - `microserver-linux-arm-hwfp-openssl-version.zip`
  - `microserver-linux-arm-openssl-version.zip`

- `microserver-linux-x86_32-openssl-version.zip`
- `microserver-linux-x86_64-openssl-version.zip`
- `microserver-windows-x86_32-openssl-version.zip`

 **Note**


Only the packages with `openssl` in their file name support FIPS. If you try to enable FIPS using the packages with `axtls` in their file name, the WS EMS will not start.



The following packages for Linux and Windows contain axTLS library, as indicated by the “axtls” in the name of the package file:

- `microserver-linux-arm-hwfp-axtls-version.zip`
  - `microserver-linux-arm-axtls-version.zip`
  - `microserver-linux-x86_32-axtls-version.zip`
  - `microserver-linux-x86_64-axtls-version.zip`
  - `microserver-windows-x86_32-axtls-version.zip`
2. Following download, select a location for the distribution on the file system of the edge device.
  3. Unzip the distribution bundle.

## WS EMS Distribution Contents

When unzipped, the ThingWorx WS EMS distribution creates the folder, `\microserver`, which contains the following files and subdirectories:

Item	Description
<b>Files</b>	
<code>wsems.exe</code>	The WS EMS executable that is used to run the Edge MicroServer.   <b>Note</b>  Linux users must be granted permissions to this file.  If you require FIPS support on the supported Windows platforms (win32), make sure you have the FIPS package, which contains the <code>ws-ems-fips.exe</code> file.
<code>libeay32.dll</code> and <code>ssleay32.dll</code>	OpenSSL Shared Library DLLs (dynamic linked libraries)..
<code>luaScriptResource.exe</code>	The Lua utility that is used to run Lua scripts, configure remote things, and

Item	Description
<b>Files</b>	
	<p>integrate with the host system..</p> <p> <b>Note</b></p> <p>Linux users must be granted permissions to this file.</p> <p>If you require FIPS support on supported Windows platforms (win32), make sure you have the FIPS package, which contains the file, <code>luaScriptResource-fips.exe</code>, instead.</p>
<b>Subdirectories</b>	
<code>\doc</code>	Directory that contains the release notes (PDF) and the document, <i>ThingWorx WebSocket-based Edge MicroServer (WS EMS) Developer's Guide</i> for this release (also a PDF). Also contains the top-level files for the luadoc that provides assistance with the Lua Script Resource.
<code>\doc\lua</code>	Subdirectory that contains the luadoc for the Lua Script Resource.
<code>\etc</code>	Directory that contains configuration files and directories for the luaScriptResource utility.
<code>\etc config.json.docu mented</code>	<p>A REFERENCE file that contains all of the configuration options available for the WS EMS plus comments to guide you through the options.</p> <p> <b>Caution</b></p> <p>Do not attempt to use <code>config.json.documented</code> to run your WS EMS. It is intended as a reference. It is NOT as a valid JSON file that you can use to run WS EMS</p>
<code>\etc config.json.com plete</code>	A valid JSON file that contains all the configuration options available for the WS EMS.
<code>\etc config.json.minimal</code>	A reference file that contains the basic settings that are required to establish a connection.
<code>\etc config.lua.example</code>	A reference file that contains a basic configuration for the luaScriptResource utility. A <code>config.lua</code> file is required to run the Lua engine.
<code>\etc\community</code>	Directory from which third-party Lua libraries are deployed. Examples of these libraries include the Lua socket library and the Lua XML parser, .
<code>\etc\custom</code>	Directory that will contain your custom scripts and templates.
<code>\etc\custom\scripts</code>	Directory from which custom integration scripts are deployed. It also contains an example script, called <code>sample.lua</code> .
<code>\etc\custom\ templates</code>	Directory that contains an example template, called <code>example.lua</code> , and that is used to deploy custom templates.
<code>\etc\thingworx</code>	Directory that contains ThingWorx-specific Lua files that are used by the Lua Script Resource (LSR). Do not modify this directory and its contents because an upgrade will overwrite any changes.
<code>\install_services</code>	Directory that contains the <code>install.bat</code> file for Windows bundles or the following files for Linux bundles: <code>install</code> , <code>tw_luaScriptResourced</code> , and <code>tw_microserverd</code> .

---

## Running the Lua Script Resource

The Lua Script Resource can be run either from a command line or as a service to host things on the remote device.

### Running from a Command Line

To run the Lua Script Resource from a command line, follow these steps:

1. Open a command window or terminal session on the system or device that is hosting the Lua Script Resource.
2. Change to the `\microServer\etc\` directory.
3. Copy and rename the `config.lua.example` file to `config.lua`.
4. Configure the file as necessary. See [Lua Script Resource Configuration File on page 80](#).
5. Change directories back to the to the top level `\microserver` directory.
6. Enter the `luaScriptResource` command to run the Lua Script Resource executable. To include a specific configuration file, use a command similar to the following:

```
luaScriptResource -cfg .\etc\config.lua
```

---

#### Note

If no configuration file is specified, the default file, `etc\config.lua`, is used.

---

This command causes the Lua Script Resource to start listening on port 8001, if the default values are used.

7. To access the interface of the extension, open a browser and enter the following address to see a list of executing scripts:

```
http://localhost:8001/scripts
```

8. Should you need to shut down the Lua Script Resource, press ENTER to display the console prompt and type `q`.

### Running as a Service

To run the Lua Script Resource as a Windows service, follow these steps:

1. Open a command window or terminal session on the system or device that is hosting the Lua Script Resource.
2. Change to the `\microServer\etc` directory.
3. Copy and rename the `config.lua.example` file to `config.lua`.

- 
- Configure the file as necessary. See [Lua Script Resource Configuration File on page 80](#).
  - Run the following command:

```
C:\microserver\luaScriptResource.exe -cfg "C:\microserver\etc\config.lua"  
-i "ThingWorx Script Resource"
```

Where:

cfg	Specifies the full path to the location of the configuration file.
i	Specifies the name to be used for the installed service.

---

 **Note**

Run the `luaScriptResource` executable and the reference to the configuration file using the full path (even if it is running from the folder where the `luaScriptResource.exe` file is located).

Due to space constraints, the command shown above has the second argument/value pair on a second line. Do NOT just copy and paste this command without removing the extra line break and spaces.

---

- Should you need to uninstall the service, run the following command:

```
C:\microserver\luaScriptResource -u "ThingWorx Script Resource"
```

Where:

u	Specifies the name of the service to be un-installed. This name must exactly match the name that you assigned to the Lua Script Resource service.
---	---

## Configuration of the Lua Script Resource

This section describes how to configure the Lua Script Resource.

### Configuring a Lua Script Resource

When creating a Lua Script Resource (LSR), you create a configuration file, using the name, `config.lua`. This configuration file should be modeled after the example, `config.lua.example`. Your configuration file should be a text file that is separated into groups, with a group that sets logging levels, another one that configures edge things to run in the scripting environment, and a final one that defines any Lua Script extensions that are to be used by the Lua Script Resource.



---

To view this example of an LSR configuration file:

1. Open a command window or terminal session on the system or device that is hosting the Lua Script Resource.
2. Change into the `\microserver\etc` directory.
3. Open `config.lua.example`. Use this example as a reference while reading about the various groups of the configuration file.

The example file shows the main sections for configuring a Lua Script Resource. Follow the links below to read more about the properties of the configuration file:

- [Logging on page 81](#)
- [HTTP Server Configuration on page 83 \(SSL/TLS certificates\)](#)
- [Configuring the Connection to the WS EMS on page 85](#)
- [Edge Thing on page 86](#)

## Configuring the Logger for the LSR



As of version 5.4.0, the Lua Script Resource provides the same logging configuration properties as the WS EMS.

The `scripts.log_level` group (see the `config.lua` example configuration file) is used to configure the Lua Script Resource to collect logging information.

```
scripts.log_level = "INFO"
scripts.log_audit_target = "file:// or http://"
scripts.log_publish_directory = "/_tw_logs/"
scripts.log_publish_level = "WARN"
scripts.log_max_file_storage = "2000000"
scripts.log_auto_flush = "true"
scripts.log_flush_chunk_size = "16384"
scripts.log_buffer_size = "4096"
```

## Logging Properties

The following table lists and describes the properties of the `logger` element:

Property	Description
<code>scripts.log_level</code>	<p>The level of information that you want to include in the audit log file.</p> <p>Valid values include:</p> <ul style="list-style-type: none"><li>• FORCE</li><li>• ERROR</li><li>• WARN</li><li>• INFO (the default value)</li><li>• DEBUG</li><li>• TRACE</li></ul> <p> <b>Tip</b></p> <p>When troubleshooting a problem, set the <code>level</code> to <code>TRACE</code> so that you can see all the activity. For production, set the <code>level</code> to <code>ERROR</code> if you want to see error messages.</p>
<code>scripts.log_audit_target</code>	<p>The path to the audit log file where audit events will be written. Alternatively, specify an HTTP address for the audit log file, where these events will be sent using a POST command.</p> <p>Audit events are also written to the normal log destination . If no target is specified, no additional auditing takes place.</p> <p>Valid values include:</p> <ul style="list-style-type: none"><li>• <code>file://path_to_file</code></li><li>• <code>http://hosted_location</code></li></ul>
<code>scripts.log_publish_directory</code>	<p>A location for writing to log files those log events that meet or exceed the <code>publish_level</code>.</p> <p> <b>Caution</b></p> <p>The LSR and WS EMS use the same naming scheme for log files. Specify a directory that is different from the one specified in the <code>publish_directory</code> property in the <code>config.json</code> file of the WS EMS.</p>
<code>scripts.log_publish_level</code>	<p>The level of information that you want to include in the alternate log files. Valid values include:</p> <ul style="list-style-type: none"><li>• AUDIT</li><li>• ERROR</li><li>• WARN</li><li>• INFO</li><li>• DEBUG</li><li>• TRACE</li></ul>

Property	Description
<code>scripts.log_max_file_storage</code>	The maximum amount of space that log files can take up, in bytes. Keep in mind that there are two concurrent log files. The maximum size of each individual log file is <code>max_file_storage</code> divided by 2. The default value is 2000000 bytes (2MB).
<code>scripts.log_auto_flush</code>	Whether the LSR should flush every N bytes to the <code>publish_directory</code> . The N is defined by <code>flush_chunk_size</code> . The LSR also flushes the buffer if a message has not been written to the log in the last second.  A setting of <code>true</code> forces the LSR to flush every N bytes.
<code>scripts.log_flush_chunk_size</code>	The number of bytes to write before flushing to disk. The default setting is 16384 bytes.
<code>scripts.log_buffer_size</code>	The maximum number of bytes that can be printed in a single logging message. The default setting is 4096 bytes.

## Configuring the HTTP Server (SSL/TLS Certificate)

Suppose you want to set up a Lua Script Resource on a device that is external to the WS EMS. To prevent external sources from sniffing packets on your network, it is strongly recommended that you enable SSL/TLS on the HTTP servers on both the WS EMS and the Lua Script Resource. You can also require a user name and password for both HTTP server to ensure that only authenticated applications can access the LSR model and WS EMS communication channels.

### Best Practice

Always configure a secure HTTP server. Otherwise, the WS EMS and LSR will log warning messages when any one or more of the following conditions is true:

- SSL is disabled. That is, the `ssl` property is set to `false`
- Authentication is disabled.
- Certificate validation is disabled.
- Self-signed certificates are allowed.

For examples of secure configurations for communications between the WS EMS and the LSR, see [Setting Up Secure Communications for WS EMS and LSR on page 97](#). These examples are presented in order of least secure (testing purposes ONLY) to most secure (strongly recommended for production environments).

As of release 5.4.0 of the WS EMS, the Lua Script Resource (LSR) is configured to secure HTTP connections by default.

To load a PEM-encoded certificate for use by the LSR's HTTP server when TLS is enabled, you need to configure the following properties in your `config.lua` file:

```
-- HTTP Server Configuration
--
scripts.script_resource_host = "localhost"
scripts.script_resource_port = "8001"
scripts.script_resource_ssl = "true"
scripts.script_resource_certificate = "/path/to/certificate/file"

scripts.script_resource_private_key = "/path/to/private/key"
scripts.script_resource_passphrase = "password"
scripts.script_resource_authenticate = "true"
scripts.script_resource_userid = "johnsmith"
scripts.script_resource_password = "AES:EncryptedPassword"
scripts.script_resource_use_default_certificate = "true"
```

The port number is 8001 by default. You can choose whatever port is available for the HTTP server of the LSR.

The following table lists and briefly describes the properties for the HTTP Server of the LSR:

Property	Description
<code>scripts.script_resource_host</code>	The host name or IP address of the machine where the LSR is running. The default value is "localhost"
<code>scripts.script_resource_port</code>	The number of the port used on the host for communicating with the WS EMS. The default value is "8001". Choose whichever port is available on the device for the HTTP Server of the LSR.
<code>scripts.script_resource_ssl</code>	Whether to use SSL/TLS for communication (Boolean). The default value is "true"
<code>scripts.script_resource_certificate_chain</code>	The path to the PEM-encoded certificate file. Use forward slashes when specifying the path, regardless of the operating system of the device.
<code>scripts.script_resource_private_key</code>	The path to the private key for the certificate. Use forward slashes when specifying the path, regardless of the operating system of the device..
<code>scripts.script_resource_passphrase</code>	The passphrase for the private key and certificate. Enclose the string in double quotation marks.
<code>scripts.script_resource_authenticate</code>	Whether to authenticate the sender of an incoming request (Boolean). The default value is "true".
<code>scripts.script_resource_userid</code>	The user name that will be presented for authentication when attempting to access the LSR..
<code>scripts.script_resource_password</code>	The AES encrypted password that the user should present when attempting to access the LSR.
<code>scripts.script_resource_use_default_certificate</code>	Flag that enables or disables the use of the embedded default certificate/private key. The default value is <code>true</code> , which means that its use is enabled.

---

## Configuring the Connection to the WS EMS

The sample configuration file, `config.lua.example`, for the Lua Script Resource (LSR) shows the properties to set for the connection between the LSR and the WS EMS. You should add these properties to your `config.lua` file:

```
scripts.rap_host = "<IP_address_for_WS_EMS>"
scripts.rap_port = "<port_number_for_WS_EMS>"
scripts.rap_ssl = true
scripts.rap_userid = "<user_ID_for_WS_EMS_HTTP_Server>"
scripts.rap_password = "<AESEncryptedPassword>"
scripts.rap_server_authenticate = true
scripts.fips_enabled = false
scripts.rap_cert_file = "<path_to_CA_certificate_file>"
scripts.rap_validate = true
scripts.rap_deny_selfsigned = true
```

---

### Tip

For examples of secure configurations for communications between the WS EMS and the LSR, see [Setting Up Secure Communications for WS EMS and LSR on page 97](#). These examples are presented in order of least secure (testing purposes ONLY) to most secure (strongly recommended for production environments).

Wherever you see `rap` in the `config.lua` file, the property is referring to the WS EMS.

---

The following table lists and briefly describes the properties:

Property	Description
<code>scripts.rap_host</code>	The host name or IP address of the machine that is running the WS EMS.
<code>scripts.rap_port</code>	The port on which the WS EMS listens for connections from LSR clients.
<code>scripts.rap_ssl</code>	Whether to enable the use of SSL/TLS for the connection to the WS EMS. By default the value of this property is <code>true</code> .
<code>scripts.rap_userid</code>	The user id to present to the HTTP Server of the WS EMS for authentication.
<code>scripts.rap_password</code>	The password for that user, AES encrypted.
<code>scripts.rap_server_authenticate</code>	Whether to require authentication

Property	Description
<code>scripts.fips_enabled</code>	If <code>ssl</code> is <code>true</code> , whether FIPS is also used for the connection. The default value is <code>false</code> . Note that if you want to use FIPS, make sure that you download the WS EMS distribution package that has <code>fips</code> in its name.
<code>scripts.rap_cert_file</code>	The path to the CA certificate on the machine that is running the LSR.
<code>scripts.rap_validate</code>	Whether to enable certificate validation when the LSR communicates with the WS EMS. The default value is <code>true</code> .
<code>scripts.rap_deny_selfsigned</code>	When certificate validation is enabled and the LSR initiates communication to the WS EMS, this property is checked. If the value of this property is <code>true</code> and the WS EMS is using a self-signed certificate (such as the default one shipped with the WS EMS), the LSR will refuse to connect and log an error. The default value of this property is <code>true</code> .

## Configuring Edge Things

The `EdgeThing` group is used to configure an Edge thing to run in the Lua Script Resource environment. Of all the parameters that can be included in the `EdgeThing` group of the configuration file, only the `file` and `template` parameters are required. All other parameters are optional and can be included anywhere between the curly braces `{}`.

### Note

The entry that defines the `thing.lua` Edge thing must exist in the configuration file. You can define additional Edge things with their own `EdgeThing` statements.

```
scripts.EdgeThing = {
  file = "thing.lua",
  template = "example",
}
```

## Parameters

The EdgeThing group contains the following parameters:

Use	To
file	Define an Edge thing. This parameter is required.
template	Specify the template file associated with the Edge thing. The template file defines the behavior of the Edge thing. This parameter is required.  The template file must be placed in the \microserver\etc\custom\templates folder.
scanrate	Specify how frequently to evaluate the properties and possibly push them to ThingWorx, in milliseconds. The default value is 60000 milliseconds.
taskrate	Specify how frequently to execute the tasks that are defined in the template of the edge thing, in milliseconds. The default value is 15000 milliseconds.
scanRateResolution	Specify how long the main execution thread for this edge thing pauses between iterations, in milliseconds. Each iteration checks the scan rate and task rate to determine if any properties are to be evaluated, or any tasks are to be executed. The value must be less than the scan rate or task rate. The default is 500 milliseconds. See also <a href="#">Configuring the scanRateResolution on page 88</a> .
register	Specify whether or not the Edge thing registers with the WS EMS. The default value is true (recommended).
keepAliveRate	Specify how frequently this edge thing should renew its registration with the WS EMS, in milliseconds.  If the WS EMS is restarted, this parameter controls the maximum amount of time before this edge thing is re-registered.  This value also controls how frequently the WS EMS performs a keep-alive check on the Lua Script Resource. If the Lua Script Resource is unavailable, the registered thing is unbound from ThingWorx and appears to be offline.  The default value is 60000 milliseconds.
requestTimeout	Specify the amount of time to wait for a response to an HTTP request to the WS EMS before timing out.
maxConcurrentPropertyUpdates	Specify the maximum number of properties that can be included in a single property update call to ThingWorx. This value can be decreased if the overall size of the batch property pushes is larger than what is supported by the WS EMS. The default value is 100 properties.
getpropertiesubscriptionsOnReconnect	Specify whether or not the edge thing re-requests its property subscriptions when it reconnects to the WS EMS. This value is useful if the Lua Script Resource is running on a different edge device from the WS EMS. The default value is true.
identifier	Specify the identifier used to register the edge thing with the WS EMS and ThingWorx.
useShapes	Specify whether or not to use data shapes for property definitions. The default value is true.

---

## Configuring the scanRateResolution

The `scanRateResolution` setting controls the frequency at which the main loop of a script for a thing executes in the LSR. Once it is started, a script enters into a loop that executes until the script resource is shut down. Each iteration of this main loop takes a number of actions, potentially increasing CPU usage.

At a high level, a script takes the following actions:

1. Goes through all your configured properties. If the `scanRate` amount of time for each property has expired, the property is evaluated to see if it should be pushed. To evaluate the property, the LSR calls the `read` method of the property handler for each property. The new value is compared to the old (if necessary). If it needs to be pushed to the server, the property and its value are added to a temporary list of properties to be pushed.
2. The temporary list of properties is pushed to the server. If no properties have been evaluated, or no properties need to be pushed, this list is empty and nothing is pushed.
3. The registration of the thing with the WS EMS is checked, using a call to the WS EMS.
4. If the `taskRate` time has expired, configured tasks are executed.
5. GC (garbage collection) is run if five seconds or more have elapsed.
6. The thread then sleeps for the number of milliseconds specified in the `scanRateResolution` parameter.

If you do not need the main loop to drive calls to the handlers that read your properties, you could set your `scanRateResolution` fairly high. A high setting would cause the main loop to sleep longer between iterations, which could have a few side effects:

1. The registration check will happen at the `scanRateResolution`, unless you adjust the `keepAliveRate` to be greater than the `scanRateResolution`.
2. You will need to set your `taskRate` and `scanRate` parameters to be greater than the `scanRateResolution`, or the script resource will complain during startup. Since it controls the pause of the main loop, the `scanRateResolution` is the main limiting factor in how often the main loop actions occur.
3. Shutting down the script resource can be delayed by up to the number of milliseconds specified for the `scanRateResolution` parameter, since the main loop must exit for the script to shut down.

The default value for the `scanRateResolution` is 500 milliseconds. If however, you do not require the loop to execute that often, consider setting this value much higher, even 10,000 milliseconds or more, to slow the execution of the loop and save CPU load.



---

## Template Configuration for the Lua Script Resource

The template file is a text file that is separated into groups. Each group is used to define the overall behavior, properties, services, and tasks for edge things that reference the template file. Template files must be placed in the `\microserver\etc\custom\templates` folder.

To view an example of a template file:


1. Open a command window or terminal session on the system or device that is hosting the Lua Script Resource.
2. Change into the directory, `\microserver\etc\custom\templates`.
3. Open the file, `example.lua`. Use this example as a reference while reading about the various groups of the template file.

### Including a Data Shape

The `require` statement pulls the functionality of a data shape into the template. A data shape can define properties, services, and tasks. If a template defines a property, service, or task that has the same name as one defined in the shape file, the definition in the shape file is ignored. Be careful that you do not have duplicate names for these characteristics.

```
require "yourshape"
```

The following table describes the `require` parameter:

Use	To
<code>require</code>	<p>Specify the name of the shape file that contains the properties, services, and task definitions that are to be added to the template file configuration.</p> <p>The shape file must be located in the directory, <code>\microserver\etc\custom\shapes</code>.</p> <p> <b>Note</b></p> <p>If you intend to use file transfer with this edge device, you must include the following statement:</p> <pre>require "thingworx.shapes.filetransfer"</pre>

### Configuring the Module Statement

The `module` statement is required. This statement tells the software component of the edge device to operate according to the configuration instructions contained in the template file that you specify.

```
module ("templates.example", thingworx.template.extend)
```

The following table describes the two parts of the `module` statement:

Part	Description
Name of template file	The first part of the <code>module</code> statement must contain the name of the template file that contains the configuration for the software component of the Edge device. For example, <code>template.acmedevice</code> .
Extension of the ThingWorx template	The second part of the module statement, <code>thingworx.template.extend</code> , identifies the file as a template file to the system and extends the base ThingWorx template implementation. Do not modify this part of the statement.

## Configuring Data Shapes

The `dataShapes` group is used to define data shapes that describe the structure of an infotable.

Data shapes that are declared can be used as input or output for services. In addition, you can use data shapes to generate strongly typed data structures.

Each data shape is defined using a series of tables, with each table representing a field within the data shape. These fields must have a name and base type, but may also include other parameters. For example:

```
dataShapes.MeterReading(
  { name = "Temp", baseType = "INTEGER" },
  { name = "Amps", baseType = "NUMBER" },
  { name = "Status", baseType = "STRING", aspects = {defaultValue="Unknown"} },
  { name = "Readout", baseType = "TEXT" },
  { name = "Location", baseType = "LOCATION" }
```

The following table lists and describes these parameters:

Parameter	Description
<code>dataShape.nameOfDataShape</code>	Declares a data shape.
<code>name</code>	Required. Specify the name of a field in the data shape.
<code>baseType</code>	Required. Specify the ThingWorx base type of the field in the data shape. For a list of the ThingWorx base types, refer to <a href="#">ThingWorx Base Types on page 110</a> .
<code>description</code>	Provides a description of the data shape.
<code>ordinal</code>	Specify the order.
<code>aspects</code>	Specify a table that can provide additional information, such as a default value, or a data shape if the base type of the field is <code>INFOTABLE</code> .

---

## Defining Properties

The `properties` group is used to define the properties associated with an Edge thing. While remote data properties can be read on demand, you can also define data push rules so that the data does not have to be polled by ThingWorx from the edge device.

A property is defined by specifying a name, `baseType`, `pushType`, the threshold for determining a data change push to ThingWorx, and any other necessary parameters.

---

### Note


When these properties are bound at ThingWorx, it respects the template settings. However, if changes to the push and cache settings are made at ThingWorx, those settings override the local template settings.

---

```
properties.IParametersnMemory_Imagelink = { baseType="IMAGELINK", pushType="NEVER",
                                             value="http://www.thingworx.com" }
properties.InMemory_InfoTable = { baseType="INFOTABLE", pushType="NEVER",
                                   dataShape="AllPropertyBaseTypes" }
properties.InMemory_Integer = { baseType="INTEGER", pushType="NEVER", value=1 }
properties.InMemory_Json = { baseType="JSON", pushType="NEVER", value="{}" }
properties.InMemory_Large_String = { baseType="STRING", pushType="NEVER",
                                     value=string.rep("Lorem ipsum dolorsi ", 15000) .. "the end" }
properties.InMemory_Location = { baseType="LOCATION", pushType="NEVER",
                                 value = { latitude=40.03, longitude=-75.62, elevation=103 }, pushType="NEVER" }
```

The following table lists and describes the parameters for defining properties:

Use	To
<code>properties.nameOfProperty</code>	Declare a property.
<code>baseType</code>	Required. Specify the base type of the property.
<code>dataChangeType</code>	Provide a default value for the Data Change Type field of the property definition on ThingWorx, if the property is initially created using the Manage Bindings feature of ThingWorx Composer. Valid values include: <ul style="list-style-type: none"><li>• ALWAYS</li><li>• VALUE</li><li>• ON</li><li>• OFF</li><li>• NEVER</li></ul>
<code>dataChangeThreshold</code>	Provide a default value for the Data Change Threshold field of the property definition on ThingWorx, if the property is initially created using the Manage Bindings feature of ThingWorx Composer.
<code>pushType</code>	Specify whether the property should push new values upon change to ThingWorx. Valid values include:

Use	To
	<ul style="list-style-type: none"> <li>• ALWAYS</li> <li>• VALUE</li> <li>• NEVER</li> </ul> <p>The default is NEVER.</p> <p>A <code>pushType</code> of NEVER does not push data ThingWorx, so when a property with <code>pushType=NEVER</code> is queried on ThingWorx, the ThingWorx queries the software of the edge device for the data value.</p> <p>A <code>pushType</code> of ALWAYS pushes the data every time the property is read at the edge device, which is determined by the <code>scanRate</code> parameter. If the <code>scanRate</code> is not set on the property, the <code>scanRate</code> from the Lua Script Resource configuration file is used. If not defined in either location, a default of 60000 milliseconds (1 minute) is used. The Edge device pushes all properties that have a <code>pushType</code> of ALWAYS and the same scan rate in one call, rather than make individual calls per property.</p> <p>For NUMBER or INTEGER property types, a <code>pushType</code> of VALUE pushes data to ThingWorx only when the data value change exceeds the <code>DataChangeThreshold</code> setting.</p>
<code>pushThreshold</code>	For properties with a <code>baseType</code> of NUMBER, and a <code>pushType</code> of VALUE. specify how much a property value must change before the new value is pushed ThingWorx.
<code>handler</code>	<p>Specify the name of the handler to use for property reads/writes. Valid values include:</p> <ul style="list-style-type: none"> <li>• <code>script</code></li> <li>• <code>inmemory</code></li> <li>• <code>http</code></li> <li>• <code>https</code></li> <li>• <code>generator</code></li> </ul> <p>The default handler is <code>inmemory</code>. The <code>script</code>, <code>http</code>, and <code>https</code> handlers use the <code>key</code> field to determine the endpoint where their read/writes are to be executed.</p> <p> <b>Note</b></p> <p>Custom handlers can specify other property attributes. When a handler is used to read or write a property, the entire property table is passed to the handler.</p>
<code>key</code>	Define a key that the handler can use to look up or set the value of the property. In the case of a <code>script</code> handler, this key is a URL path. For <code>http</code> or <code>https</code> handlers, this key should be a

Use	To
	<p>URL and not the protocol.</p> <p>This parameter is not required for <code>inmemory</code> or <code>nil</code> handlers.</p>
<code>value</code>	Specify the default value of the property. The value is updated as the value changes on the Edge device. The default value is 0.
<code>time</code>	<p>Specify the last time the value of the property was updated, in milliseconds since the beginning of the epoch.</p> <p>When things are created from this template, the current time is set automatically, unless a default value is provided in the definition of the property.</p>
<code>quality</code>	Specify the quality of the value of the property. A default value should be provided for the quality. Otherwise, the value defaults to <code>GOOD</code> for properties without a handler, and <code>UNKNOWN</code> for properties with a handler.
<code>scanRate</code>	<p>Specify the frequency of checking the property for a change event, in milliseconds. The default value is 5000 milliseconds (every 5 seconds).</p> <p>If you do not define a <code>scanRate</code>, the <code>scanRate</code> in the Lua Script Resource configuration file is used. Defining the <code>scanRate</code> within the property overrides the <code>scanRate</code> setting in the configuration file. See also <a href="#">Configuring the scanRateResolution on page 88</a>.</p>
<code>cacheTime</code>	<p>Initialize the cache time of the value for the property at the ThingWorx. The default value is -1 if the <code>dataChangeType</code> is <code>NEVER</code>, and is 0 when <code>dataChangeType</code> is <code>ALWAYS</code> or <code>VALUE</code>.</p> <p>If a value that is greater than 0 is specified, it is used by ThingWorx as the initial value for the cache time, and is applied only when using the browse functionality of ThingWorx Composer to bind the property.</p>

## Defining Services

The `serviceDefinition` group is used to provide metadata for a service that is used when browsing services from ThingWorx.

A service definition is a separate entry in the template file from the actual implementation of the service. The name of the service definition must match the name of the service it is defining in order for the service to work as expected.

```
serviceDefinitions.Add(
    input { name="p1", baseType="NUMBER", description="The first addend of the operation" },
    input { name="p2", baseType="NUMBER", description="The second addend of the operation" },
    output { baseType="NUMBER", description="The sum of the two parameters" },
    description { "Add two numbers" }
```

```

)

serviceDefinitions.Subtract(
    input { name="p1", baseType="NUMBER", description="The number to subtract from" },
    input { name="p2", baseType="NUMBER", description="The number to subtract from p1" },
    output { baseType="NUMBER", description="The difference of the two parameters" },
    description { "Subtract one number from another" }
)

```

## Parameters

The following table lists and describes the parameters that you can use to define services:

Use	To
<code>serviceDefinition.nameOfService</code>	Declare a Service Definition.
<code>input</code>	Describe an input parameter to the service that is referenced within the data table that is passed to the service at runtime. Valid values include: <ul style="list-style-type: none"> <li><code>name</code> — The name of the input parameter.</li> <li><code>baseType</code> — The type of input parameter used by the service.</li> <li><code>description</code> — A description of the input parameter.</li> </ul>
<code>output</code>	Describes the output produced by the service. Valid values include: <ul style="list-style-type: none"> <li><code>baseType</code> — The type of output that the service produces.</li> <li><code>description</code> — A description of the output that the service produces.</li> </ul>
<code>description</code>	Provide information about the purpose and operation of the service.

## Implementing Services Using the Lua Script Engine

Use the `services` group to implement the services that you declared when defining services.

Once a service has been defined, you can implement custom logic for the service, using the Lua Script engine. To speed implementation, you can use the add-ons of the Lua community and ThingWorx-specific APIs. The APIs are included in the WS EMS distribution to facilitate the development of custom scripts.

Services are defined as Lua functions that can be executed remotely from ThingWorx, and must provide a valid response in their return statement. For example:

```

services.Add = function(me, headers, query, data)
    if not data.p1 or not data.p2 then
        return 400, "You must provide the parameters p1 and p2"
    end
end

```

```

    return 200, data.p1 + data.p2
end

services.Subtract = function(me, headers, query, data)
    if not data.p1 or not data.p2 then
        return 400, "You must provide the parameters p1 and p2"
    end
    return 200, data.p1 - data.p2
end

```

## Parameters

The following table lists and describes the parameters that you can use to define a service:

Use	To
<code>services.nameOfService</code>	Implement a service. The name must match the name that is specified for the service in the service definition.
<code>me</code>	Create a table that refers to the thing.
<code>headers</code>	Create a table of HTTP headers.
<code>query</code>	Specify the query parameters from the HTTP request.
<code>data</code>	Create a Lua table that contains the parameters of the service call.

A service function must return the following values, in the following order:

1. An HTTP return code (200 for success).
2. A table of HTTP response headers that should contain a valid Content-Type header, typically with a value of `application/json`.
3. (Optional) A default table can easily be generated by calling `tw_utils.RESP_HEADERS()`.
4. The response data, in the form of a JSON string. This data can be generated from a Lua table using `json.encode`, or `tw_utils.encodeData()`.

## Configuring Tasks

Use the `task` group to define Lua functions that are executed periodically by the Lua Script Resource (LSR), such as background tasks, resource monitoring, event firing, and so on. These tasks allow you to introduce any customized functionality that you may need. You should follow the general pattern shown in the sample below:

```

tasks.Compare = function(me)
    -- Do task
end

```

---

The following table lists and describes the parameters that you can use to configure tasks:

<b>Use</b>	<b>To</b>
<code>task.nameOfTask</code>	Implement a task that is scheduled in the Lua Script Resource to run periodically.
<code>me</code>	Create a table that refers to the thing.
<code>end</code>	Define the end of the Lua function that defines the task.



# A

## Setting Up Secure Communications for WS EMS and LSR

Security Concepts .....	98
Insecure Configuration — for Testing ONLY .....	99
Minimal Security .....	100
Basic Security .....	101
Medium Security .....	102
High Security .....	104

This section provides example security configurations for the WS EMS and LSR, from least secure (for testing purposes ONLY) to most secure (strongly recommended for production environments). Included are examples of the following:

- Configuring a custom certificate/private key for the WS EMS/LSR HTTP server
- Configuring a certificate chain when using a certificate issued by a Certificate Authority (CA)
- Configuring a Certificate Authority list to use when validating
- Configuring authorization for communication between the WS EMS and LSR

---

## Security Concepts

This section provides an overview of security-related concepts and configuration options in the WS EMS and LSR.

### Authorization

By default, the WS EMS and LSR accept a REST request from any device on the local area network that can communicate with it. While useful for development and testing, this default behavior could pose a security concern if deployed to production. It is strongly recommended that authorization be enabled and a user name and password be configured. This configuration will prevent any devices that do not know the user name and password from making requests.

### SSL/TLS

The WS EMS and LSR can be configured to use SSL/TLS when acting as a client and communicating with a ThingWorx host, and also when acting as a server and accepting requests from clients at the edge. SSL/TLS provides critical security protections:

- Privacy — Data cannot be seen during transmission.
- Integrity — Data cannot be altered during transmission.
- Trust — The identity of the server can be validated.

It is strongly recommended that production environments use SSL/TLS for secure communications.

### Custom Certificate / Key

The HTTP servers of the WS EMS and LSR can be configured to use a custom certificate, which allows you to better customize the identity of the WS EMS and LSR to edge devices. This configuration can provide an additional level of security that an edge device is communicating with a trusted WS EMS/LSR.

### Default Certificate

The WS EMS and LSR ship with a default HTTP server certificate that you can use during development if you do not have or wish to use a custom certificate. It is always strongly recommended that a custom certificate be used in production environments.

### Trusted Certificate Authority List

The WS EMS and LSR can load a list of trusted Certificate Authorities (CA's). By default, the WS EMS and LSR communicate only with a server that has a certificate signed by a CA that is included in the list.

---

## Validation and Self-Signed Certificates

By default, when the EMS or LSR make an HTTP request, they first attempt to validate the identity of the server against a list of Certificate Authorities in the file that is specified in the configuration file. If this file does not exist or otherwise cannot be loaded, the request will fail. If you experience problems related to validation (such as handshake errors), you can disable validation *for testing purposes*. If you are using a self-signed certificate, make sure that you allow self-signed certificates in the configuration files of both the WS EMS and LSR. Otherwise, validation will fail.

## Password Security

Whenever a password is required for WS EMS or LSR, such as when you are using authorization or a custom HTTP server certificate, the password should be saved in the configuration file in an encrypted form. The WS EMS can be used to generate an AES-encrypted representation of a password, using the `-encrypt` command-line argument, `encrypt`. For example, if your password is `MyPassword`, you would run the following command to generate the encrypted representation:

```
> wsems.exe -encrypt MyPassword
#####
Encrypted String
AES:wPUJ0SYov0r6yH+BDMbeMA==
#####
```

You would then use `AES:wPUJ0SYov0r6yH+BDMbeMA==` as the password value in your configuration file.

The following topics provide example configurations at different levels of security:

- [Insecure Configuring — for Testing Only on page 99](#)
- [Minimal Security on page 100](#)
- [Basic Security on page 101](#)
- [Medium Security on page 102](#)
- [High Security on page 104](#)

## Insecure Configuration — for Testing ONLY

This configuration disables all secure communication and authorization settings. All communication will be transmitted in clear text, and the WS EMS and LSR can be accessed by anyone. This configuration should be used for testing purposes ONLY.

## Insecure Configuration

WS EMS — config.json	LSR — config.lua
<pre>"http_server": {   "host": "localhost",   "port": 8000,   "ssl": false,   "authenticate": false }, "certificates": {   "validate": false,   "allow_self_signed": true }</pre>	<pre>-- EMS Connection Configuration scripts.rap_host = "localhost" scripts.rap_port = 8000  -- EMS Connection TLS Configuration scripts.rap_ssl = false  -- EMS Connection Authentication -- Configuration scripts.rap_server_authenticate = false  -- HTTP Server Configuration scripts.script_resource_host = localhost" scripts.script_resource_port = 8001  -- HTTP Server TLS Configuration scripts.script_resource_ssl = false  -- HTTP Server Authentication -- Configuration scripts.script_resource_authenticate = false</pre>

## Minimal Security

The following examples provide a minimally secure configuration. All communication between the WS EMS and the LSR are encrypted, but anyone can access them. This configuration uses the built-in certificate and private key provided in the distribution. To fit the lines of configuration properties and parameters within the page, the lines have been broken up. If you copy/paste them, be sure to adjust the broken lines accordingly. For example, in the config.lua example for the use\_default\_certificate parameter, the line has been broken up.

## Minimally Secure Configuration with Default Certificate / Key

WS EMS — config.json	LSR — config.lua
<pre>"http_server": {   "host": "localhost",   "port": 8000,   "ssl": true,   "authenticate": false,   "use_default_certificate" : true }, "certificates": {   "validate": false,   "allow_self_signed": true }</pre>	<pre>-- EMS Connection Configuration scripts.rap_host = "localhost" scripts.rap_port = 8000  -- EMS Connection TLS Configuration scripts.rap_ssl = true scripts.rap_deny_selfsigned = false scripts.rap_validate = false  -- EMS Connection Authentication -- Configuration scripts.rap_server_authenticate = false  -- HTTP Server Configuration scripts.script_resource_host = "localhost" scripts.script_resource_port = 8001  -- HTTP Server TLS Configuration scripts.script_resource_ssl = true scripts.script_resource_use_   default_certificate = true  -- HTTP Server Authentication -- Configuration scripts.script_resource_authenticate = false</pre>

## Basic Security

The following examples provide a basic secure configuration. All communications between the WS EMS and LSR are encrypted and require basic authentication to be accessed. These configurations use the built-in certificate and private key. To fit the lines of configuration on the page, the lines have been broken up. If you copy/paste the lines, make sure that you adjust the line breaks accordingly. For example, the line containing the `use_default_certificate` property in the `config.json` example has been broken with a CR and extra spaces. You need to remove that line break and extra spaces after pasting it in your configuration file.,

## Basic, Secure Configuration with Authentication and Default Certificate / Key

### WS EMS — config.json

```
"http_server": {
  "host": "localhost",
  "port": 8000,
  "ssl": true,
  "authenticate": true,
  "user": "emsuser",
  "password": "pword123",
  "use_default_certificate" : true
},
"certificates": {
  "validate": false,
  "allow_self_signed": true
}
```

### LSR — config.lua

```
-- EMS Connection Configuration
scripts.rap_host = "localhost"
scripts.rap_port = 8000

-- EMS Connection TLS Configuration
scripts.rap_ssl = true
scripts.rap_deny_selfsigned = false
scripts.rap_validate = false

-- EMS Connection Authentication
-- Configuration
scripts.rap_server_authenticate = true
scripts.rap_userid = "emsuser"
scripts.rap_password = "password123"

-- HTTP Server Configuration
scripts.script_resource_host = "localhost"
scripts.script_resource_port = 8001

-- HTTP Server TLS Configuration
scripts.script_resource_ssl = true
scripts.script_resource_use_
  default_certificate = true

-- HTTP Server Authentication
-- Configuration
scripts.script_resource_authenticate = true
scripts.script_resource_userid = "luauser"
scripts.script_resource_password = "password123"
```

## Medium Security

The following examples provide a medium level of security. All communication between the WS EMS and LSR are encrypted and require basic authentication to be accessed. The examples use a custom certificate and private key. The custom certificate will be validated against a custom CA list. Note that this configuration allows self-signed certificates, which is strongly discouraged for a production environment.

To fit the lines of configuration on the page, the lines have been broken up. If you copy/paste the lines, make sure that you adjust the line breaks accordingly. For example, the line containing the `cert_chain` property in the `config.json` example has been broken with a CR and extra spaces. You need to remove that line break and extra spaces after pasting it in your configuration file.,

## Security Configuration with Authentication, Validation, and Custom Self-Signed Certificate / Key

WS EMS — config.json	LSR — config.lua
<pre>"http_server": {   "host": "localhost",   "port": 8000,   "ssl": true,   "certificate": "/ path/to/   certificate/file.pem",   "private_key": "/path/to/   private/key.pem",   "passphrase": "pword123",   "authenticate": true,   "user": "emsuser",   "password": "pword123" }, "certificates": {   "validate": true,   "allow_self_signed": true,   "cert_chain" : "/path/to/   ca/cert/list.pem" } }</pre>	<pre>-- EMS Connection Configuration scripts.rap_host = "localhost" scripts.rap_port = 8000  -- EMS Connection TLS Configuration scripts.rap_ssl = true scripts.rap_deny_selfsigned = false scripts.rap_validate = true scripts.rap_cert_file =   "/path/to/ca/cert/list.pem"  -- EMS Connection Authentication -- Configuration scripts.rap_server_authenticate = true scripts.rap_userid = "emsuser" scripts.rap_password = "pword123"  -- HTTP Server Configuration scripts.script_resource_host = "localhost" scripts.script_resource_port = 8001  -- HTTP Server TLS Configuration scripts.script_resource_ssl = true scripts.script_resource_certificate_chain =   "/path/to/web/server/certificate.pem" scripts.script_resource_private_key =   "/path/to/web/server/private/key.pem" scripts.script_resource_passphrase = "pword123"  -- HTTP Server Authentication -- Configuration scripts.script_resource_authenticate = true scripts.script_resource_userid = "luauser" scripts.script_resource_password = "pword123"</pre>

---

## High Security

The following examples provide a high level of security. All communication between the WS EMS and LSR are encrypted and require basic authentication to be accessed. The examples use a custom certificate and private key. The certificate is validated against a custom CA list. This configuration disallows self-signed certificates. This configuration is the recommended configuration for all production systems.



## Highly Secure Configuration: Authentication, Validation, and Custom Certificate / Key

### WS EMS — config.json

```
"http_server": {
  "host": "localhost",
  "port": 8000,
  "ssl": true,
  "certificate":
    "/path/to/cert/file.pem",
  "private_key":
    "/path/to/private/key.pem",
  "passphrase": "pword123",
  "authenticate": true,
  "user": "emsuser",
  "password": "pword123"
},
"certificates": {
  "validate": true,
  "allow_self_signed": false,
  "cert_chain" :
    "/path/to/ca/cert/list.pem"
}
```

### LSR — config.lua

```
-- EMS Connection Configuration
scripts.rap_host = "localhost"
scripts.rap_port = 8000

-- EMS Connection TLS Configuration
scripts.rap_ssl = true
scripts.rap_deny_selfsigned = true
scripts.rap_validate = true
scripts.rap_cert_file =
  "/path/to/ca/cert/list.pem"

-- EMS Connection Authentication
-- Configuration
scripts.rap_server_authenticate = true
scripts.rap_userid = "emsuser"
scripts.rap_password = "pword123"

-- HTTP Server Configuration
scripts.script_resource_host = "localhost"
scripts.script_resource_port = 8001

-- HTTP Server TLS Configuration
scripts.script_resource_ssl = true
scripts.script_resource_certificate_chain =
  "/path/to/web/server/certificate.pem"
scripts.script_resource_private_key =
  "/path/to/web/server/private/key.pem"
scripts.script_resource_passphrase = "pword123"

-- HTTP Server Authentication
-- Configuration
scripts.script_resource_authenticate = true
scripts.script_resource_userid = "luauser"
scripts.script_resource_password = "pword123"
```

---

# B

## Troubleshooting the WS EMS and the LSR

Troubleshooting the WS EMS.....	107
Running on a Windows-based Operating System .....	107
Troubleshooting the Lua Script Resource .....	108

## Troubleshooting the WS EMS

This section discusses issues that can arise when using the WS EMS, along with recommended solutions.

Problem	Possible Solution
The WS EMS connects, but reports a time-out error when trying to authenticate.	Verify that you are running the required version of Tomcat. Refer to the <i>ThingWorx Edge Requirements and Compatibility Matrix</i> , which is available from the <a href="#">Reference Documentation page on the PTC Support site</a> ,
The WS EMS is failing to connect to my local server.	If your server is not configured to use HTTPS, set the <code>encryption</code> option of the WS EMS option to <code>none</code> . Before deployment, set the option back to <code>ssl</code> .
I've started the WS EMS, made changes to <code>config.json</code> , but these changes are not reflected when I restart the WS EMS.	There is likely a syntax error (such as an extra comma, or similar) in your <code>config.json</code> . If the WS EMS is unable to start with the current <code>config.json</code> , it will use the last known good configuration file ( <code>config.json_booted</code> ).  To verify that the problem is in <code>config.json</code> , delete the <code>config.json_booted</code> file and restart the WS EMS. If it fails to start, check the <code>config.json</code> for errors.
The WS EMS connects to ThingWorx, authenticates successfully, but the thing I specified in the "auto_bind" group of my configuration file is not being created on ThingWorx.	The "auto_bind" group is an array of objects. Verify that you've enclosed the JSON object that represents your thing in square brackets as follows: <pre>"auto_bind": [{     "name": "RemoteThing001",     "gateway": true }]</pre> Instead of this, which would lead to this thing not being created on the Core instance: <pre>"auto_bind": {     "name" : "RemoteThing001",     "gateway": true }</pre>

## Running on a Windows-based Operating System

When running the WS EMS on Windows-based operating systems, it is possible for the Windows OS to have a tick resolution that is higher than the tick resolution requested by WS EMS. For example, the default Windows tick resolution is 15ms and the default tick resolution for WS EMS is 5ms. In this scenario WS EMS executes only at the limit interval of 15ms instead of the requested 5ms interval. To achieve the best performance, it is recommended that the Windows tick

resolution be changed, using the Windows API functions, to one half of the maximum sampling rate (Nyquist Sampling). Note that some systems will experience high CPU load due to the increased tick timer.

## Troubleshooting the Lua Script Resource

The following table discusses issues that can arise when using the Lua Script Resource, along with recommended solutions.

Problem	Possible Solution
I have a tunnel configured on my thing (created using the <b>RemoteThing</b> thing template) on ThingWorx, but it is not working.	Verify that the Public Host and Public Port settings of the Tunnel Subsystem's Configuration are set to the externally available host name/IP and port.
The thing that I have configured in <code>config.lua</code> cannot communicate with my thing on ThingWorx.	Verify that the name of the thing in your <code>config.lua</code> matches the name of the thing on ThingWorx. You can also specify an identifier, if using matching names is a problem. See the "Configuring the WS EMS for File Transfer" section in <a href="#">WSEMS Example Configurations on page 53</a> .
The WS EMS connects to ThingWorx, authenticates successfully, but the thing that I specified in the <code>auto_bind</code> group of my <code>config.lua</code> file is not being created on ThingWorx.	<p>The <code>auto_bind</code> group is an array of objects. Verify that you enclosed the JSON object that represents your thing in square brackets as follows:</p> <pre>"auto_bind": [{   "name": "RemoteThing001",   "gateway": true }]</pre> <p>vs. the following, which leads to this scenario:</p> <pre>"auto_bind": { "name": "RemoteThing001", "gateway": true }</pre> <p>For more information about the <code>auto_bind</code> group and setting the gateway parameter, refer to <a href="#">Configuring Automatic Binding for WS EMS on page 42</a> and to <a href="#">Auto-bound Gateways on page 43</a></p>

# C

## Base Types


ThingWorx Base Types .....	110
----------------------------	-----

Different operating systems and hardware have their own data types. For example an `int` could be 16 bits or 32 bits on different hardware. To standardize data types across hardware, ThingWorx and the ThingWorx Edge products use their own base types and *Primitives*. These types are portable. This section provides a table of the ThingWorx base types.

# ThingWorx Base Types

The following table lists and briefly describes the ThingWorx Base Types:

## ThingWorx Base Types

Type Name	Description
BASETYPE_NAME	A valid name of a Base Type.
BOOLEAN	True or false values only
BLOB	A Binary Large Object.
DASHBOARDNAME	The name of a dashboard.
DATASHAPE_NAME	A reference to a data shape in a model, and therefore has special handling.
DATETIME	Date and time value
GROUPNAME	ThingWorx Group Name
GUID	Globally Unique Identifier.   <b>Note</b>  If using GUID as the Base Type, it is recommended to set the GUID value. Do not leave blank (default).
HTML	HTML value
HYPERLINK	Hyperlink value
IMAGE	Image Value
IMAGELINK	Image link value
INFOTABLE	ThingWorx data structure used to define the results of a service or a set of properties for a thing
INTEGER	32-bit integer value
JSON	JSON structure
LOCATION	ThingWorx Location structure
LONG	The LONG type should be used when a range longer than the INTEGER base type provides is required.
MASHUPNAME	ThingWorx Mashup name
MENUNAME	ThingWorx Menu name
NOTHING	No type (used for services to define void result)
NUMBER	Double-precision value
PASSWORD	A masked password value.
QUERY	ThingWorx Query structure
SCHEDULE	A CRON-based schedule (in ThingWorx Composer, can be configured using the Schedule Editor).
STRING	Any amount of alphanumeric characters.
TAGs	ThingWorx tag values.
TEXT	Any amount of alphanumeric characters. The difference with strings is that TEXT is indexed.
THINGCODE	A numerical representation of a thing containing a DomainID and InstanceID. For example: 2:1.
THINGNAME	A reference to a thing and therefore has special handling.
THINGSHAPE_NAME	A reference to a thing shape in the model, and therefore has special

---

### ThingWorx Base Types (continued)

Type Name	Description
	handling.
THINGTEMPLATENAME	The name of a thing template.
USERNAME	A reference to a ThingWorx user defined in the system.
VEC2	A collection of two numbers. For example, 2D coordinates, x and y.
VEC3	A collection of three numbers. For example, 3D coordinates, x, y, and z.
VEC4	A collection of four numbers. For example, 4D coordinates, x, y, z, and w.
XML	An XML snippet or document.

---

# D

## Remote Things

About Remote Things .....	113
Configuring Remote Things.....	113
Configuring Properties for Remote Things .....	114
Configuring Services for Remote Things .....	114

This section explains what remote things are, briefly describes some of the templates available in ThingWorx Composer for remote things, and provides information about configuring them and their properties and services.



---

## About Remote Things

A remote thing is a device or data source whose location is at a distance from the location of ThingWorx. A remote thing accesses the ThingWorx, and can itself be accessed, over the network (Intranet/Internet/WAN/LAN). The device is represented on ThingWorx by a thing that is created using the **RemoteThing** template, or one of the derivatives of that template (for example, **RemoteThingWithFileTransfer**).

The default thing templates that you can use to create things for remote devices follow:

- **RemoteThing** — A basic thing that provides the ability to interact with a remote device.
- **RemoteThingWithFileTransfer** — A remote thing that can also transfer files.
- **RemoteThingWithTunnels** — A remote thing that supports tunneling.
- **RemoteThingWithTunnelsAndFileTransfer** — A remote thing that supports both file transfers and tunneling.
- **RemoteDatabase** — A remote OLE-DB data source
- **EMSGateway** — Addresses the WS EMS as a standalone thing. This template may be useful in situations where the WS EMS is running on a gateway computer and is handling communication for one or more remote things, which may reside on different IP addresses within a local area network
- **SDKGateway** — Similar to the **EMSGateway** template, but used when you are using an SDK implementation as a gateway.

Use the **RemoteThing**, **RemoteThingWithFileTransfer**, **RemoteThingWithTunnels**, and **RemoteThingWithTunnelsAndFileTransfer** templates for vendor-specific devices. The recommended approach is to use one of these templates to create a thing for your vendor-specific device, and when you have added the properties, services, and events for the thing, save it as your own template. That way, you can add more of the same devices quickly and easily by using your template as the base.

## Configuring Remote Things

You can configure local properties and services for a remote thing. *Local properties* are properties similar to any other entity in the system. They are defined as local, they can be set through standard interfaces, they can be bound to other properties, but they are not directly bound to a data point from a remote device or data store. Local Services are services that execute on the server - although they may interact with data from remote data sources.

A *remote property* is a property that is directly connected to a remote data point or data object. It is read from the remote data, depending on the cache and push rules you define. Please refer to the section, [Configuring Properties for Remote Things on page 114](#), for more details. Remote services are similar to remote properties.

---

A *remote service* is a reference to business logic running on the edge. When you call a remote service on ThingWorx, it relays that request to the bound edge service, and returns the result from the edge business logic. Please see the section, [Configuring Services for Remote Things on page 114](#), for more information.

## Configuring Properties for Remote Things

It is possible to browse the configuration of a remote thing and "mass" bind its remote properties. The ability to bind the properties of a remote device all at once allows you to fully configure the remote thing on the server, alleviating much of the manual configuration.

1. In ThingWorx Composer, on the **Properties** tab of the remote thing, click **Manage Bindings**.
2. In the **Manage Property Bindings** dialog box, click the **Remote** tab.
3. You will see a list of the properties of the remote device on the left. You can drag them individually (to the **Drag HERE to create new properties area**) or click **Add All**.
4. You can then individually edit the property details to suit your needs. You can also bind the remote properties to properties that you have already defined on ThingWorx. To bind remote properties to existing properties on ThingWorx, drag a remote property onto an existing ThingWorx property. When you bind properties from the edge, the cache and push settings from the edge are set based on the configuration settings of the edge device. You can choose to override them by changing the settings at ThingWorx.

You can also manually create the properties by using the standard property configuration dialog box.

## Configuring Services for Remote Things

There are two types of services for remote things, as follows:

- **Local (JavaScript)** - JavaScript business logic executing on the server.
- **Remote** - a direct call to a remote service on a remote thing (such as a custom-defined Lua script).

### Remote Services and Binding

When you define a remote service, you are defining the metadata for the service so that it can be properly consumed from the server. The definition includes the service name at the server, the description, remote service name, and the inputs and outputs of the service. This will bind the service to the remote service, and the remote service is executed when the service runs. From a Mashup or REST API perspective, it will appear the same as a local service.

---

When the WSEMS opens a connection to ThingWorx, it goes through a three step process:

1. **Initiation:** This establishes the physical WebSocket connection and prepares it to handle inbound and outbound messages.
2. **Authentication:** The WS EMS can authenticate using an application key. All communication that is passed over the connection from the WS EMS to ThingWorx will run under the security context of this application key. After authentication is complete applications can use the REST interface of WS EMS to interact with ThingWorx.
3. **Binding:** After authentication, remote things on ThingWorx can bind to the connection of the WS EMS. Binding is the process that notifies ThingWorx that a particular remote thing is associated with an established connection. After a thing is bound to a connection, ThingWorx will indicate a change in the value of its **isConnected** property to true and update its **lastConnection** property. ThingWorx can send outbound requests to thing.

You can also directly browse and bind to remote services if the remote thing is running and is connected. Click **Browse Remote Services** to view the services that are currently defined for the remote thing. You can then add them to the local service definitions through the drag and drop interface (similar to how you bind remote data properties).

The process of registering a thing with the WS EMS also causes the thing to bind. The de-registering of a thing causes it to unbind.

